

# **CMSV6 vehicle tracking and monitoring operation platform**

## **User Manual**

**Version: 7.12**

Status of the file	Project name	<b>CMSV6</b>	Date of completion	<b>Mar. 23, 2018</b>
<input type="checkbox"/> Draft	File name	<b>Use manual for customers</b>	Security classification	<b>Middle</b>
<input checked="" type="checkbox"/> Released officially	Version	<b>7.12</b>		
<input type="checkbox"/> Being amended	Page	<b>199</b>		

## **Statement**

The content described in the manual may be different from the version you use now. If you encounter the problem failing to be solved at the time of using the manual, please contact with technical support department of the company or the product supplier. The content of the manual will be updated irregularly and the company has reserved the right of no further notice given.

The company won't take any responsibility for inaccurate or omissive content in the file, especially any responsibility, loss or risk directly or indirectly incurred by usage or application of any content in the file (regardless of the individual or other aspects). The manual may contain screen capture and report instance used in the daily operation as well as individual and company name mentioned in the instance fall into fictional content. In case of name or address of company or individual in the reality echoing what others have said, pure coincidence happens.

# Contents

User Manual .....	1
I. Preparation purpose .....	8
II. Platform introduction .....	8
III. Server deployment and management .....	9
3.1 Operating environment .....	9
3.1.1 Basic requirements of the server .....	9
3.1.2 Streaming media server .....	10
3.1.3 Examples of the system deployment .....	10
3.2 Guidance regarding software installation .....	12
3.3 Server management .....	22
3.3.1 Software registration .....	22
3.3.2 Database configuration .....	23
3.3.3 DIY .....	26
3.3.4 Configuration of the network address .....	<b>Błąd! Nie zdefiniowano zakładki.</b>
3.3.5 Historical backup .....	29
3.3.6 Data migration .....	29
3.3.7 WEB Port Configuration .....	31
3.3.8 Automatic maintenance .....	32
IV. Direction for use of WEB client side .....	35
4.1 Login interface and operation interface .....	35
4.1.1 Login interface .....	35
4.1.2 Operating interface .....	35
4.2 Operations management .....	36
4.2.1 Composition of operation and management .....	36
4.2.2 Increasing vehicles rapidly .....	36
4.2.3 Information management .....	39
4.3 Position orientation .....	51
4.3.1 Electronic map monitoring .....	51
4.3.2 Information bar .....	52

4.4 Real-time video .....	55
4.4.1 Introduction to video form toolbar .....	55
4.4 Parameters setting .....	58
4.5 Voice talkback and monitoring .....	63
4.5.1 Voice intercom .....	64
4.5.2 Monitoring .....	67
4.6 Track playback .....	69
4.7 Video replay .....	70
4.7.1 Video search .....	70
4.7.2 Video replay .....	71
4.7.3 Viewing download task .....	72
4.8 Statistical statement .....	72
4.8.1 Driving behavior analysis .....	75
4.8.2 Online and offline statement .....	76
4.8.3 Statement of alarm .....	77
4.8.4 Other statements .....	78
4.9 Rule management .....	78
4.9.1 Server configured with email and SMS .....	79
4.9.2 Fatigue rules .....	81
4.9.3 Parking timeout .....	83
4.10 Electronic fence rules .....	85
4.10.1 Set rules .....	86
4.10.2 Distribution rules .....	86
4.10.3 Cancellation of vehicle distribution from the rules .....	87
4.10.4 Query of related statements in the statements .....	87
4.11 Timed photographing and timed video .....	88
4.11.1 Addition of the storage server and the storage relevance .....	88
4.11.2 Setting timing snapshot rules and timing video rules .....	89
4.11.3 Query of video from Video replay selection server .....	90
4.12 WIFI video download plan .....	90
4.12.1 Increase wifi download sites .....	90
4.12.2 Increase wifi download servers .....	91

4.12.3 Configuration of wifi download plan .....	92
4.12.4 Setting wifi download path and download status on the server software .....	93
4.12.5 Playback of downloaded video under the interface of the video replay .....	94
4.13 Alarm .....	94
4.13.1 Shielding alarm information .....	94
4.13.2 Action with alarm of WEB client .....	95
4.13.3 Action with alarm of server rules .....	96
4.14 Issuance of literal information .....	98
4.14.1 Opening of issued literal information .....	98
4.14.2 Operation of issued literal information .....	98
4.15 Equipment upgrade .....	100
4.15.1 Addition of the upgrade task .....	101
4.15.2 Saving to other vehicles .....	101
4.15.3 File management .....	102
4.16 Issuance of files .....	102
4.17 Configuration of oil mass .....	104
4.17.1 Setting configuration of oil mass .....	104
4.17.2 Statement of oil mass .....	108
4.18 Commonly used functions .....	110
4.18.1 Vehicle control .....	110
4.18.2 Setting of GPS report interval .....	110
4.18.3 Configuration of network flow .....	110
4.18.4 Equipment information .....	111
4.19 Common problems and Solutions .....	113
V. Direction for use of PC client .....	114
5.1 Client login .....	114
5.2 Introduction to client interface .....	114
5.3 Electronic map .....	116
5.3.1 Electronic map monitoring .....	116
5.3.2 My map .....	117
5.3.3 Region search .....	118
5.3.4 Information bar .....	119

5.4 Real-time preview .....	119
5.4.1 Introduction to video form toolbar .....	119
5.4.2 Automatic closure of the video .....	123
5.4.3 Video polling .....	124
5.5 Voice talkback and monitoring .....	125
5.5.1 Voice intercom .....	125
5.5.2 Digital Intercom .....	127
5.5.3 Monitoring .....	129
5.5.4 Broadcast .....	132
5.6 Track playback .....	133
5.7 Video search and playback .....	135
5.7.1 Video search .....	135
5.7.2 Video replay .....	136
5.7.3 Video download .....	138
5.8 Issuance of literal information .....	140
5.8.1 Opening of TTS phonetic function by vehicle information management .....	140
5.8.2 Operation of issuance function of client file .....	140
5.8.3 Query of detail report about issued information in the statement .....	143
5.9 Monitoring platform 809 function .....	144
5.9.1 Viewing connection status of the monitoring platform .....	144
5.9.2 Request to the monitoring platform .....	145
5.10 Function setting .....	146
5.10.1 Parameter configuration: Remote modification of the equipment parameters .....	146
5.10.2 Event setting .....	148
5.10.3 Issuance of questions .....	149
5.10.4 Information on demand menu settings .....	149
5.10.5 Callback .....	150
5.10.6 Setting of the telephone book .....	151
5.10.7 Driving record data collection .....	152
5.10.8 Driving record data upload .....	153
5.10.9 Setting of vehicle information .....	153
5.10.10 Setting of the recorder time .....	154


5.10.11 Setting of characteristic coefficient .....	154
5.10.12 Setting of position trailing .....	155
5.10.13 Driving record data collection .....	156
5.10.14 Driving record data upload .....	156
5.10.15 RSA Public key .....	<b>Błąd! Nie zdefiniowano zakładki.</b>
5.11 Alarm .....	157
5.11.1 Check the alarm information .....	157
5.11.2 Query of the web alarm statement .....	158
5.11.3 Shielding alarm information .....	158
5.11.4 Action with alarm of the client side .....	159
5.11.5 Action with alarm of the server .....	161
5.12 Remote upgrade of equipment .....	163
5.12.1 Upgrade of single equipment .....	163
5.12.2 Upgrading multiple equipment at the same time .....	165
5.12.3 Offline upgrade .....	167
5.13 Fuel cut and power outage .....	168
5.13.1 Opening the function of fuel cut and power outage by web .....	168
5.13.2 Operation of fuel cut and power outage by client .....	168
5.14 Oil mass detection .....	170
5.14.1 Configuration of oil mass .....	170
5.14.2 Statement of oil mass .....	172
5.14.3 Oil mass curve of client track .....	174
5.15 Cloud platform control .....	174
5.16 Network flow statistics .....	175
5.16.1 Configuration of network flow .....	175
5.16.2 Configuration of network statistics .....	175
5.17 Client LOGO Settings .....	176
5.18 System setting .....	177
5.18.1 The city where the vehicle is displayed .....	177
5.18.2 Update time of system GSP .....	178
5.19 Electronic fence .....	178
5.19.1 Regional configuration by client .....	178

5.19.2 Configuration of electronic fence alarm. ....	178
5.19.3 Distribution rules .....	179
5.19.4 Statement of electronic fence .....	179
5.20 Line offset rule and segmented speed limit rule .....	180
5.20.1 Drawing the line .....	180
5.20.2 Configuration line of electronic fence alarm. ....	180
5.20.3 Distribution rules .....	181
5.20.4 Statement of electronic fence .....	181
5.21 Common problems and solution .....	182
VI. Direction for use of mobile phone client .....	187
6.1 Android Mobile client-side .....	187
6.1.1 Login interface .....	187
6.1.2 Map monitoring .....	189
6.1.3 Video preview .....	192
6.1.4 Track playback .....	194
6.1.5 Video replay .....	196
6.1.6 System setting .....	199
6.2 IOS Mobile client-side .....	200
6.2.1 Login interface .....	200
6.2.2 Vehicle terminal .....	201
6.2.3 Selecting monitoring interface of vehicle skipping .....	202
6.2.4 Map monitoring .....	204
6.2.5 Video monitoring .....	205
6.2.6 Trajectory monitoring .....	206
6.2.7 System setting .....	207

## I. Preparation purpose

Real-time reflection of actual conditions regarding all online operating vehicles can be conducted by central platform. Online management, system upgrade and technical support for each branch control center are realized; Statistics of each branch control center is performed as well as operational data is uploaded by the workstation; Statistics and analysis of various data are conducted as per management and service requirements. The monitoring center can provide a platform interface and information service for all related competent departments (transportation, public security, traffic policy, safety supervision, construction, etc.) of the government in the industry, realizing resource sharing at the same time.

## II. Platform introduction

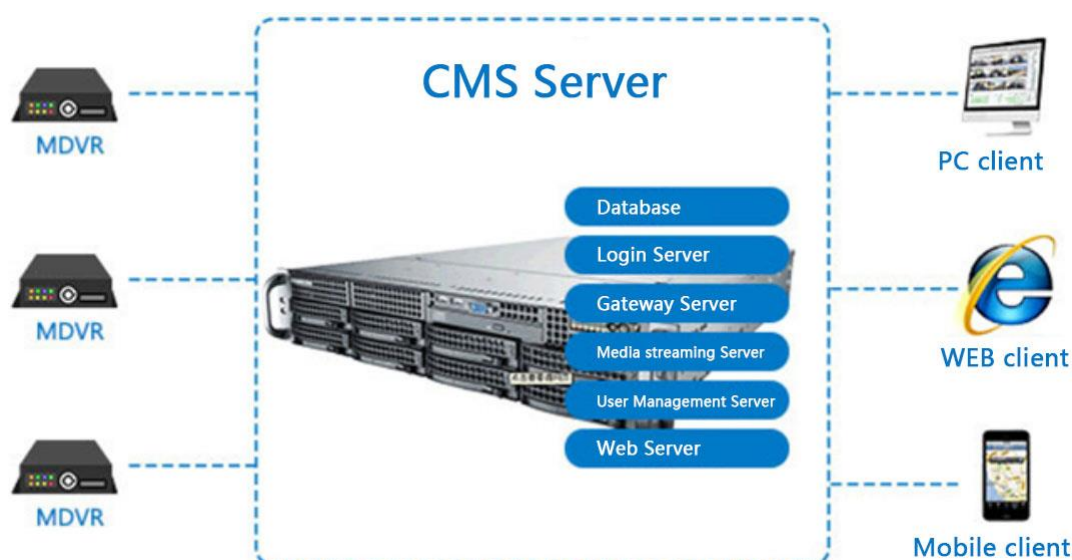

CMS mainly includes nine parts---login server, gateway server, streaming media server, user server, and automatic download server of WIFI, storage server, WEB server, FTP server and remote monitoring client.

For the server part, one or two database servers, one or two login servers, several gateway servers, several streaming media servers and several user management servers provide GPS, video, alarm and other services for on-board DVR and clients.

**Database server:** Mainly used for saving configuration information of the server, alarm event, etc. Database here adopts MySQL-5.18.12-win32.

**Login server:** Accepting registration of various servers as well as coordinating and managing servers succeeded in login. Distributing user manager servers for clients and the configuration side as well as distributing gateway servers to on-board DVR equipment; Realizing load balancing of such servers as user management server and gateway server.

**Gateway server:** Providing vehicle access service. Communications link between vehicle and gateway server is established and such communication line is used to transmit the vehicle position and status information.

**Streaming media server:** Providing media data forwarding function. It mainly includes data forwarding of audio and video, talkback, monitoring, snapshot, parameter configuration, search and download.

**User management server:** Providing client access service.

**Automatic download server of WIFI:** After the vehicle enters the station, if wifi is found, it's necessary to automatically connect and download video files.

**Storage server:** Used for saving picture snapshot by video recording to reduce cost

**WEB server:** Mainly providing GIS electronic map information as well as providing linking service for login of CMS background and front desk management system.

**FTP server:** Mainly used for file transmission

**Client side:** Providing the functions of real-time video preview, GPS positioning, display of electronic map, monitoring of vehicle status, picture snapshot, video search, video download and playback, replaying of vehicle track, monitoring of real-time alarm information, statistics of alarm information as well as configuration of vehicle parameters. The client of this version is divided into WEB client and C client. The user can login and manage the own vehicle by different modes.

### III. Server deployment and management

#### 3.1 Operating environment

##### 3.1.1 Basic requirements of the server

Operation System	Microsoft Windows Server 2003 or higher
CPU	Intel quad-core and CPU frequency of not less than Xeon 5410(2.33GHz)
Network card	Two Gigabit Ethernet
Memory	4G (or higher)
Hard disk	1TB
CD-ROM	DVR-ROM
Others	Supporting VGA display Supporting ordinary keyboard port and recommending usage of USB keyboard port Needing computer, operation and hard disk status indicator lamps


### 3.1.2 Streaming media server

Performance Specifications	
	Distribution of 256 entrance video streams can be supported furthest and maximum bandwidth of entrance video stream is 128Mbps
	Maximum duplication output of single-channel media stream reaches to 6 and maximum exit media bandwidth is 512Mbps
	Based on the speed of gigabit internet access, average forwarding delay of 20Mbps output code stream is less than 5 ms  Based on the speed of gigabit internet access, average forwarding delay of 100Mbps output code stream is less than 40 ms  Based on the speed of gigabit internet access, average forwarding delay of 512 Mbps output code stream is less than 200 ms
Video bandwidth	
	Based on 320Kbit data volume per second of each video in the format of CIF, 256 videos need $320 \times 256 = 81,920$ Kbit bandwidth  Description: At present, MDVR equipment is limited by network bandwidth under the 3G network environment and upload the highest resolution CIF video.


### 3.1.3 Examples of the system deployment

The example is only for reference. The detail shall be subject to user hardware, network as well as CMS and MDVR installation environment.

#### 3.1.3.1 200 sets of MDVR

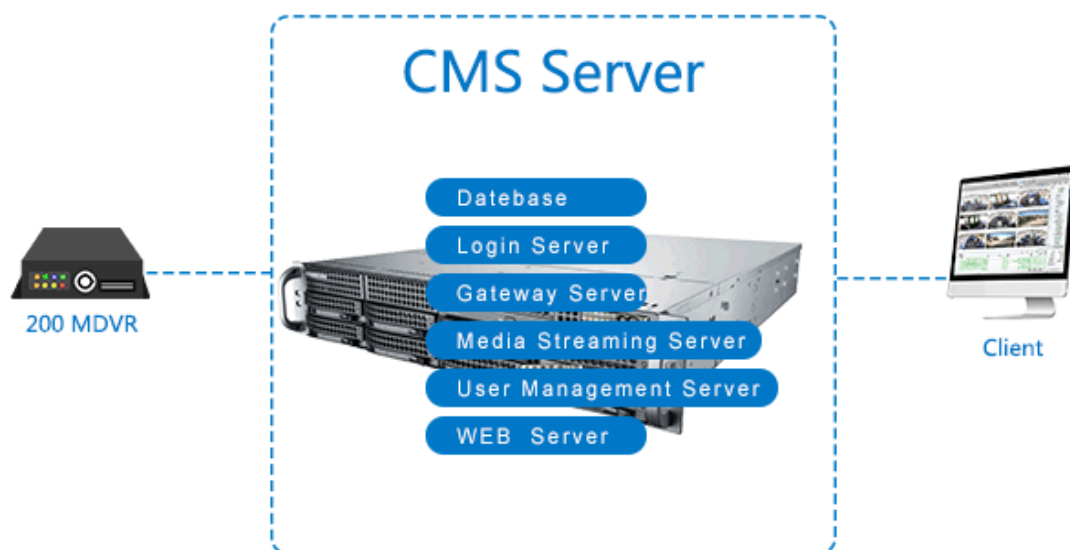


### 3.1.3.2 5000 sets of MDVR

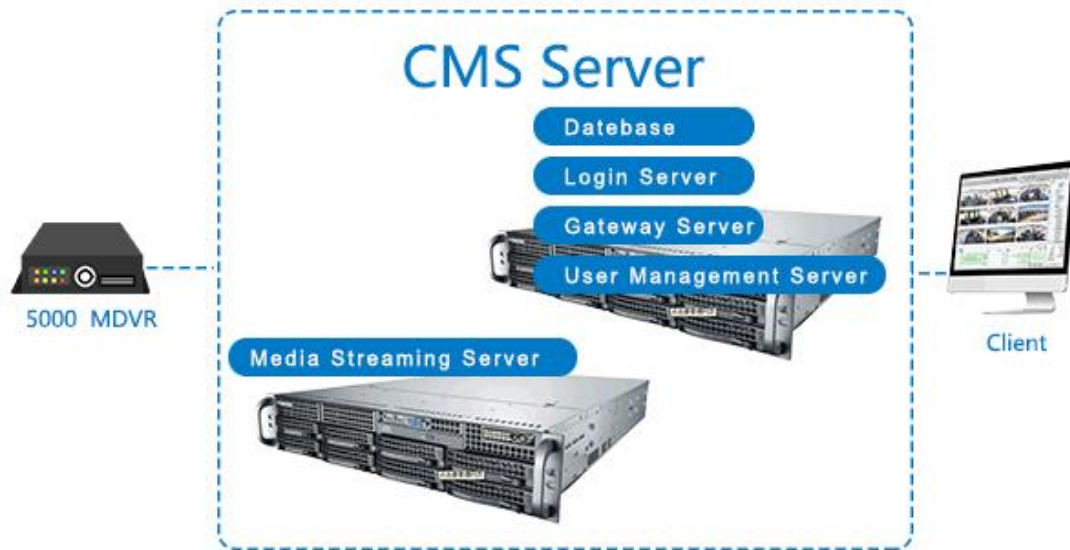

Streaming media server needs to be configured with information of several streaming media servers in light of actual usage of the user.

### 3.1.3.3 50000 sets of MDVR

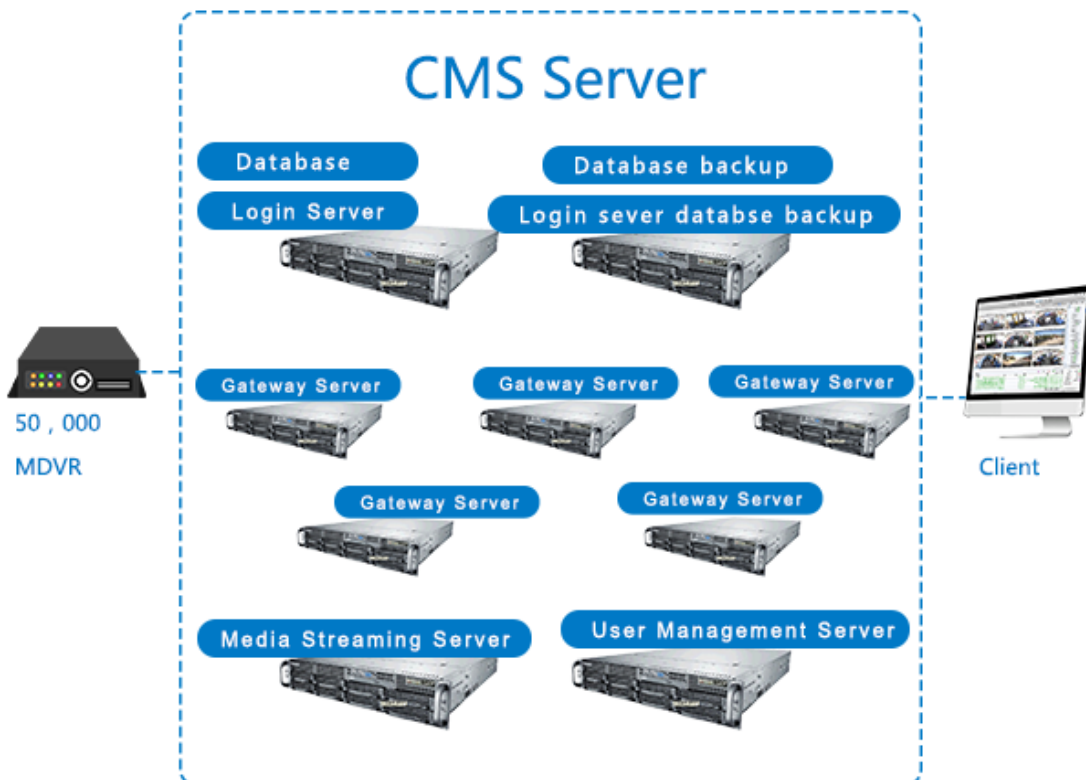

### 3.2 Guidance regarding software installation

1. Double click to run CMSServerV6 installation program with interface of language selection (Simplified Chinese/English) popped up, which is shown in the following figure:

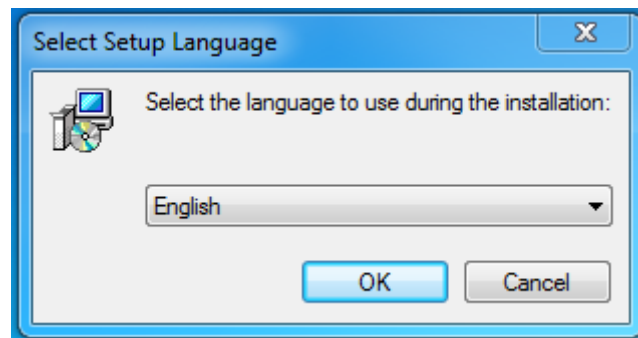
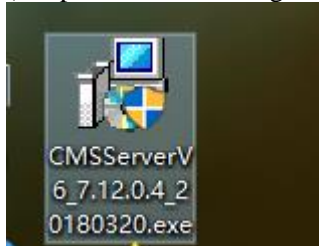


Figure 4.1 Selection of Installation Language

2. After selecting installation language of "Simplified Chinese" or "English", click "confirm" to enter installation guidance interface:

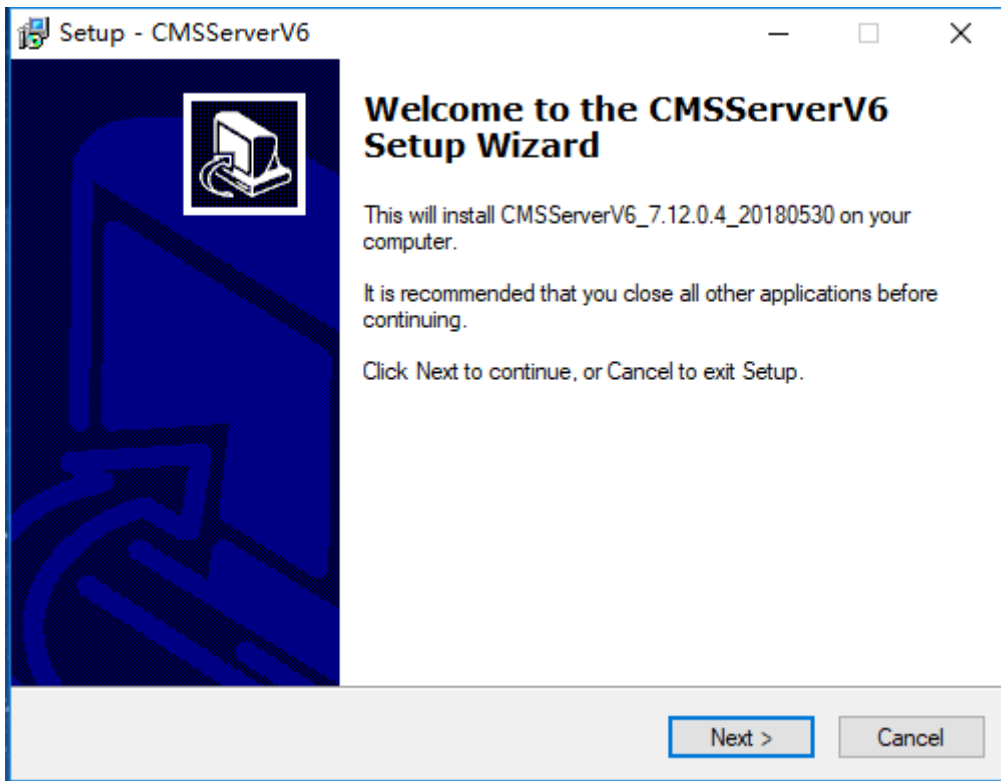


Figure 4.2 Installation guide

3. Click "Next " to enter the interface of Select Destination Location electing installation path as shown in the following figure:

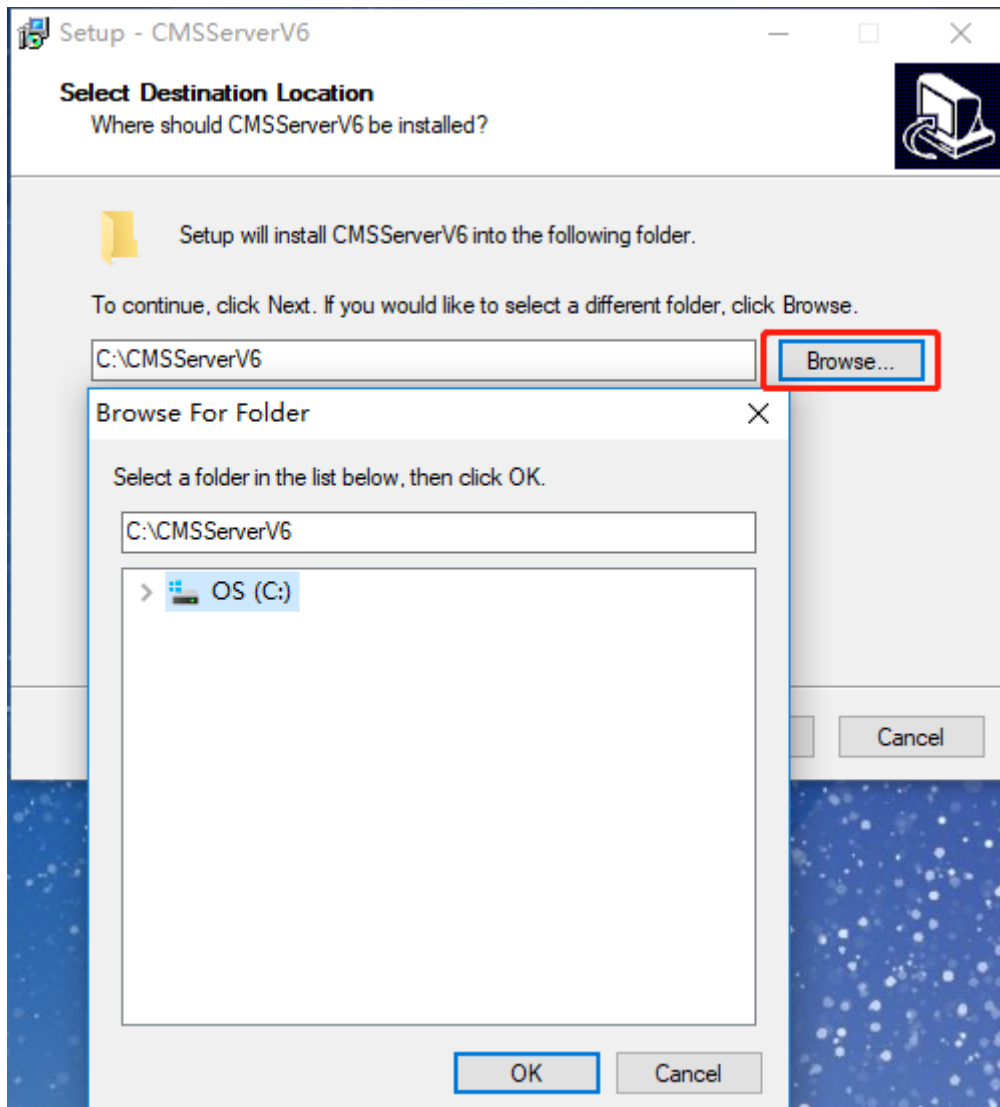


Figure 4.3 Selection of Installation Path

4. Select placement location of start menu folder and then click "OK" for continuing

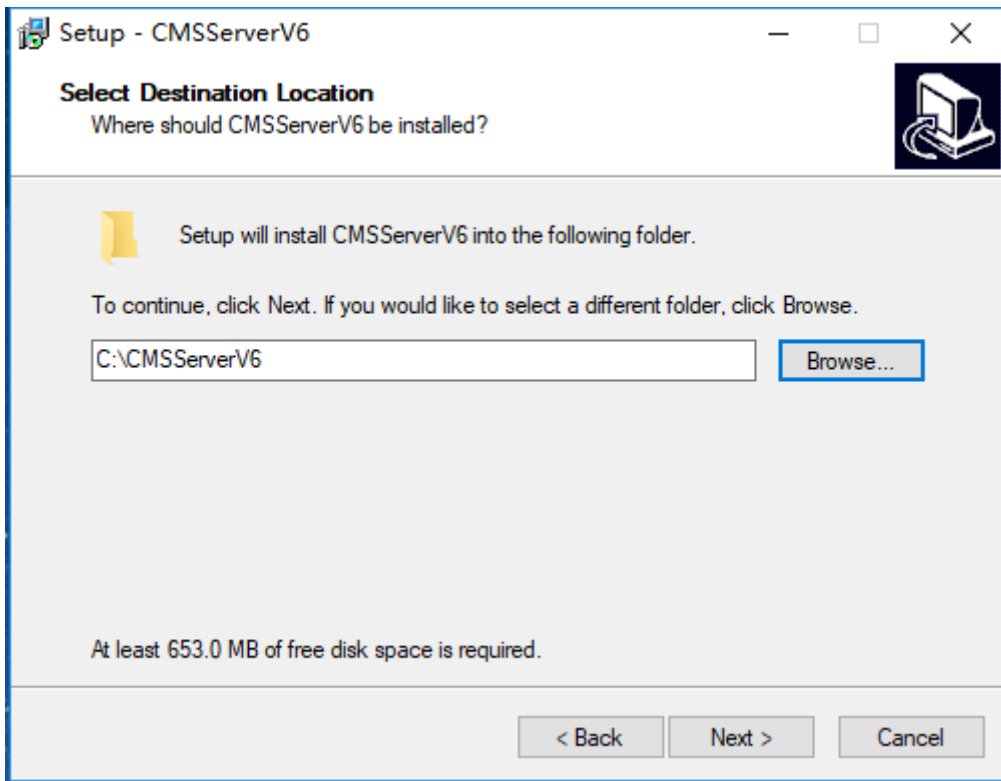


Figure 4.4 Selection of Shortcut Program Location

5. Select additional Tasks (whether to create desktop icon) and then click "Next " for continuing

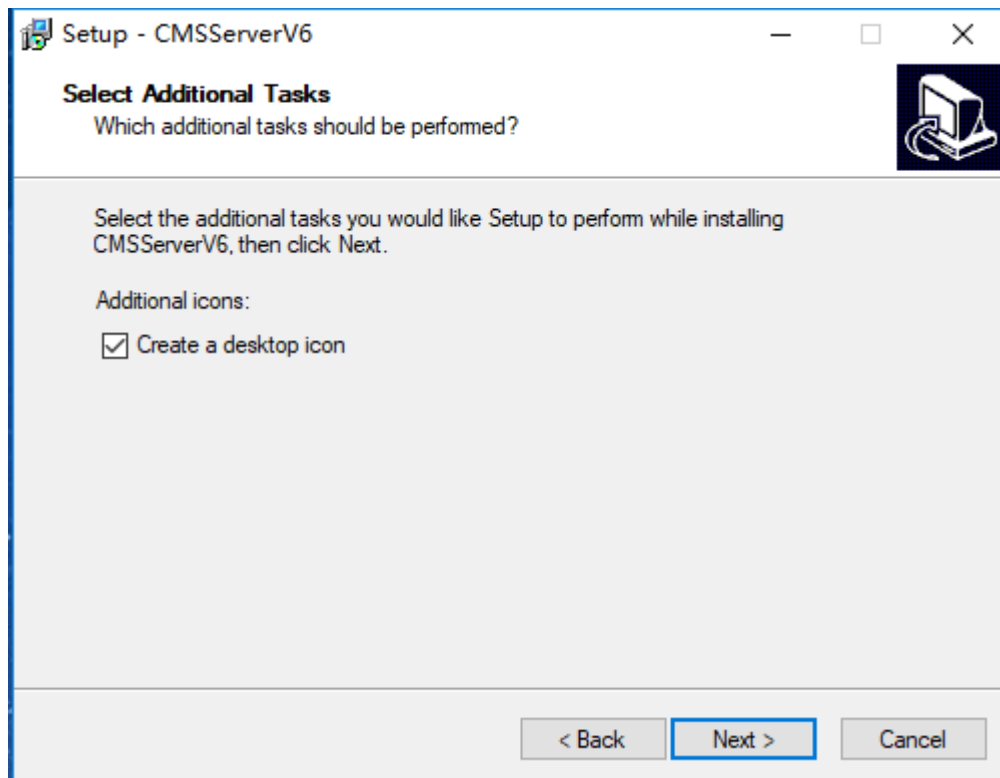


Figure 4.5 Selecting whether to create desktop shortcut

6. Click "install" to execute program installation operation and complete installation

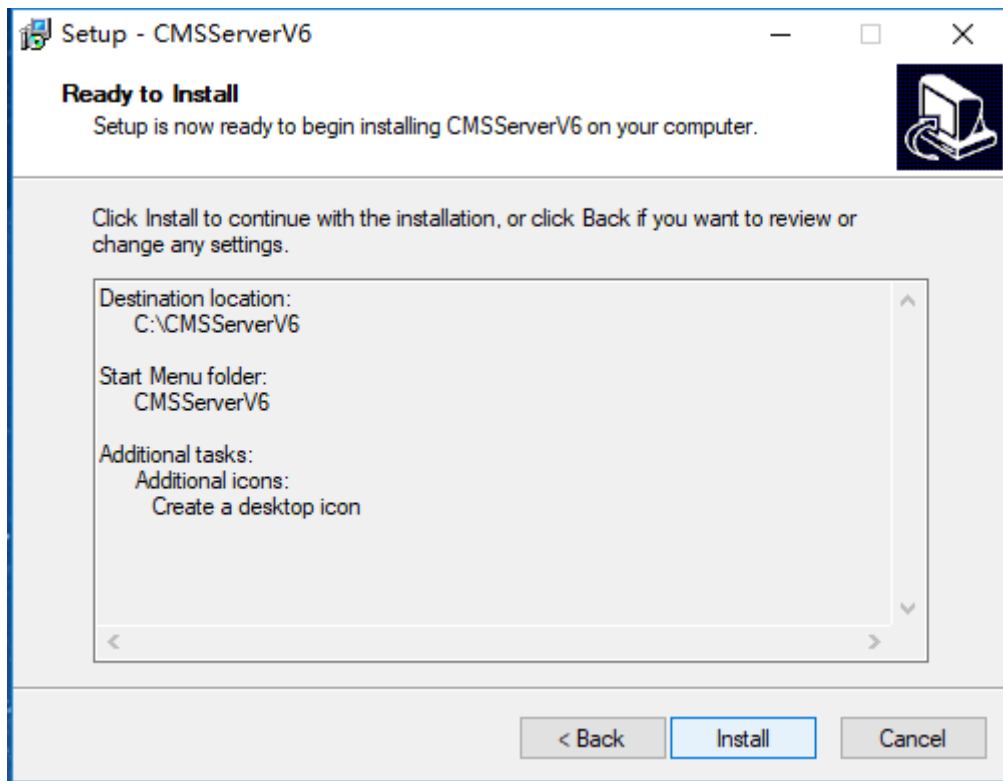


Figure 4.6 Executing installation program operation

7. Click "complete" to conduct configuration of the related data

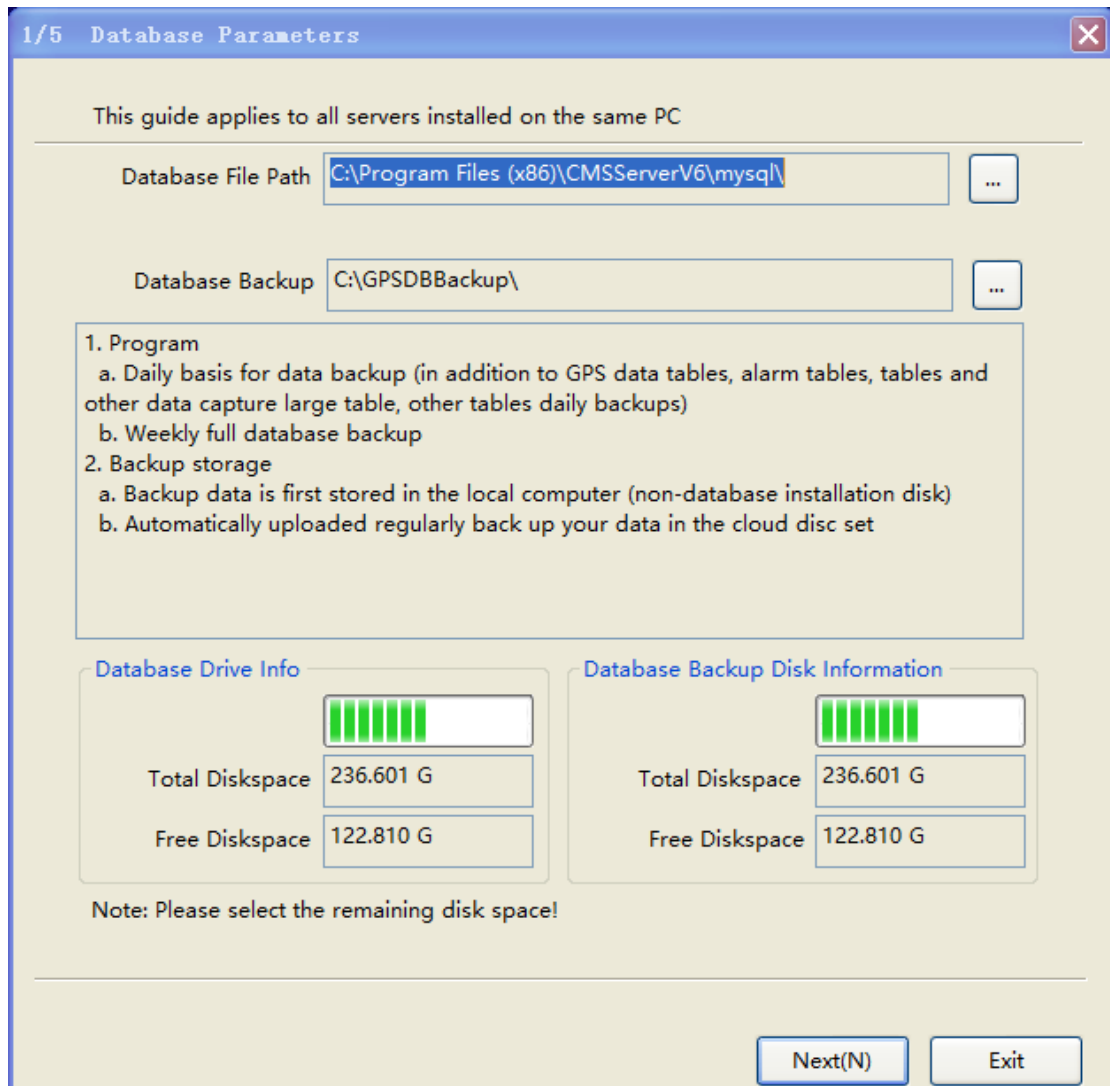


Figure 4.7 Configuration of Database Parameters

8. Click "Next " to configure web server parameters

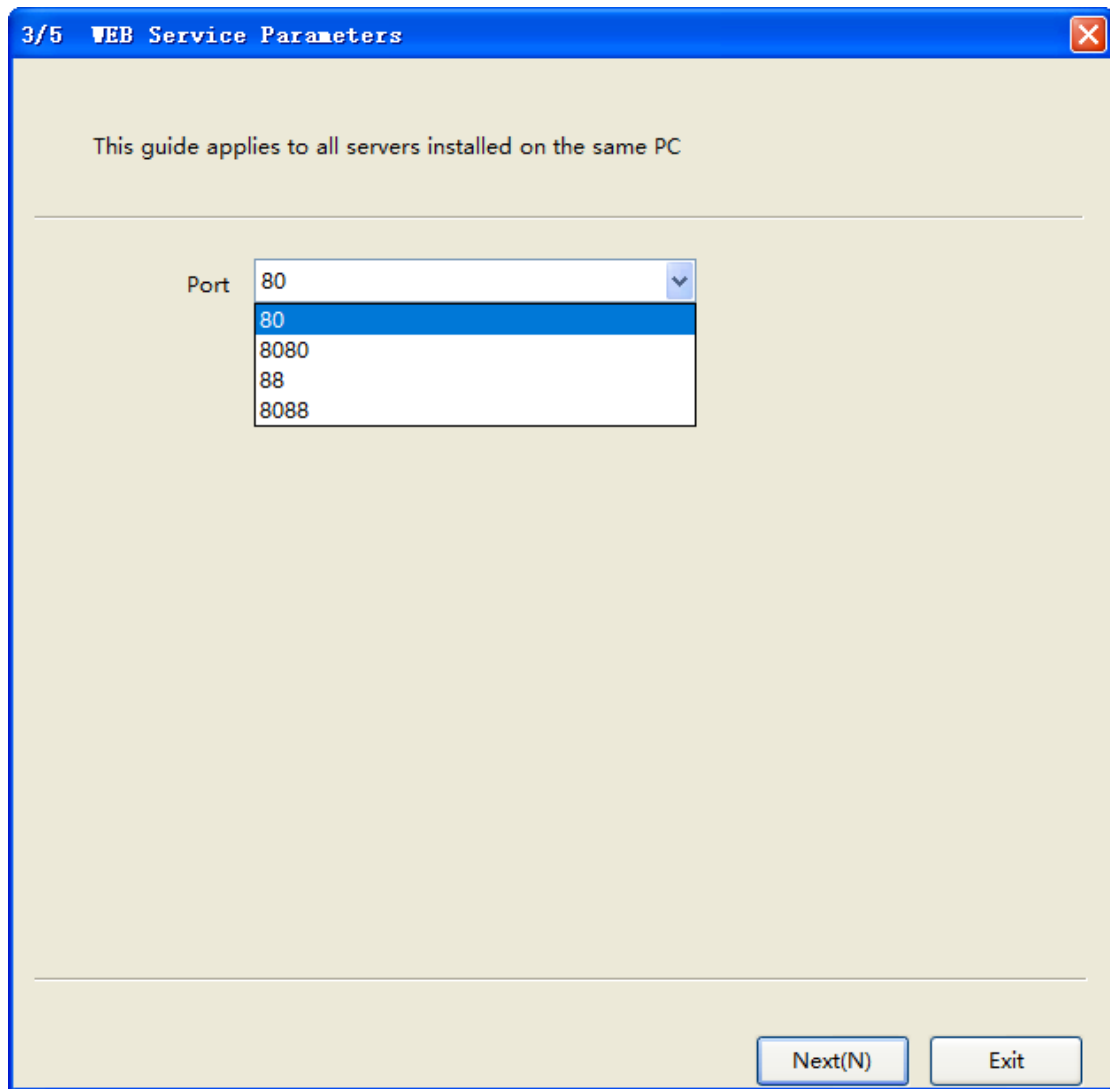


Figure 4.8 Configuration of Web Server Port

9. Click "Next" to configure network address.

2/5 Network Address Parameters

This guide applies to all servers installed on the same PC

---

Internet Address 116.4.10.147

WIFI Download

Enable WIFI Automatically Download

SSID ssid-mdvr

Through the the SSID distinction download site (MDVR WIFI network to connect to this SSID)

LAN Address 192.168.1.121

To ensure that the MDVR through WIFI network to connect to this LAN address

Next(N) Exit

Figure 4.9 Configuration of Network Address Parameters

10. Click "Next" to configure FTP service port

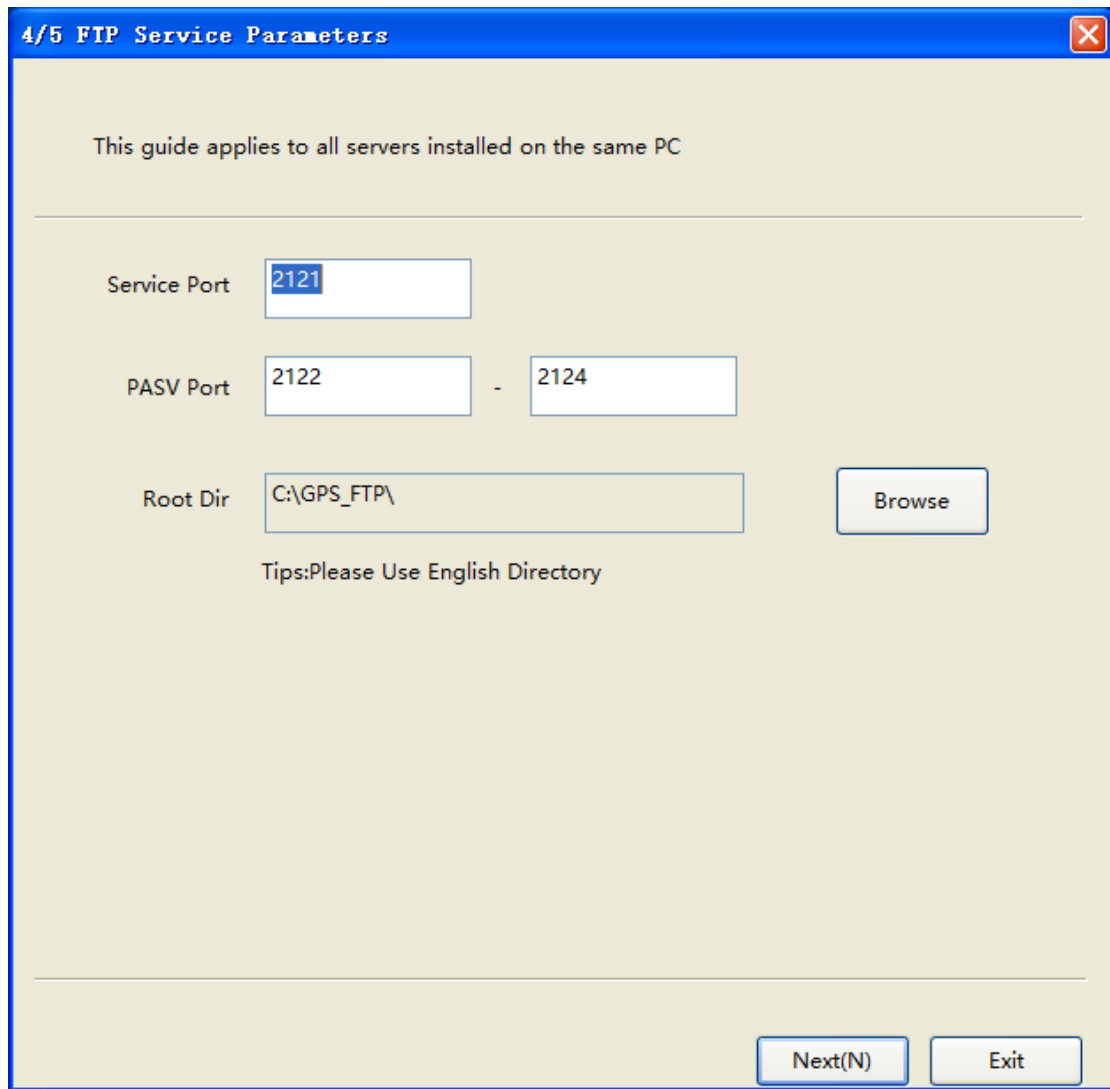


Figure 5.0 FTP Port Configuration

10. Click "Next" to operate CMSServerV6 server controller



This guide applies to all servers installed on the same PC

---

1. Allow service program through Windows Firewall
2. Start the service control program
3. View the ReadMe describe file

---

Finish

Exit

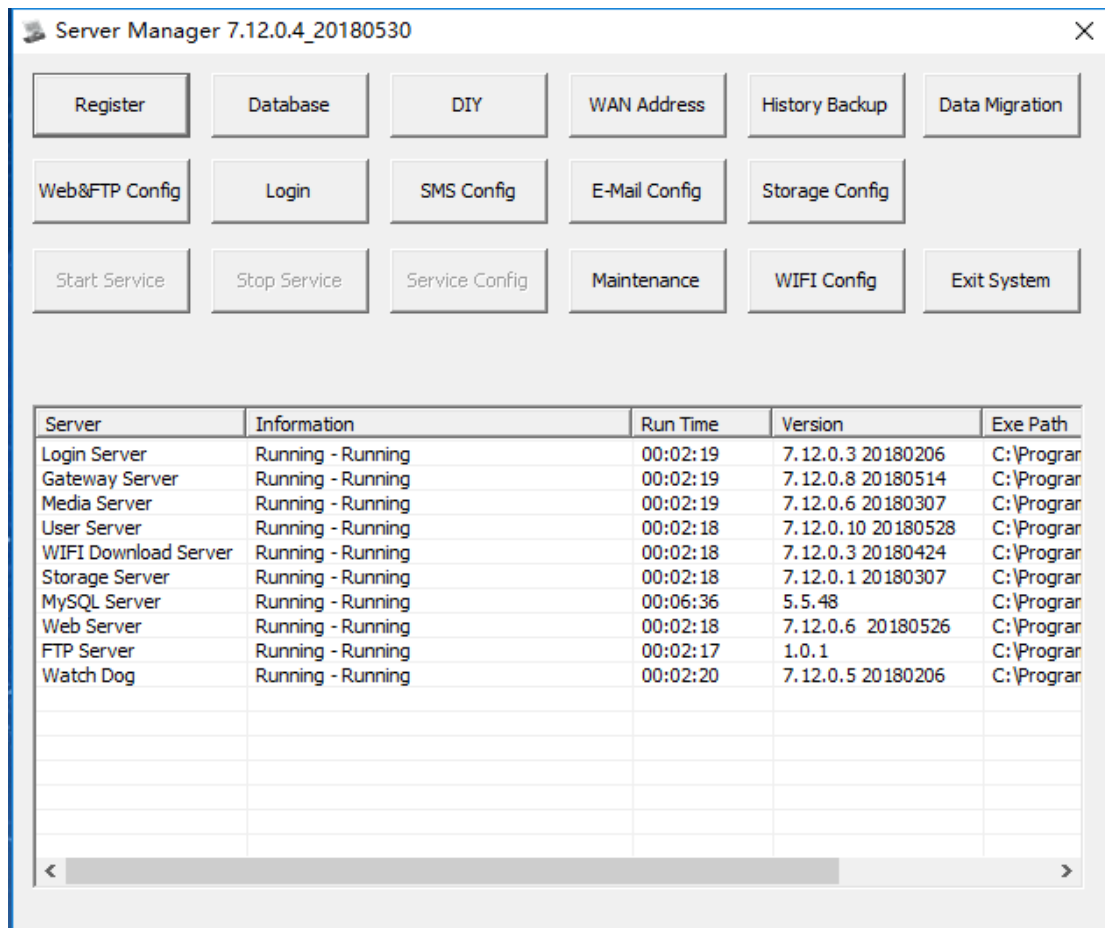



Figure 4.10 Configuration Completion

### 3.3 Server manager

#### 3.3.1 Software registration

Our company will provide server software newly installed to 10 pieces of equipment for test. In case of official use, please contact our company's principal for authorization increase.

In case of the server connected to outer net, it's unnecessary to provide feature code to us but carry out direct network authorization to the user.

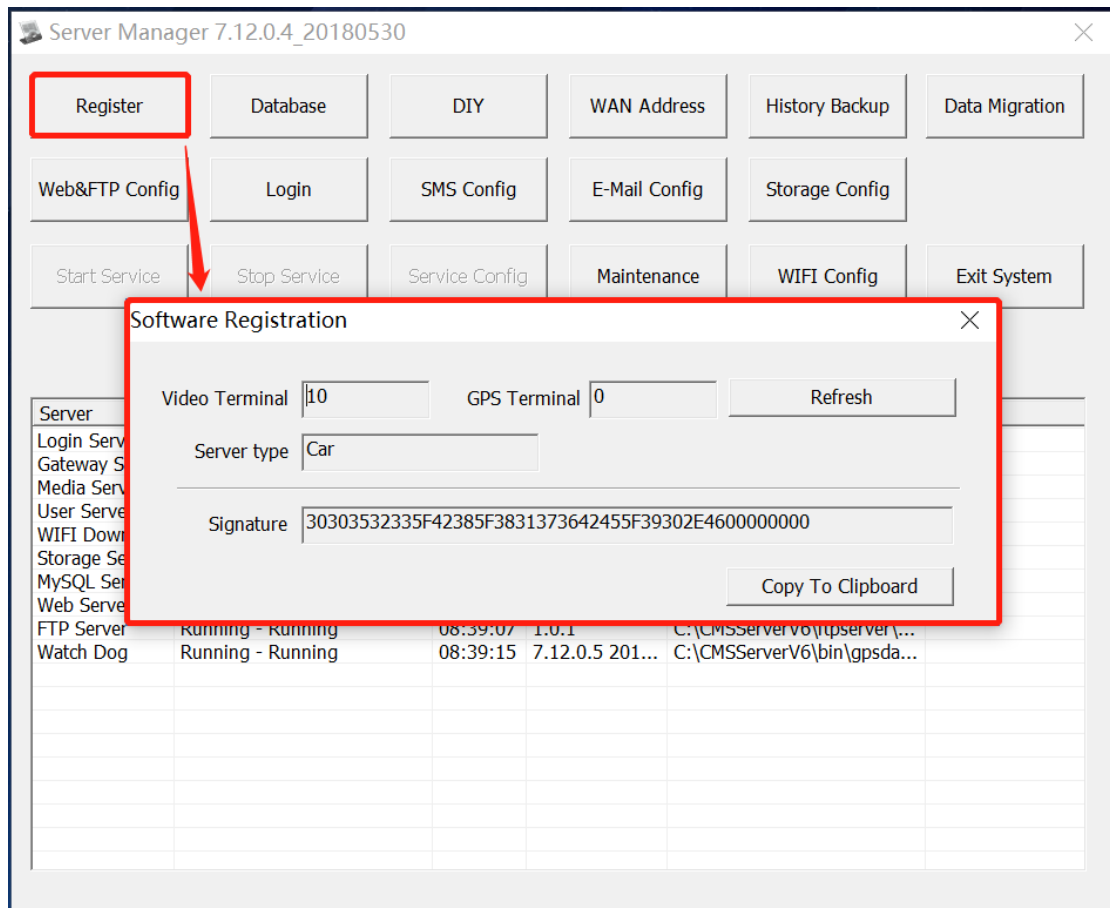


In case of VPN server adopted, it's necessary to provide feature code to us and then our company shall provide the registration code.

### 3.3.2 Database configuration


Database configuration is also database management tool which is mainly used as the tool for repairing database involving data corruption and oversize data volume of database.

#### 3.3.2.1 Database parameters

Information of database configuration

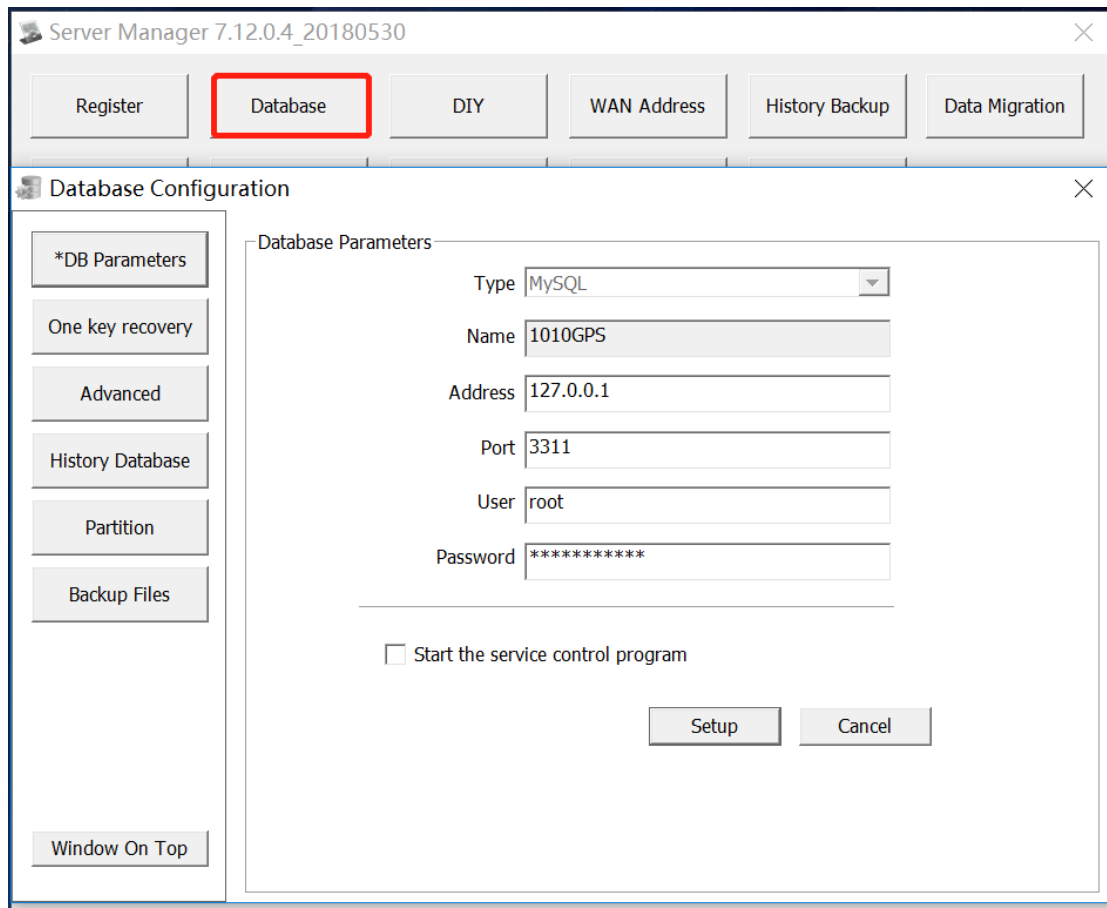

### 3.3.2.2 Senior maintenance of database

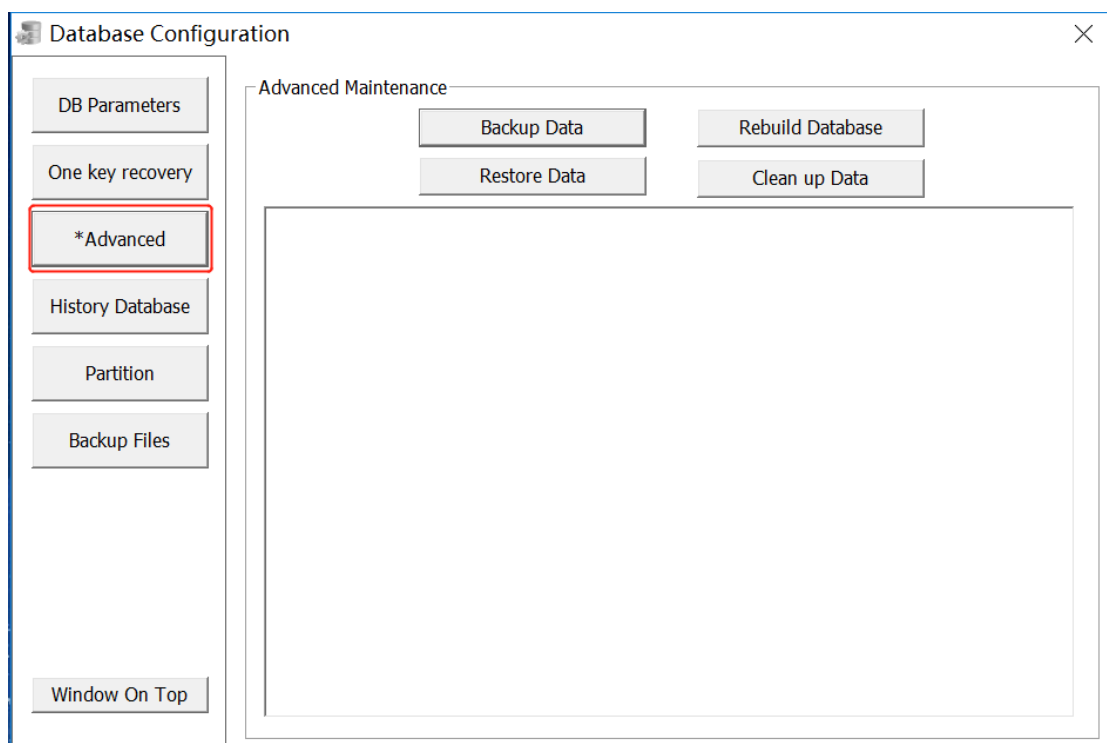


"Back up data"---It's necessary to back up existing database (selection type and time) and the database must be under the state of normal operation.

"Rebuild the database"---After original database is renamed, an empty database is newly established. At the moment of renaming, the database must be under the off state and at the time of creating table, the database must be under the state of normal operation

"Recover database"---Data backed up shall be imported to the database according to selected type and time

"Clean up database"---After type and time are selected, corresponding data shall be eliminated from the database which is unrecoverable and it's necessary to pay attention to backing up data.

When the database is damaged which causes MYSQL service fails to be started, maintenance mode can be used to rebuild database and import data into a new database. The process will last for a long time as per data size. The user can select data table and time in accordance with the own demand.

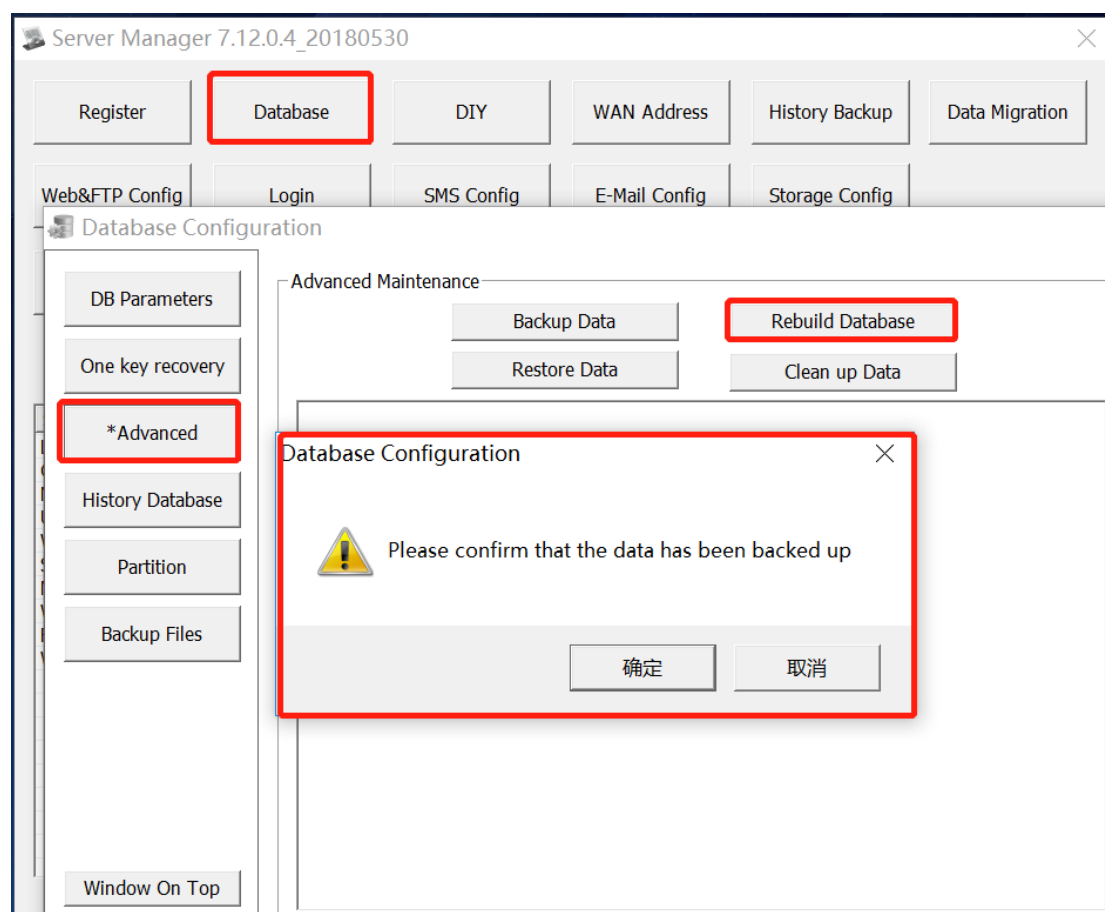

### 3.3.2.3 Historical data

It's necessary to configure historical data service firstly with the button function is consistent with the "senior maintenance" operation

### 3.3.2.4 Partition table

Server Manager 7.12.0.4\_20180530

Register Database DIY WAN Address History Backup Data Migration

Database Configuration

DB Parameters  
One key recovery  
Advanced  
History Database  
**\*Partition**  
Backup Files  
Window On Top

Table Name	Partitioning	File size
<input type="checkbox"/> cb_client_daily	p201501	112.00 (KB)
<input type="checkbox"/> cb_client_daily	p201804	112.00 (KB)
<input type="checkbox"/> cb_client_daily	p201807	112.00 (KB)
<input type="checkbox"/> cb_client_login_record	p201501	112.00 (KB)
<input type="checkbox"/> cb_client_login_record	p201805	112.00 (KB)
<input type="checkbox"/> cb_client_login_record	p201806	112.00 (KB)
<input type="checkbox"/> cb_vehicle_check_daily	p201501	112.00 (KB)
<input type="checkbox"/> cb_vehicle_check_daily	p201805	112.00 (KB)
<input type="checkbox"/> cb_vehicle_check_daily	p201806	112.00 (KB)
<input type="checkbox"/> cb_vehicle_check_log	p201501	128.00 (KB)
<input type="checkbox"/> cb_vehicle_check_log	p201805	128.00 (KB)
<input type="checkbox"/> cb_vehicle_check_log	p201806	128.00 (KB)
<input type="checkbox"/> cb_vehicle_login_record	p201501	112.00 (KB)
<input type="checkbox"/> cb_vehicle_login_record	p201805	112.00 (KB)
<input type="checkbox"/> cb_vehicle_login_record	p201806	112.00 (KB)
<input type="checkbox"/> zzc_operation_info	p201603	112.00 (KB)


Note: delete the partition table will delete all the data can not be restored

0/470 Refresh Delete


In case of oversize data and such data failing to be needed, such data can be eliminated

### 3.3.3 DIY


Server LOGO name is customized with some unnecessary functions on the server customized

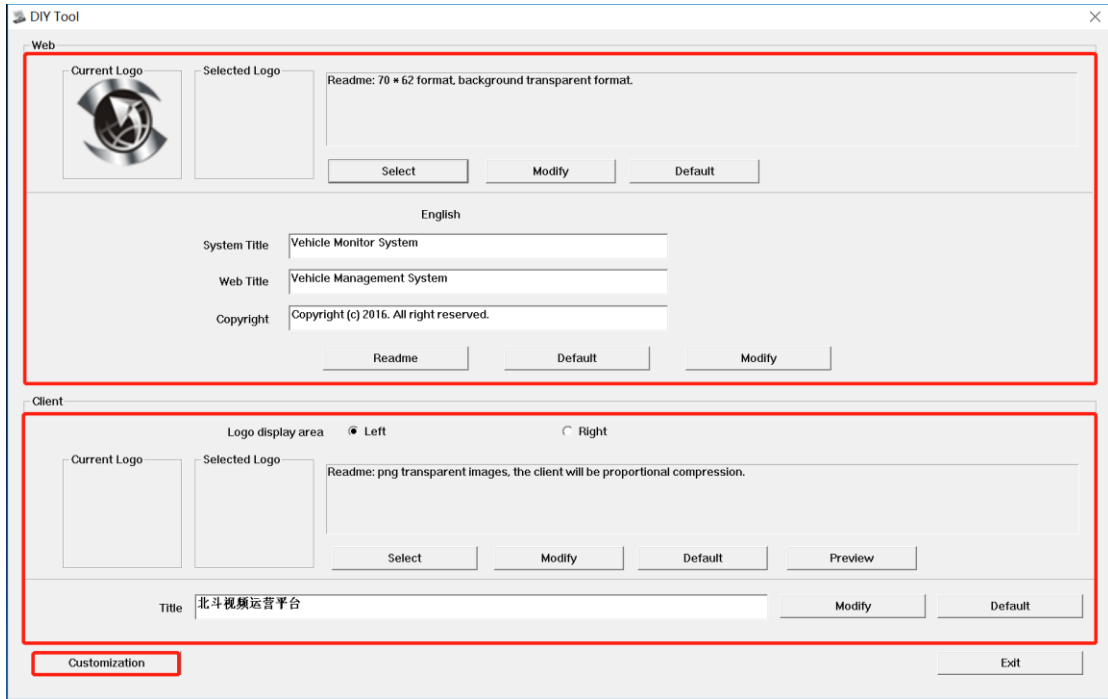

1. Logo on WEB and client can be modified on the interface
2. For function customization, in case of needing to shield some unnecessary functions, they can be removed

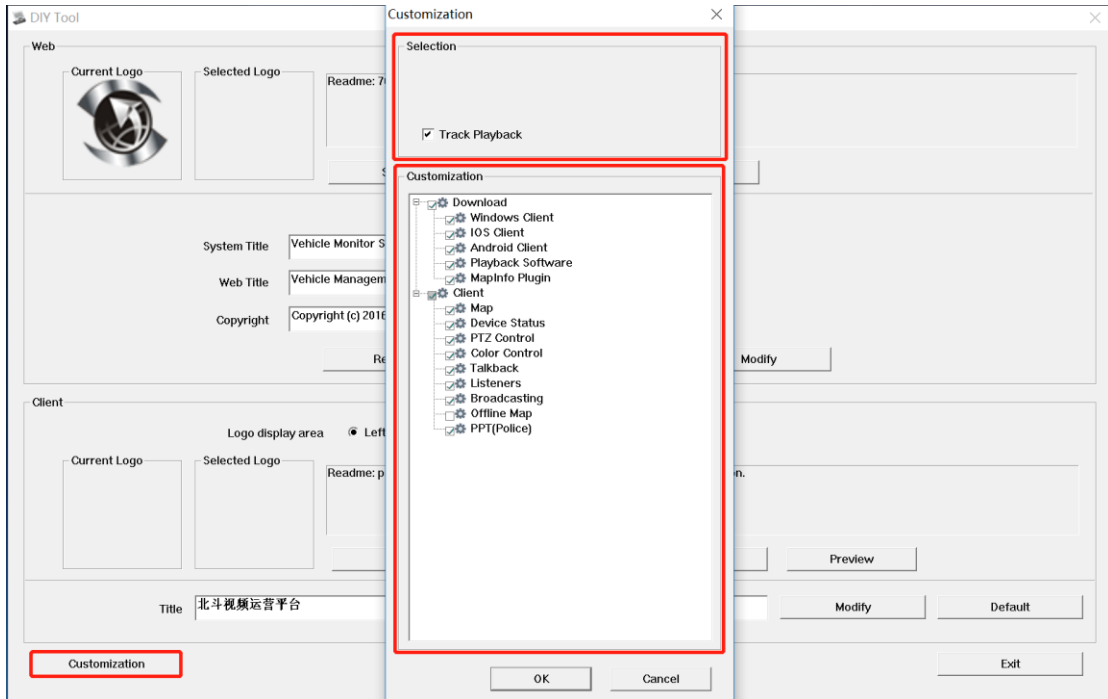


### 3.3.4 Configuration of the network address

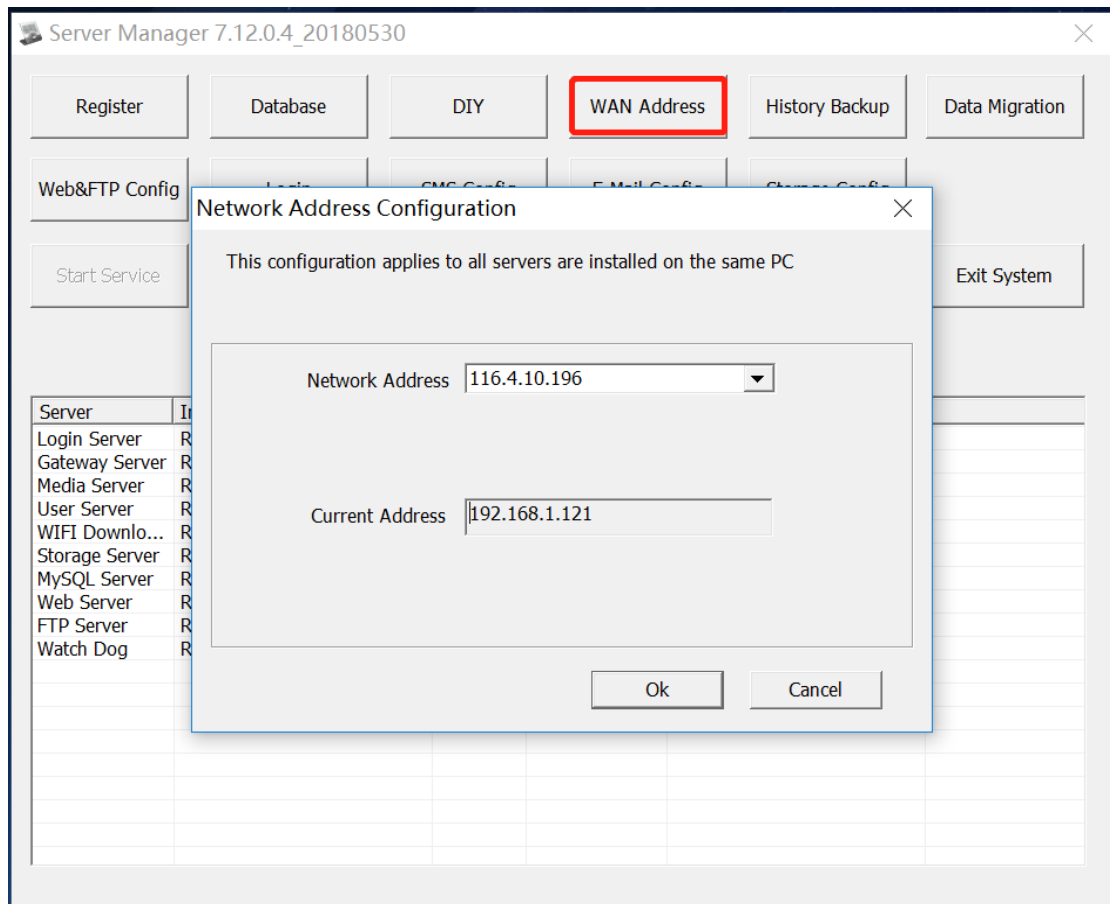

Mainly used for configuring link address of the server (the IP address or the domain name address could be used)

### 3.3.5 History backup

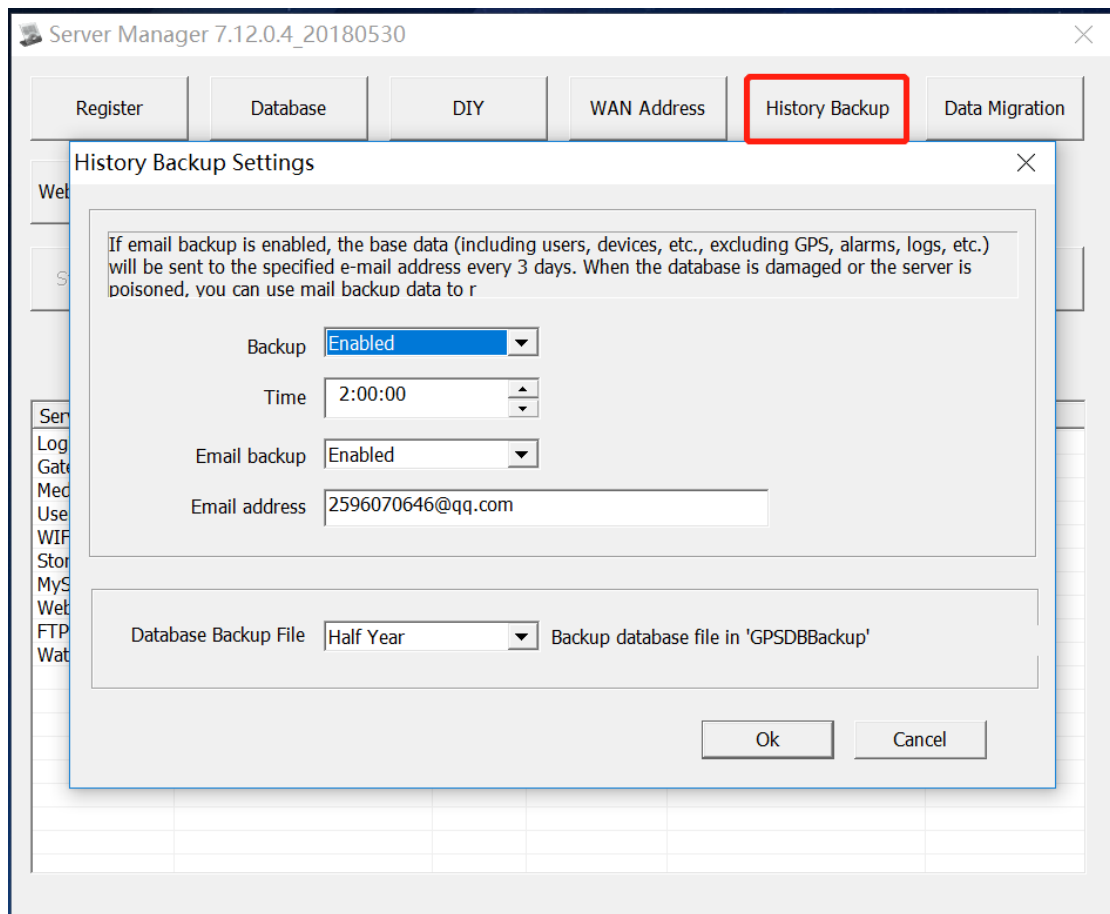


### 3.3.6 Data migration

The function is mainly used for upgrading V6 server to V7 server




### 3.3.7 WEB Port Configuration

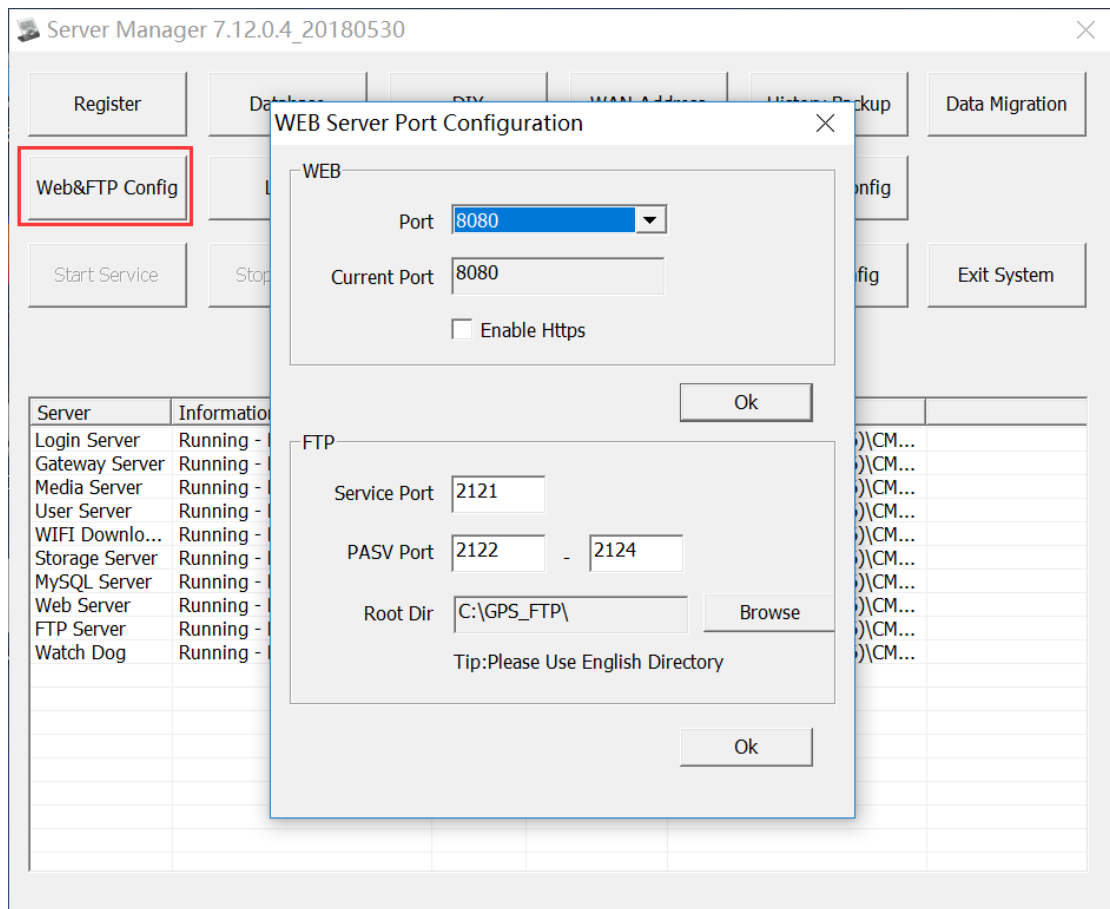

Used for connection of WEB port

### 3.3.8 Automatic maintenance

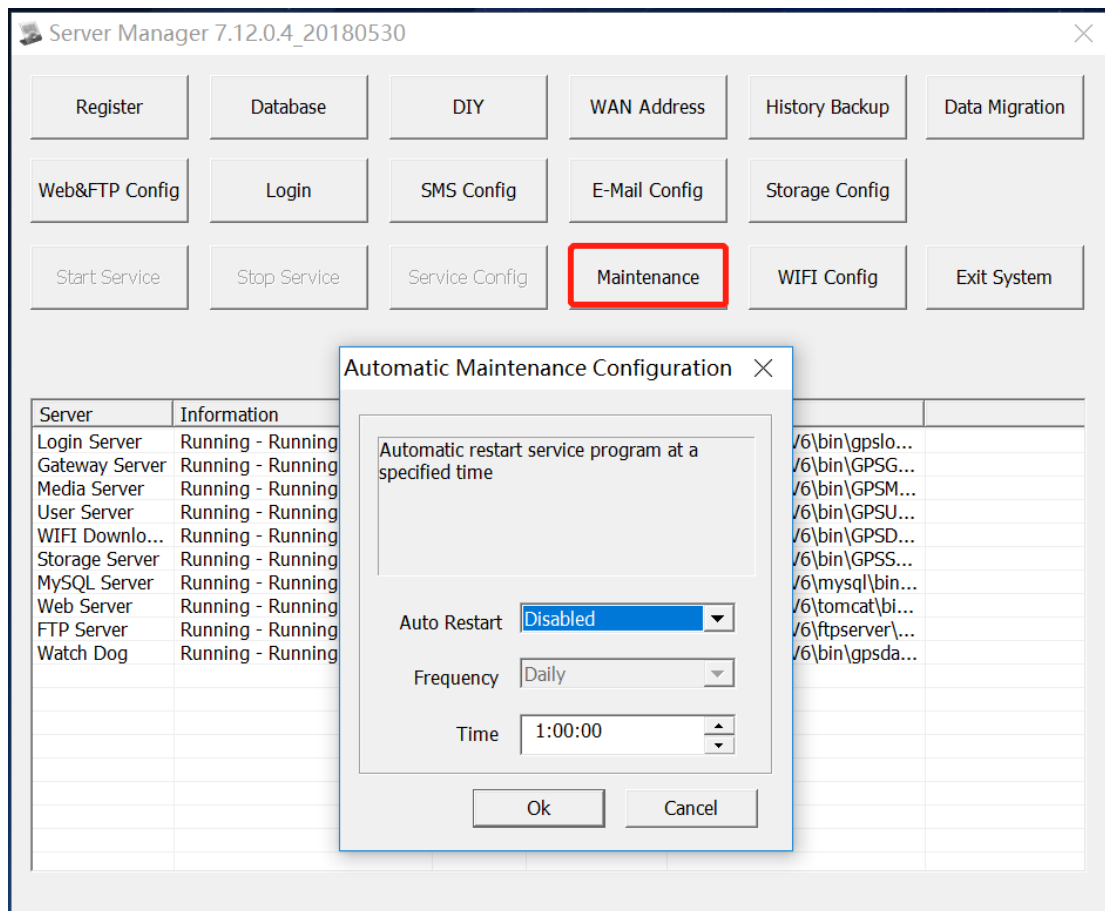


Deactivation is suggested. In case of needing usage, the server will automatically restart in accordance with requirements.

### 3.3.9 Data migration of server


How to transfer database to new server computer at the time of changing the server computer?

1. It's necessary to duplicate database file from the computer whose server needs to be replaced

File path and file are shown in the following figure:

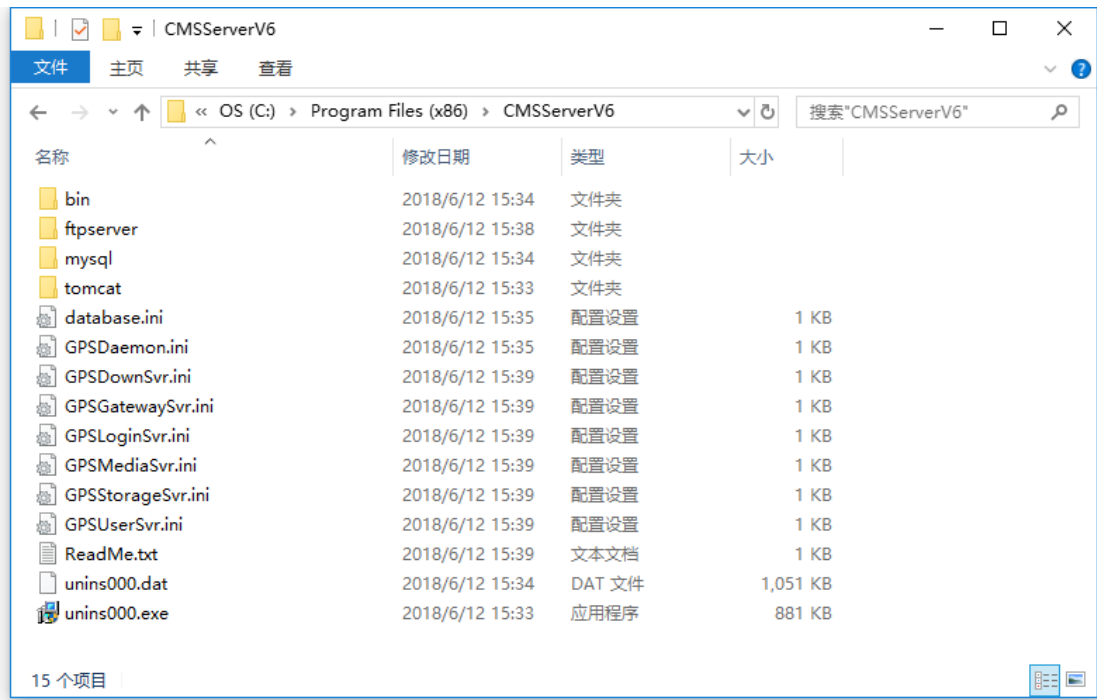

Find file location of database under the configuration file

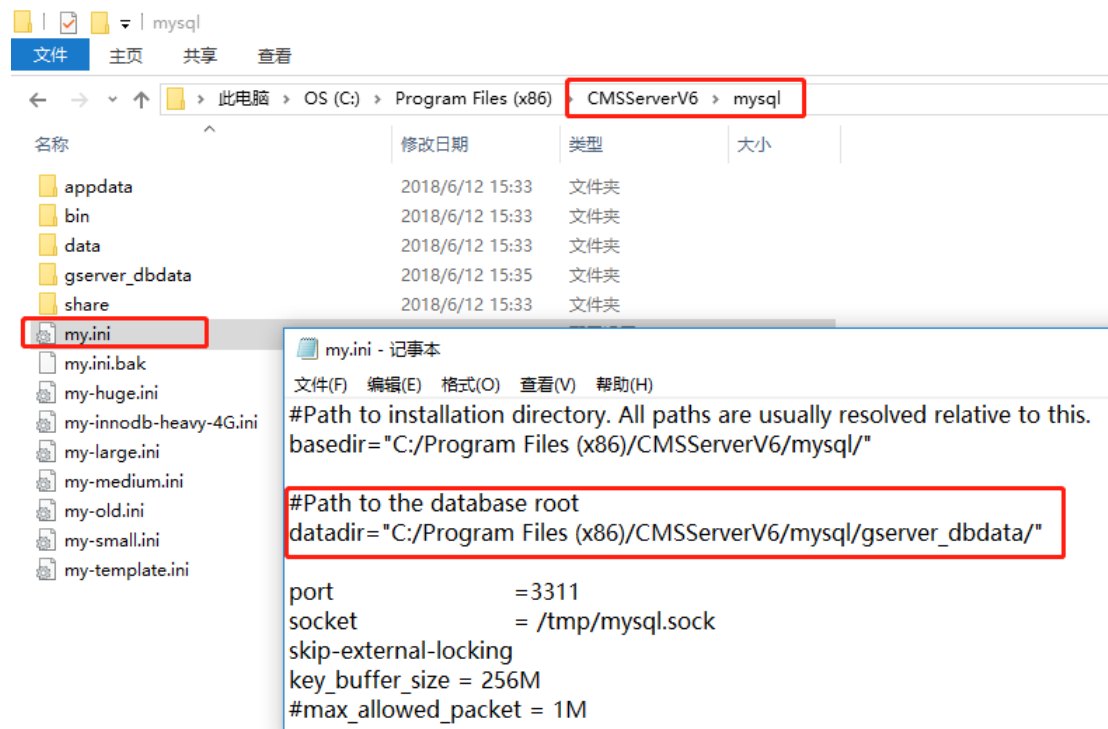

Note: After server software exits, the file shall be duplicated to U disk

File Explorer window showing the 'mysql' directory. The path is: 此电脑 > OS (C:) > Program Files (x86) > CMSServerV6 > mysql. The 'gserver\_dbdata' folder is highlighted with a red box.

名称	修改日期	类型	大小
appdata	2018/6/12 15:33	文件夹	
bin	2018/6/12 15:33	文件夹	
data	2018/6/12 15:33	文件夹	
<b>gserver_dbdata</b>	2018/6/12 15:35	文件夹	
share	2018/6/12 15:33	文件夹	
my.ini	2018/6/12 15:35	配置设置	6 KB
my.ini.bak	2017/12/26 19:30	BAK 文件	6 KB
my-huge.ini	2017/12/26 19:30	配置设置	5 KB
my-innodb-heavy-4G.ini	2017/12/26 19:30	配置设置	21 KB
my-large.ini	2017/12/26 19:30	配置设置	5 KB
my-medium.ini	2017/12/26 19:30	配置设置	5 KB
my-old.ini	2017/12/26 19:30	配置设置	9 KB
my-small.ini	2017/12/26 19:30	配置设置	3 KB
my-template.ini	2017/12/26 19:30	配置设置	13 KB

2. If new server computer is reinstalled with server software, database file duplicated just now shall be put to database file under the installation path after completion of installation (database file newly installed needs to be deleted firstly and exiting of server software shall be conducted at the same time.

File Explorer window showing the 'mysql' directory. The path is: 此电脑 > OS (C:) > Program Files (x86) > CMSServerV6 > mysql. The 'my.ini' file is highlighted with a red box.


名称	修改日期	类型	大小
appdata	2018/6/12 15:33	文件夹	
bin	2018/6/12 15:33	文件夹	
data	2018/6/12 15:33	文件夹	
gserver_dbdata	2018/6/12 15:35	文件夹	
share	2018/6/12 15:33	文件夹	
<b>my.ini</b>	2018/6/12 15:35	配置设置	6 KB
my.ini.bak	2017/12/26 19:30	BAK 文件	6 KB
my-huge.ini	2017/12/26 19:30	配置设置	5 KB
my-innodb-heavy-4G.ini	2017/12/26 19:30	配置设置	21 KB
my-large.ini	2017/12/26 19:30	配置设置	5 KB
my-medium.ini	2017/12/26 19:30	配置设置	5 KB
my-old.ini	2017/12/26 19:30	配置设置	9 KB
my-small.ini	2017/12/26 19:30	配置设置	3 KB
my-template.ini	2017/12/26 19:30	配置设置	13 KB

## IV. Direction for use of WEB client


### 4.1 Login interface and operation interface

#### 4.1.1 Login interface

Open the browser (above IE version 8) to enter IP on the server (if WEB port fails to be 80, please add port number) and then skip to login interface.

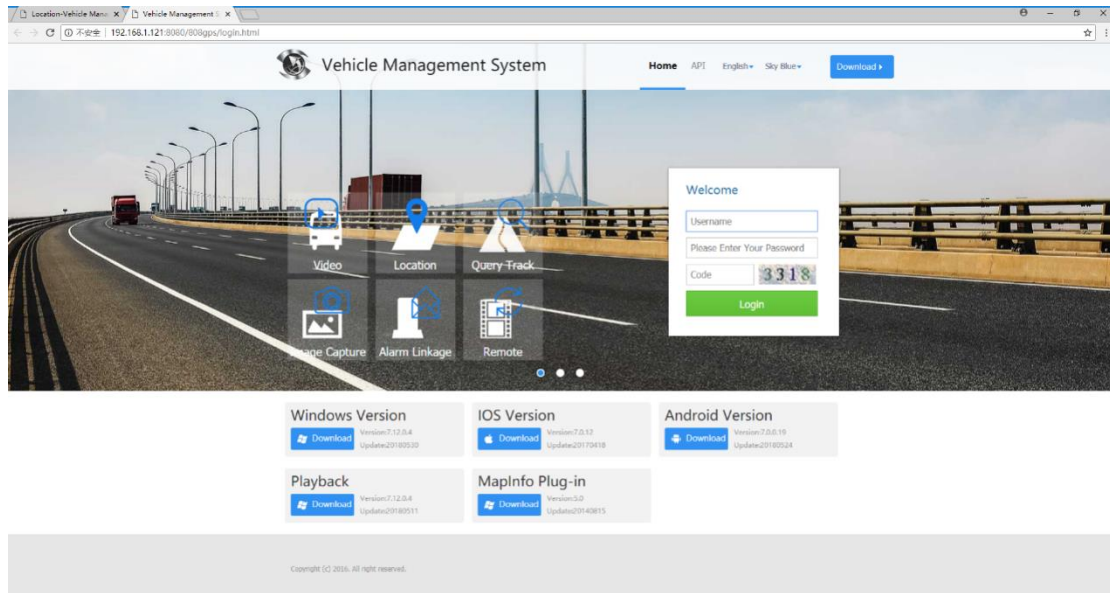

#### 4.1.2 Operating interface

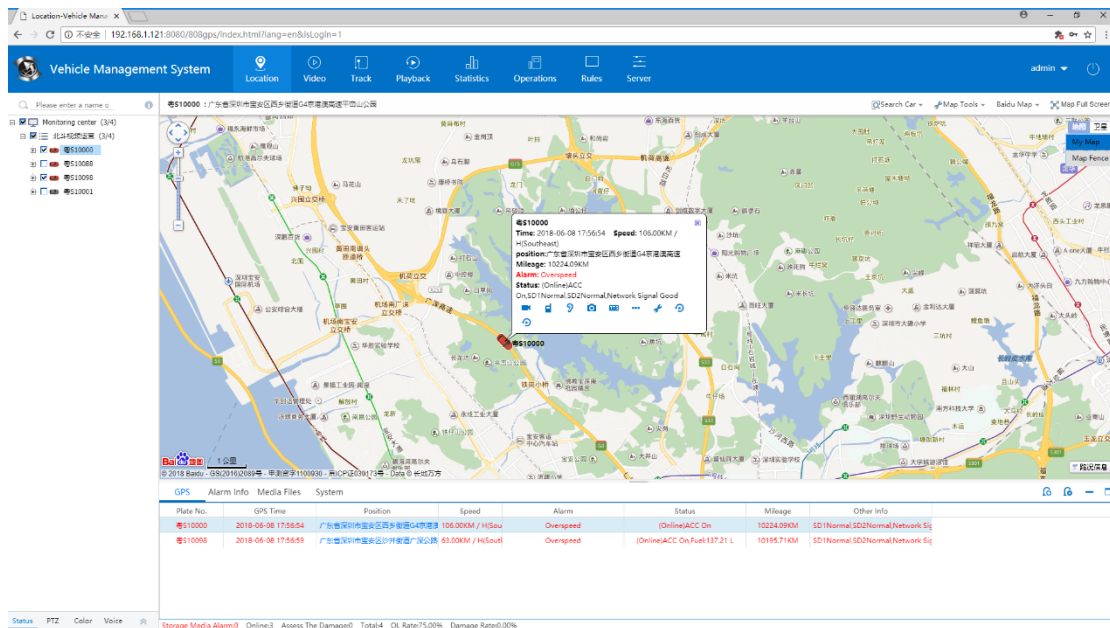

## 4.2 Operations management

### 4.2.1 Composition of operation and management

Operation and management mainly consist of vehicle information, motorcade management, user information, role management, company information, equipment management, SIM card information, driver information, insurance information and expiration reminder


### 4.2.2 Increasing vehicles rapidly

Increase vehicle rapidly to collect all functions of the operation-increase of vehicle in the operation and management as well as facilitate operation of the operation-increase of vehicle by the user.

1. Rapid increase of vehicles: Basic information on increase vehicle

A、Equipment number B, license plate number C and terminal type: Position terminal, video terminal (only name used for distinction on the platform without actual difference) D. number: Refer to camera number E. channel parameters: It's allowed to modify channel name

F. Vehicle icon

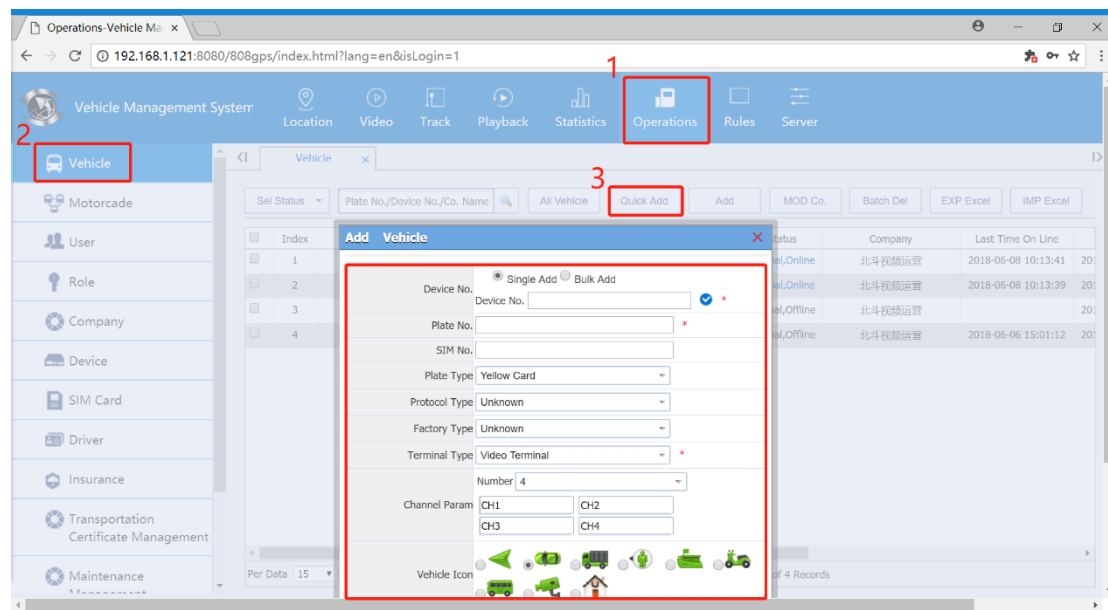

2、Add subordinate companies or motorcades

A、For the company newly added, it's necessary to add primary account number (the authority of the account number is the highest by default)

B. In case of subordinate companies existing, exempt the operation of last step and directly select subordinate companies or motorcades. (In case of selecting the company, the vehicle is deemed to primary account number by default without reauthorization. Note: the company established on the server arising before the version of Feb. 2016 is free from distinction of primary account number. Please refer to primary account number of the company set on the company information in Directory 4.2.3.5)

### 3、Addition of users

Users here fail to be aimed at sub-account

#### A、Newly establishing users

**Add User**

**Basic Info**

Company	Sel Co.	*	
Login Account		*	
Login Password	000000(undefined)	*	Default
The Validity	2019-06-08 00:00:00		Enable
Single Sign On	no	*	
User Level	I	*	V Highest
Role Name(assign permissions)		*	
User Name		*	
Confirm Password	*****	*	
Authorized Number	0		
Disable Password Modification	no	*	

Save Close

Allocate authorities to users

**Edit Privilege**

**Basic Info**

Role Name	主公司监控员	*
Company	北斗视频运营	

- Location
- Audio And Video Surveillance.
- Terminal Control
- Playback Manager
- Statistics
- Operations
- Rule Set
- System Config
- Alarm Management

Sel or Anti-Sel:  |

Save Close

At the moment of creation of the role, there are no company management, motorcade management, user management or role management

B. Users existing can carry out direct authorization to account number as well as conduct authorization to several users at the same time.

**Add Vehicle**
✕

Device No.	<input checked="" type="radio"/> Single Add <input type="radio"/> Bulk Add Device No. <input style="width: 150px;" type="text"/> <span style="float: right; color: blue;">✓</span> *																																		
Plate No.	<input style="width: 150px;" type="text"/> *																																		
SIM No.	<input style="width: 150px;" type="text"/>																																		
Plate Type	<input type="text" value="Yellow Card"/>																																		
Protocol Type	<input type="text" value="Unknown"/>																																		
Factory Type	<input type="text" value="Unknown"/>																																		
Terminal Type	<input type="text" value="Video Terminal"/> *																																		
Channel Param	Number <input type="text" value="4"/> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; border: 1px solid gray; padding: 2px;"><input style="width: 80%;" type="text" value="CH1"/></td> <td style="width: 50%; border: 1px solid gray; padding: 2px;"><input style="width: 80%;" type="text" value="CH2"/></td> </tr> <tr> <td style="border: 1px solid gray; padding: 2px;"><input style="width: 80%;" type="text" value="CH3"/></td> <td style="border: 1px solid gray; padding: 2px;"><input style="width: 80%;" type="text" value="CH4"/></td> </tr> </table>			<input style="width: 80%;" type="text" value="CH1"/>	<input style="width: 80%;" type="text" value="CH2"/>	<input style="width: 80%;" type="text" value="CH3"/>	<input style="width: 80%;" type="text" value="CH4"/>																												
<input style="width: 80%;" type="text" value="CH1"/>	<input style="width: 80%;" type="text" value="CH2"/>																																		
<input style="width: 80%;" type="text" value="CH3"/>	<input style="width: 80%;" type="text" value="CH4"/>																																		
Vehicle Icon	<table style="width: 100%; text-align: center;"> <tr> <td><input type="radio"/></td><td><input checked="" type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td></tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td></tr> <tr> <td></td><td></td><td></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td></tr> </table>			<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>									<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																												
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																												
			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																												
Company / Motorcade	<input type="text" value="Sel Co. / Motorcade"/>		<span style="color: blue;">📄</span> *																																
User Belongs	<input type="text"/>		<span style="color: blue;">📄</span>																																


## 4.2.3 Information management

### 4.2.3.1 Vehicle information

Vehicle query, rapid increase of vehicles, newly-added vehicle, modification of Vehicle Company, deleting in batches, exporting to Excel and importing from Excel.


#### 1. Vehicle query

A. Choosing and query can be conducted as per vehicle status (entire, normal, online, maintenance, deactivation and arrearage) and it's also allowed to fill in license plate number and equipment number for query or display all vehicles. As shown in the following figure

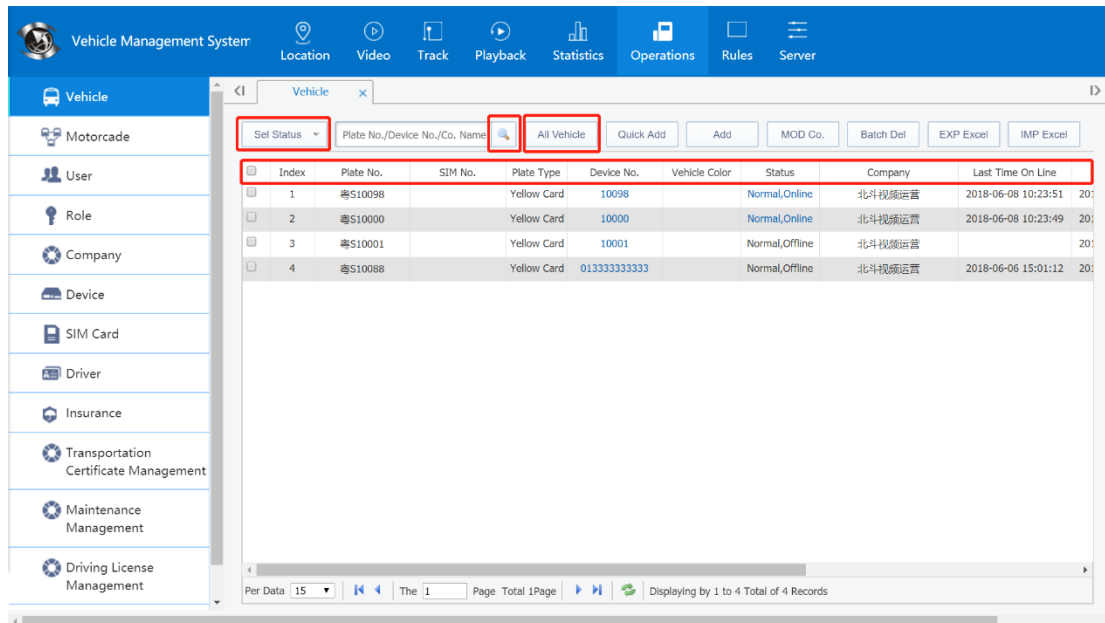


As shown in the figure above: Displayed contents: License plate number, vehicle type, equipment number, vehicle color, status, subordinate companies and operation


B. Operating: Detail (viewing vehicle information)

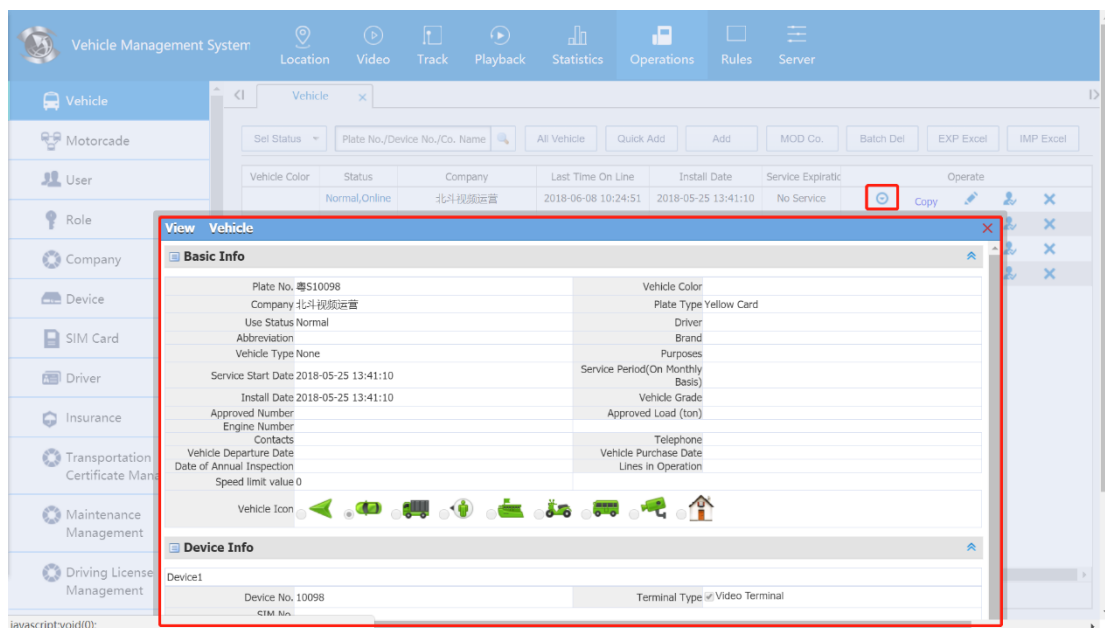


Editing: Basic information on vehicle information and equipment information

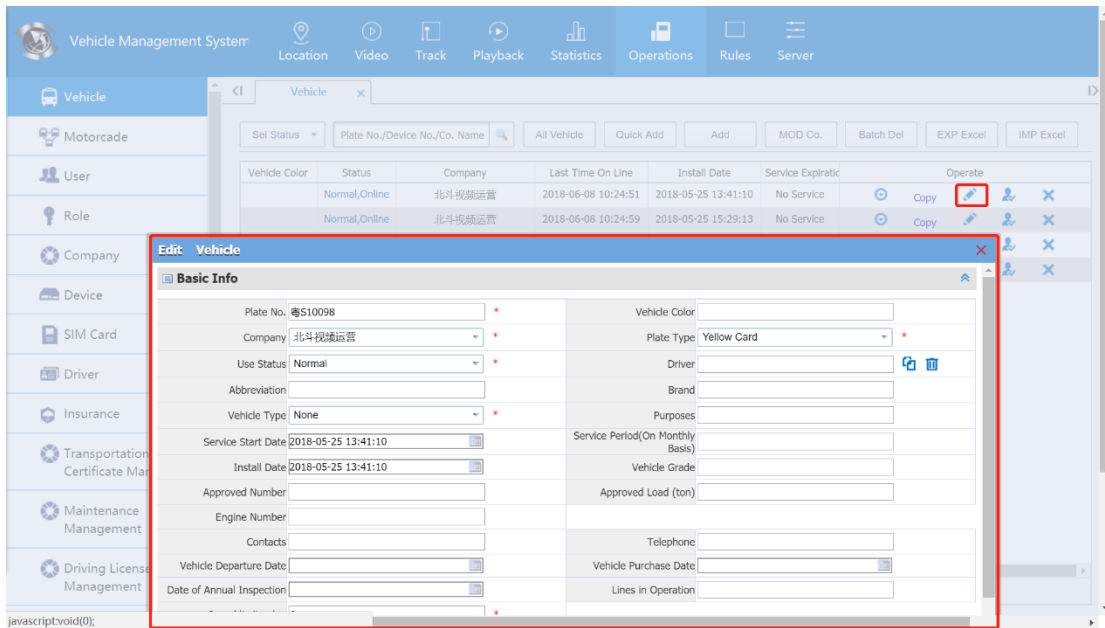


User authorization: The vehicle is authorized to the user (the premise is that the user and the vehicle belong to the same company)

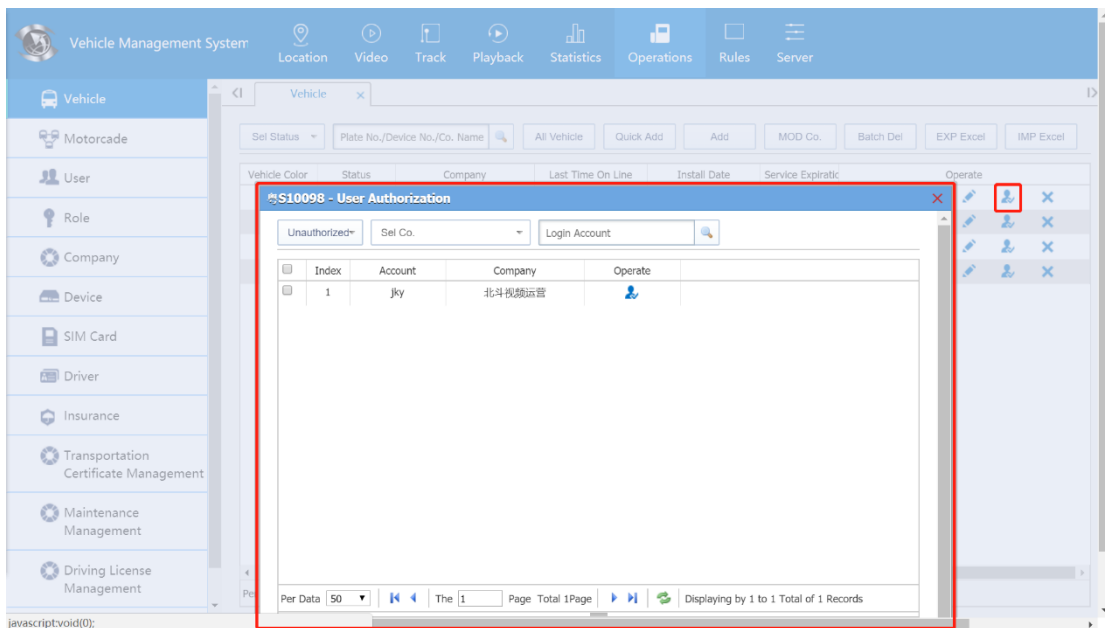


Deleting: Vehicle and equipment number shall be deleted at the same time

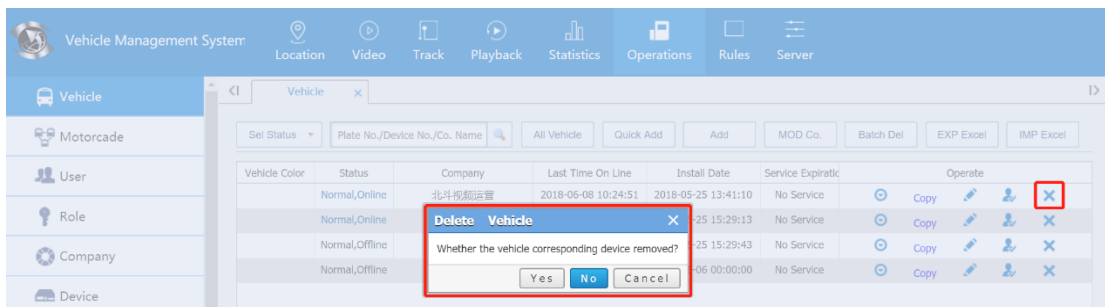

2. Newly-added vehicle: Gathering detailed information on newly-added vehicles and all information on terminal equipment. **Note: When the equipment is connected to peripheral module, it's necessary to check corresponding one and then the client will display corresponding function.** As shown in the following figure:

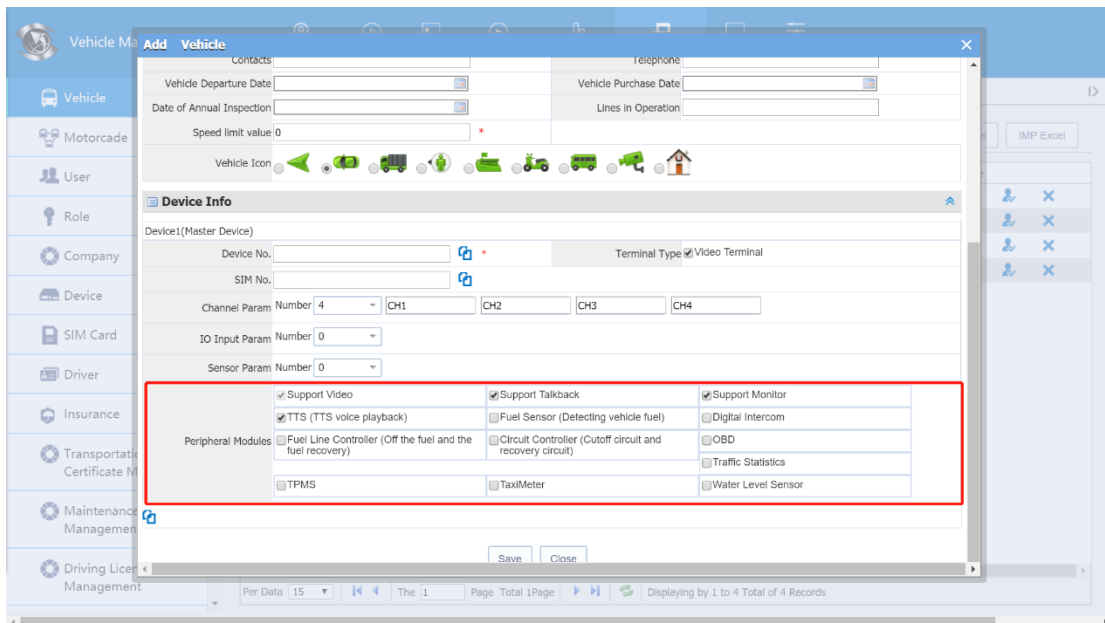

3. Modification of Vehicle Company: When the vehicle wrongly distributed to other company is found, it's allowed to click to check corresponding vehicle and click modification of company

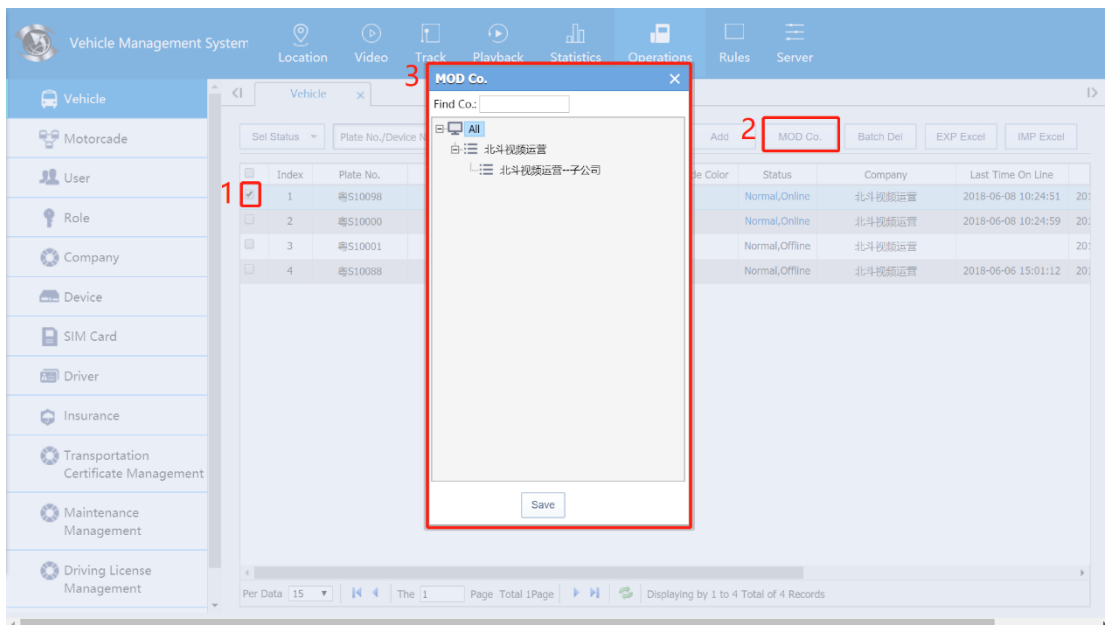


4. Bulk deletion: The vehicle can be deleted in batches by checking the button on the left

5. Export to Excel and import from Excel: It's allowed to export added vehicle information to Excel and import information to other account number.


### 4.2.3.2 Motorcade management

When vehicles are distributed to primary account number of the company, we can consider distribution of vehicles to the motorcade and distribution of the subaccount for the motorcade to motorcade personnel for usage.


A. Addition of motorcade: Click company node and addition of motorcade as well as fill in motorcade name

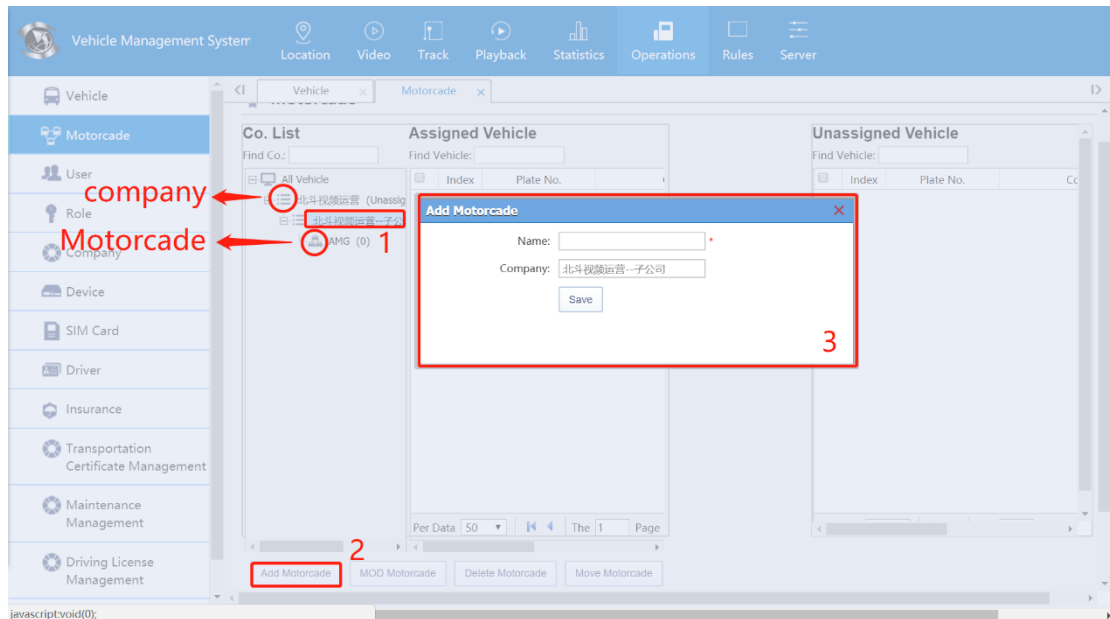

B. Modification of motorcade: Select motorcade node and click modification of motorcade to modification motorcade name

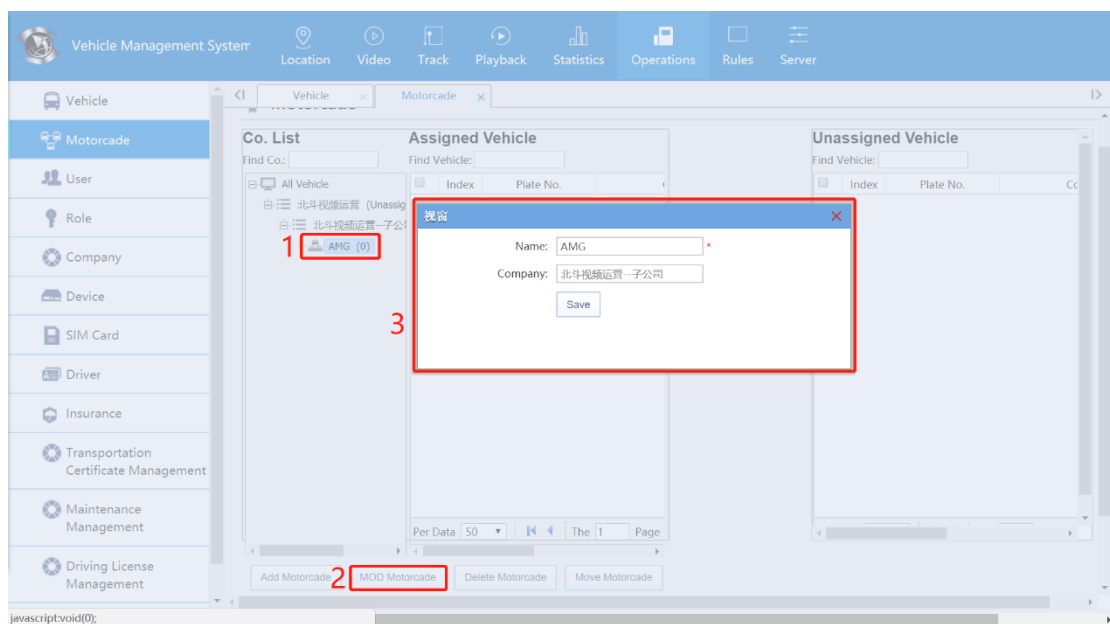


C. Deletion of motorcade: Select motorcade node and click deletion of motorcade

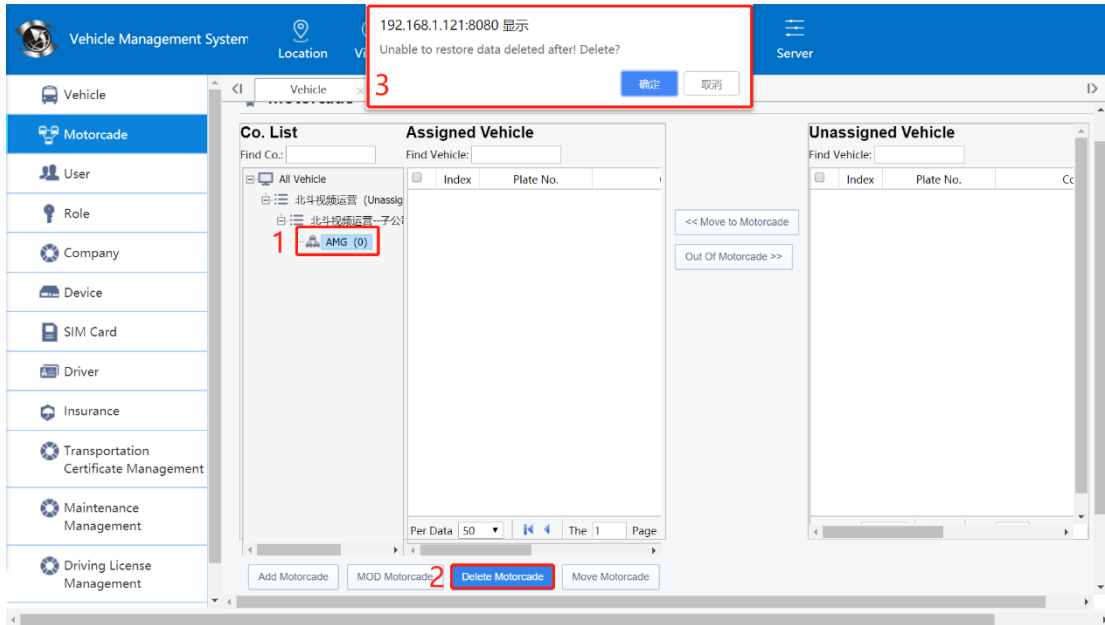

D. Movement of motorcade: Movement can be conducted under the same company

After establishment of motorcade, the vehicle can be moved to corresponding motorcade. Click company and motorcade to select and move undistributed vehicle to the motorcade or remove the vehicle from the motorcade. The operation is shown in the following figure:

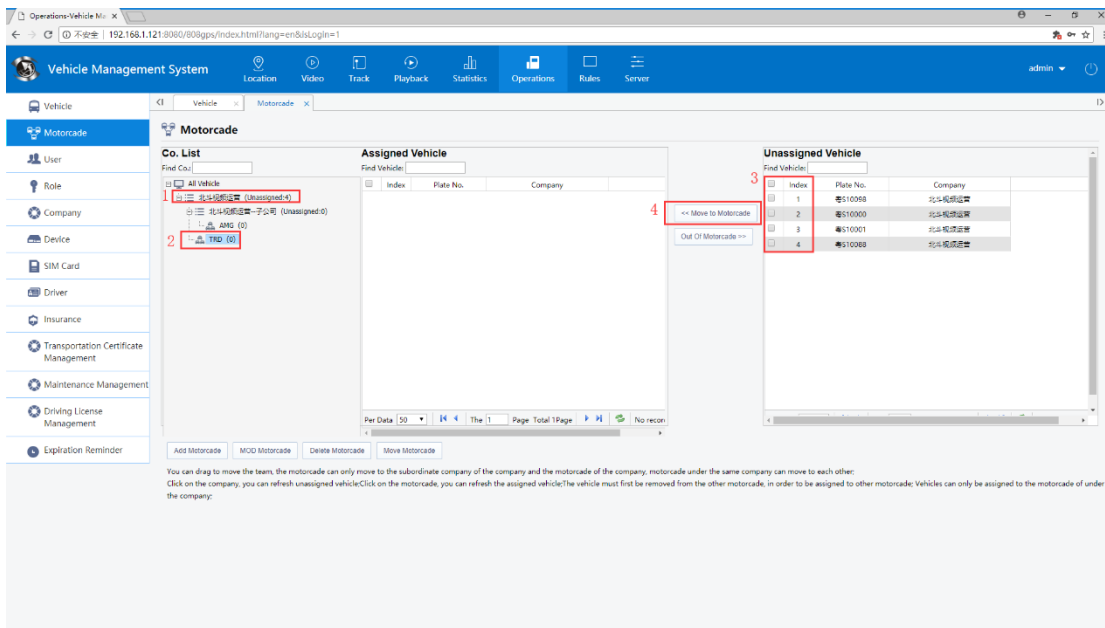

**Note:** For distributed motorcade, corresponding user account number can be newly added in the following user information and it's suggested that privilege is checked by default.

#### 4.2.3.3 User information

User information mainly includes User query, addition of new users and operation

## 1. User query

The screenshot shows the 'User' query page in the Vehicle Management System. The interface includes a top navigation bar with icons for Location, Video, Track, Playback, Statistics, Operations, Rules, and Server. A left sidebar contains menu items: Vehicle, Motorcade, User (selected), Role, Company, Device, SIM Card, Driver, Insurance, Transportation Certificate Management, and Maintenance Management. The main content area displays a table of users with the following data:

Index	Login Account	Name	Update Time	Company	Status	Operate
1	bdsp	bdsp	2018-05-25 13:40:46	北斗视频运营	use	▼ 👤 🔄 ✎ ✕
2	jky	jky	2018-05-25 15:02:42	北斗视频运营	use	▼ 👤 🔄 ✎ ✕
3	sbdsp	sbdsp	2018-05-25 14:35:33	北斗视频运营-子公司	use	▼ 👤 🔄 ✎ ✕
4	sjky	sjky	2018-05-25 15:03:14	北斗视频运营-子公司	use	▼ 👤 🔄 ✎ ✕

At the bottom of the table, there is a pagination control showing 'Per Data 15', 'The 1 Page Total 1Page', and 'Displaying by 1 to 4 Total of 4 Records'.

2. Addition of new users: Subordinate company, login account (used for client login), user name, login password, validity (time limit of the user and it means no time limit in case of no checking for starting using) and role name (namely, role management)

The screenshot shows the 'Edit User' form with the following fields and values:

Company	北斗视频运营 *
Login Account	bdsp *
The Validity	2019-06-11 00:00:00 <input type="checkbox"/> Enable
Single Sign On	no *
User Level	I * V Highest
User Name	bdsp *
Status	use *
Disable Password Modification	no *

Buttons: Save, Close

Management of newly established role: Role name, company (subordinate company), checked item by default is used by ordinary user and others failing to be checked are aimed at permission selection of management.

**Edit Privilege**

**Basic Info**

Role Name: 主公司监控员 \*

Company: 北斗视频运营

Location

Audio And Video Surveillance.

Terminal Control

Playback Manager

Statistics

Operations

Rule Set

System Config

Alarm Management

Sel or Anti-Sel:  |

Save Close

### 3. Operation:

A. Password modification B. Privilege information

C. Vehicle authorization: Select corresponding vehicle from unauthorized ones to carry out authorization of the account number

**S10098 - User Authorization**

Unauthorized Sel Co. Login Account

<input type="checkbox"/>	Index	Account	Company	Operate
<input type="checkbox"/>	1	jky	北斗视频运营	

Per Data: 50 The 1 Page Total 1Page Displaying by 1 to 1 Total of 1 Records


Authorize Close

D. Details: Viewing data


E. Editing: Modification of user information

#### 4.2.3.4 Role management

##### Viewing role name and newly-added role

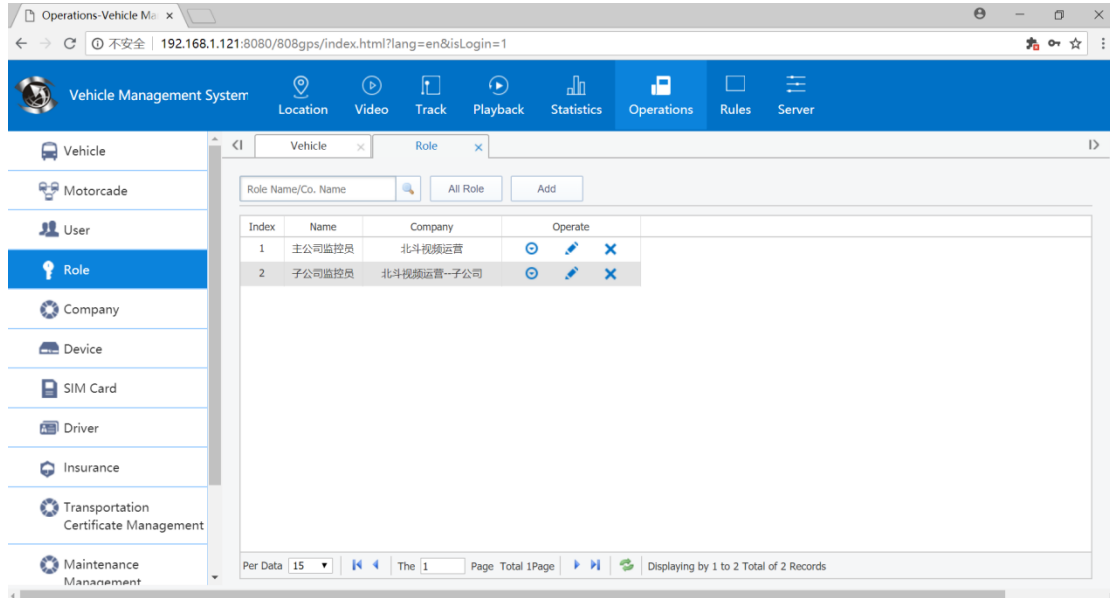

Management of newly established role: Role name, company (subordinate company), checked item by default is used by ordinary user and others failing to be checked are aimed at permission selection of management.

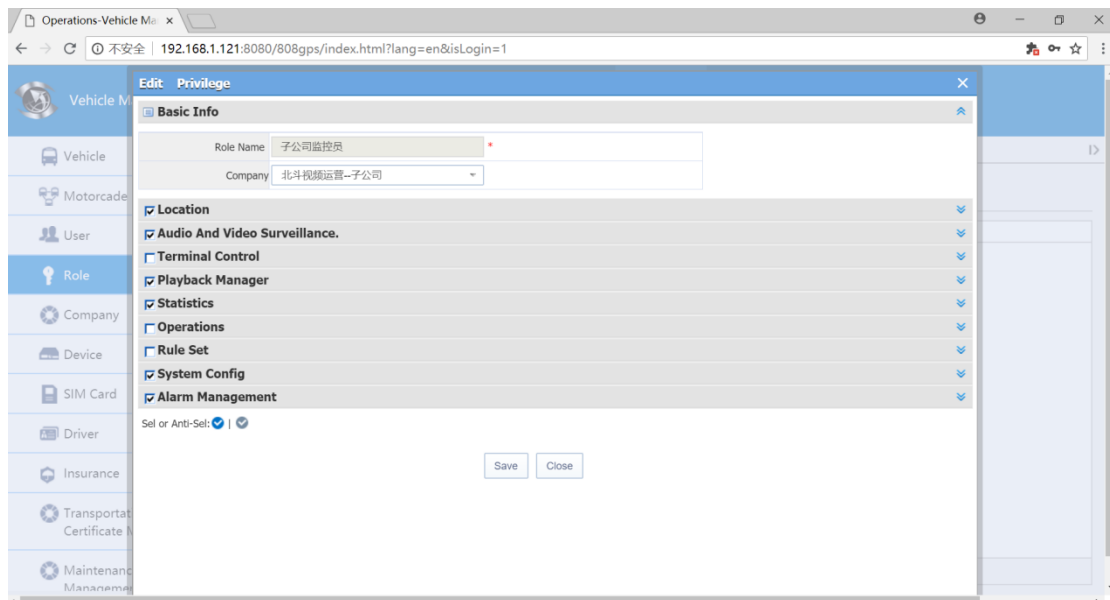


#### 4.2.3.5 Company information

##### Company query and new company


A、Primary account number is distributed to the company

Note: Be careful at the time of selecting primary account number which is forbidden to be modified after selection.

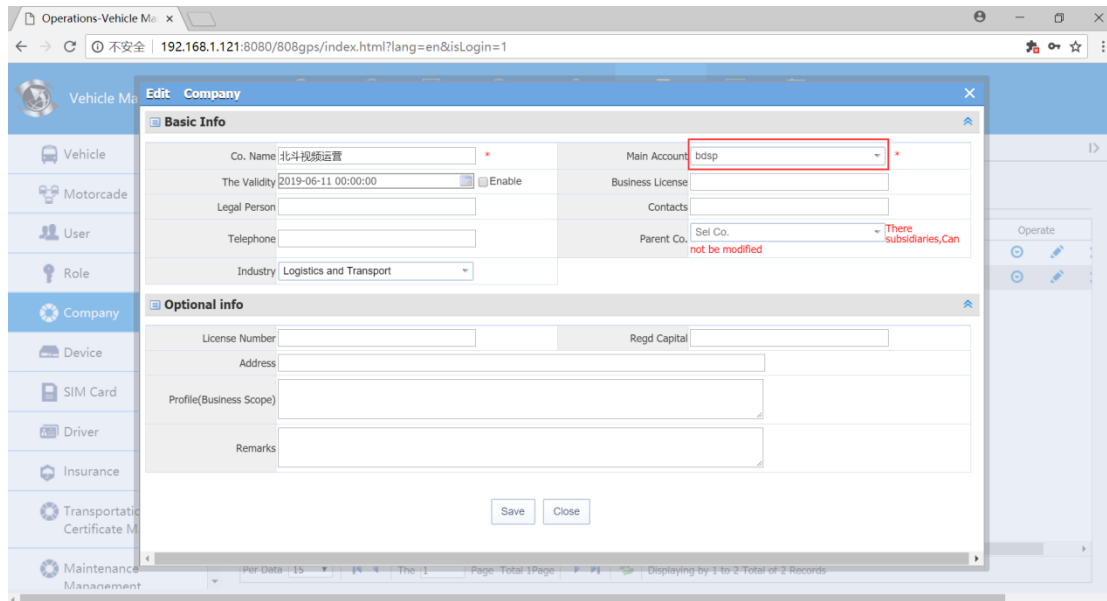

## Equipment management

B. Equipment query: Query as per installation situation and equipment number. Query page is as follows

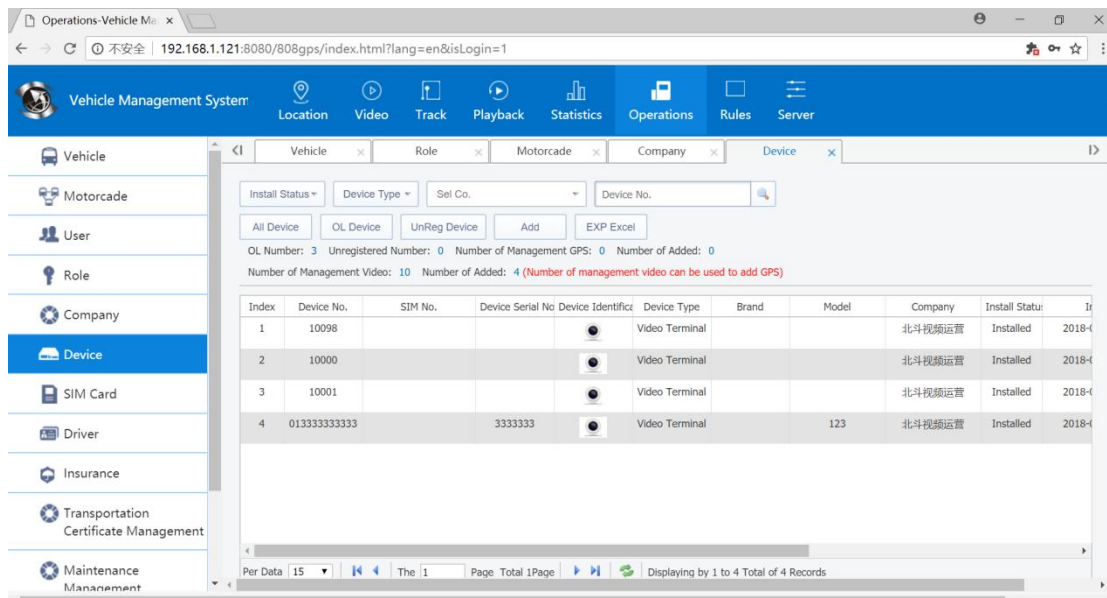

Number of system management equipment: Refer to quantity of server software management equipment

Number of added equipment: Refer to quantity of added equipment



Number of equipment could be added: Number of system management equipment-number of added equipment

Number of online equipment: Refer to number of online registration server

Number of unregistered equipment: Refer to number of equipment with registered server but no equipment number added

#### 4.2.3.6 SIM card information

Query of SIM card and newly-added SIM card

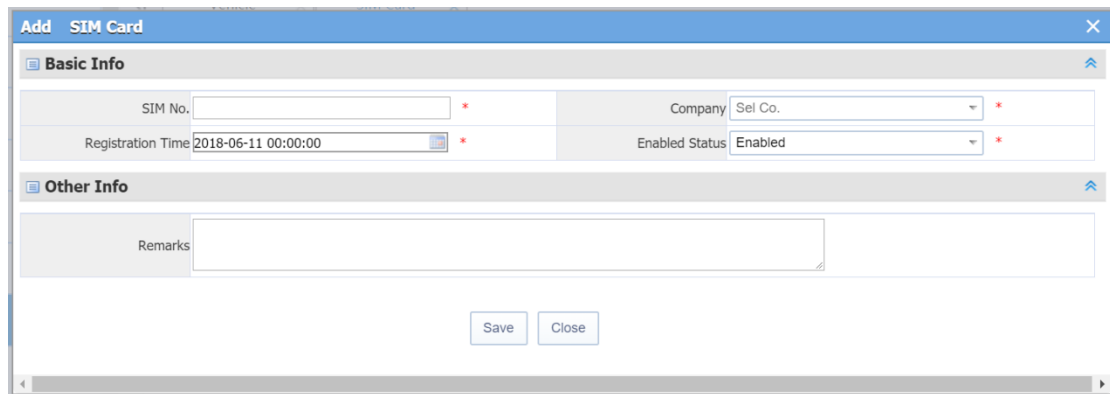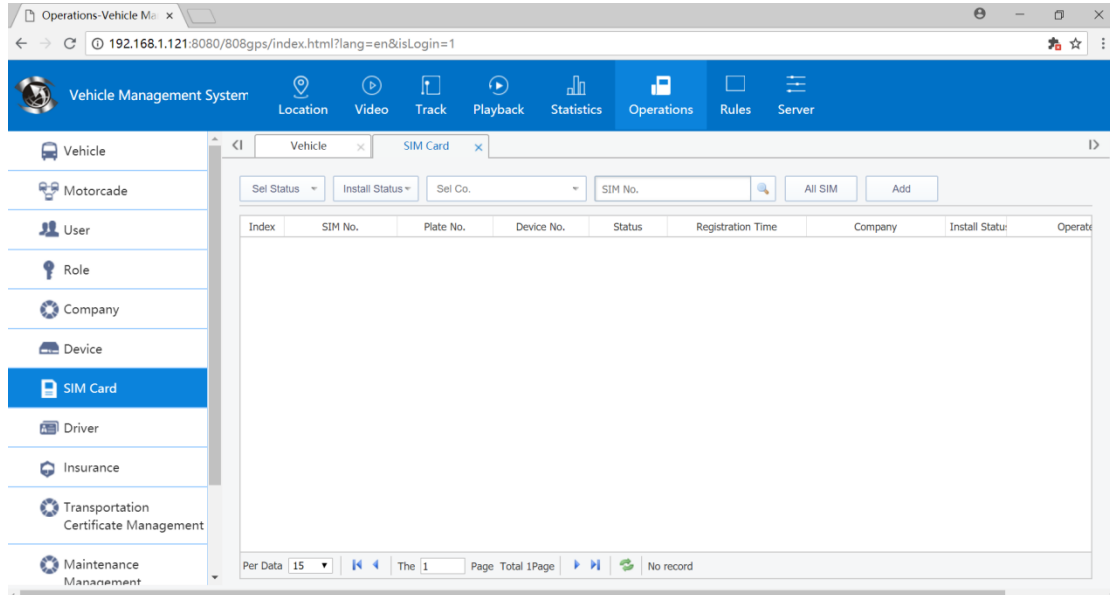


#### 4.2.3.7 Driver information

Query of driver information and information on newly added driver

#### 4.2.3.8 Insurance information


Insurance information

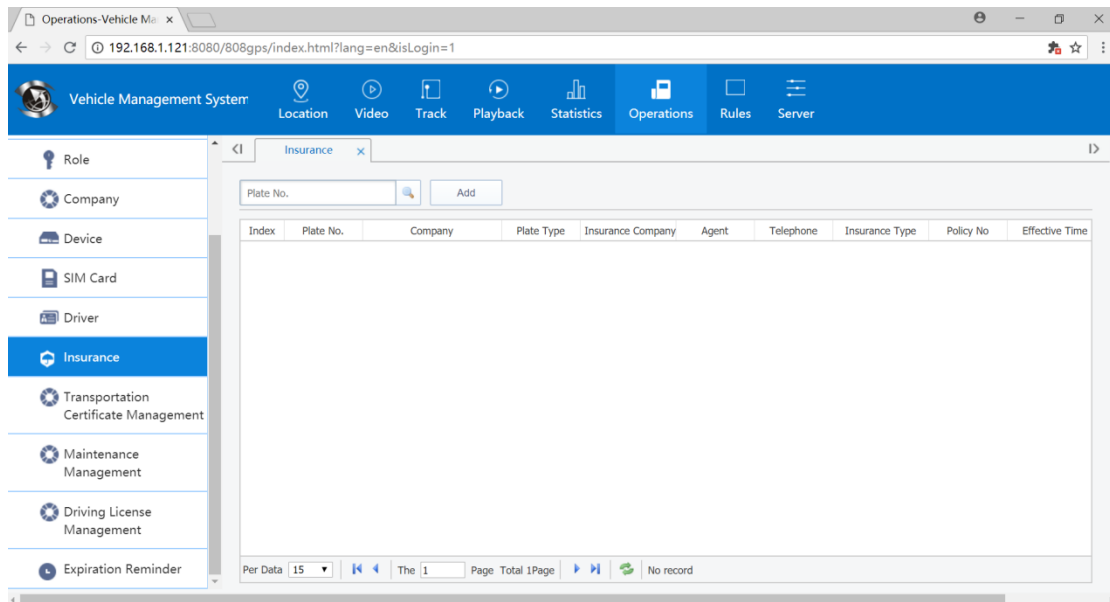


#### 4.2.3.9 Expiration reminder

Expiration reminder is a statement for managing equipment usage time

1、 Firstly, restriction against usage time of the vehicle shall be set

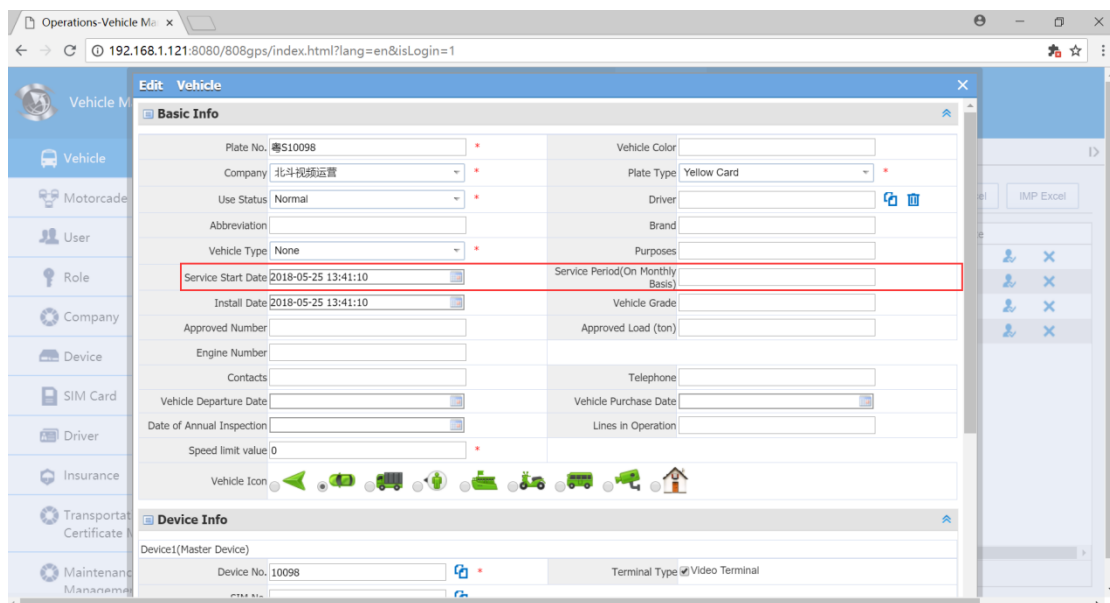

2、 Data can be viewed at the moment of expiration reminder

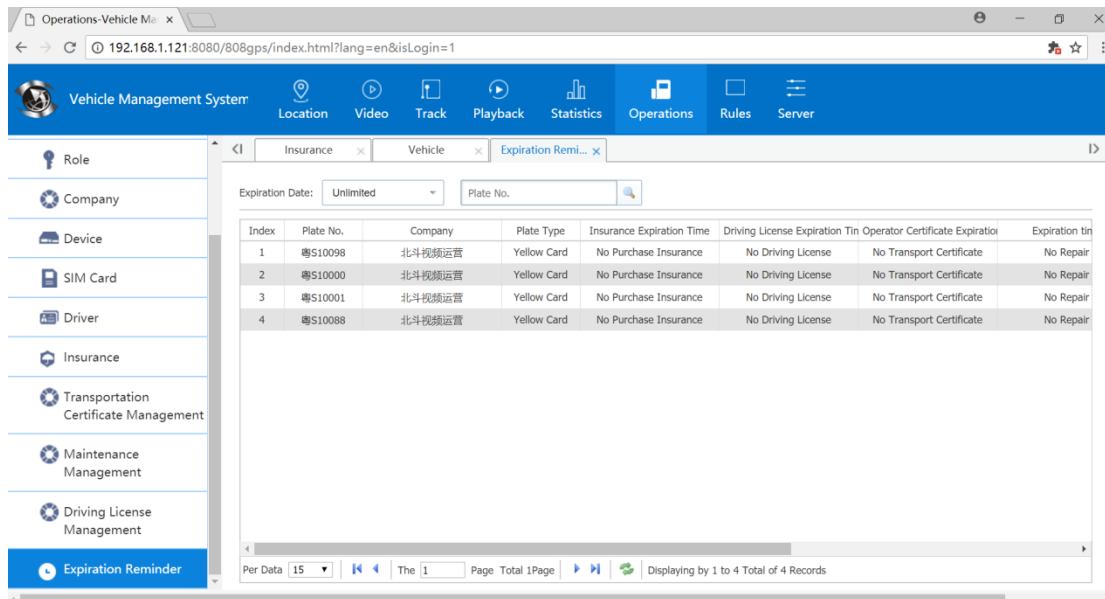


### 4.3 Position orientation

Real-time monitoring against the equipment in the terminal list on the left can be conducted on the CMSV6 webpage client and geographic location shall be displayed on the map.

#### 4.3.1 Electronic map monitoring


1. After selecting the equipment to be monitored in the equipment list, real-time monitoring can be realized by checking and real-time monitoring will be cancelled by removing checking.
2. For the equipment selected to undergo real-time monitoring, detailed information about such equipment will be displayed on the map, including equipment name, current running speed and date, mileage of the same day, total mileage, drive information, location and alarm information; In addition, such functions as video, talkback and monitoring are enabled.
3. Method of switching map type

Map switch at the upper right corner of the map exists and there are three choices: Baidu Map, google and amap.com

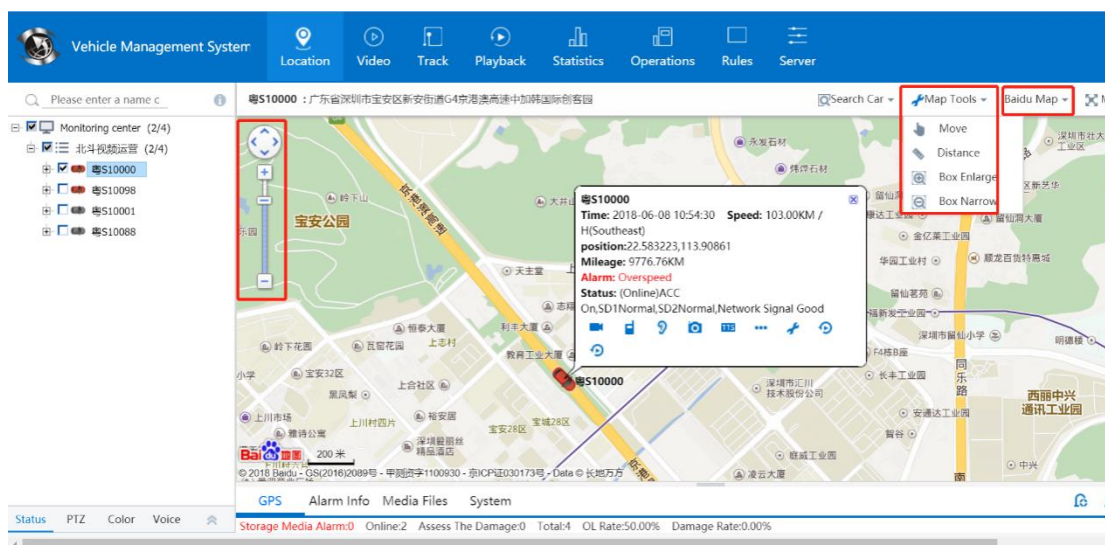

**Zooming:** The user can drag up and down scrollbars on the left of the map or click "+" and "-" buttons to magnify or shrink the map.

4. For vehicle check by frame, vehicle location can be checked after selecting one region.

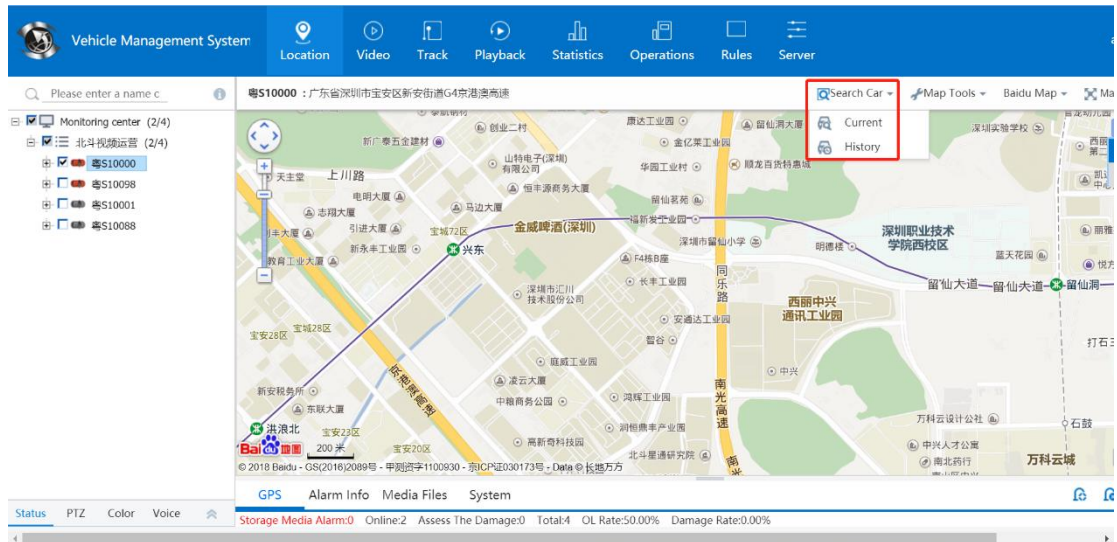


### 4.3.2 Information bar

Display: Definition of vehicle color, GPS monitoring, alarm information, media file and system event.


#### 4.3.2.1 GPS monitoring

Longitude and latitude for the position is displayed by default

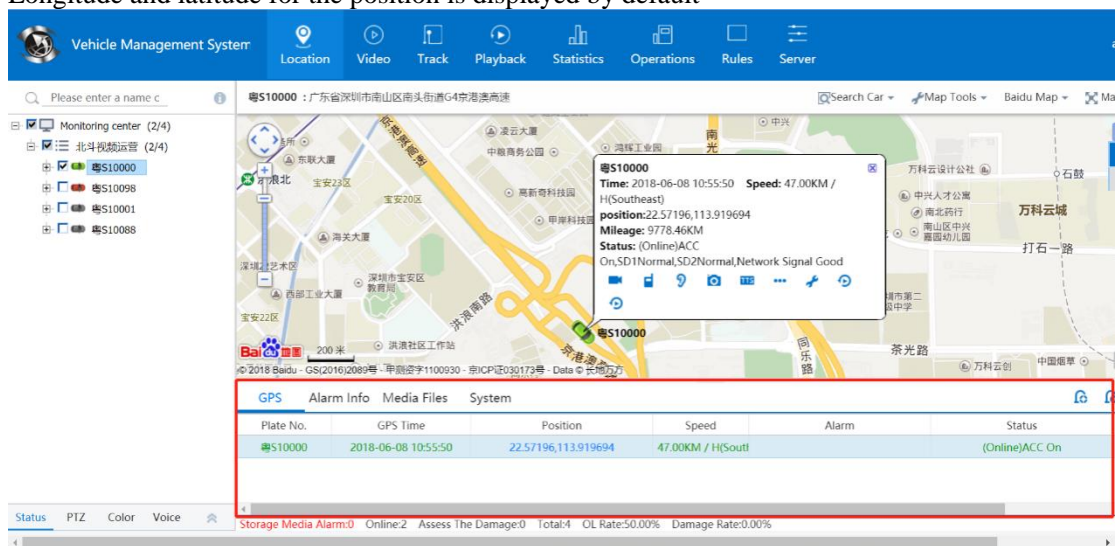


### 4.3.2.2 Alarm information

Query and remark of alarm can be conducted and your disposal remark content can be viewed in the alarm.

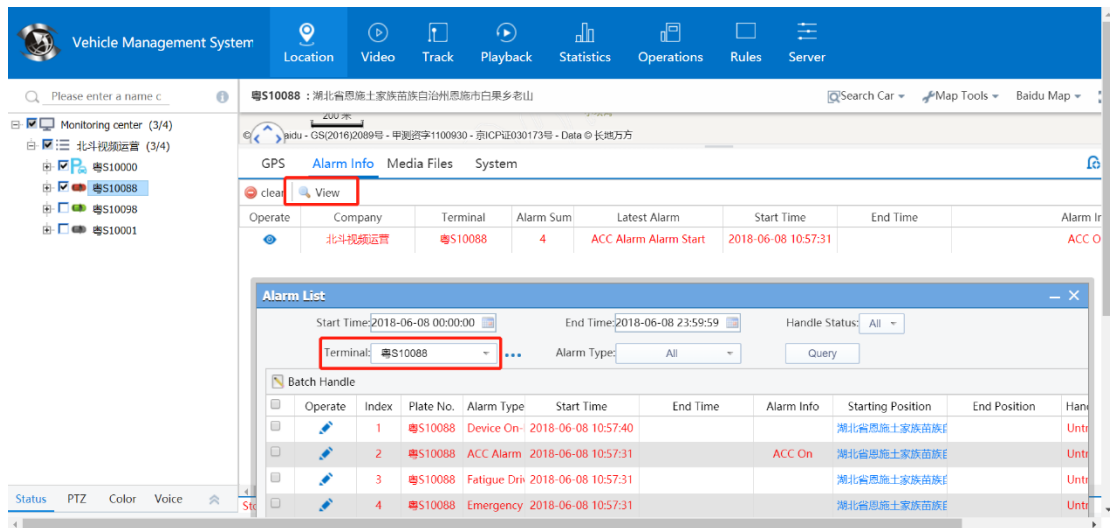


Statistics of generated alarm from the alarm list can be conducted as well as alarm disposal information can be inquired

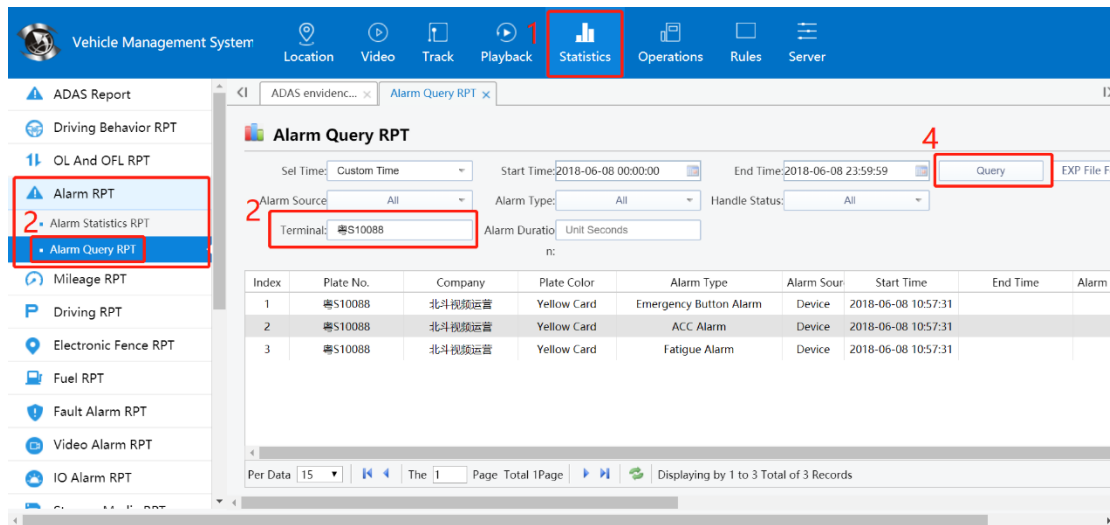


### 4.3.2.3 Media files

Real-time display of including operation snapshot, video and recording voice recorded on the interface or files regarding media such as picture and video files uploaded by the equipment will arise here.

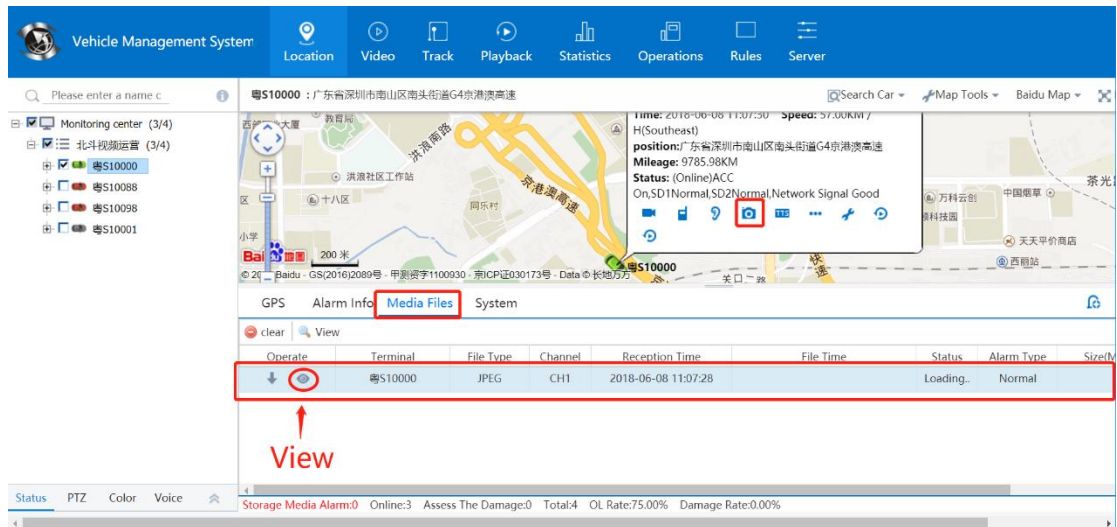

The statement of media files can be inquired on the multimedia statement

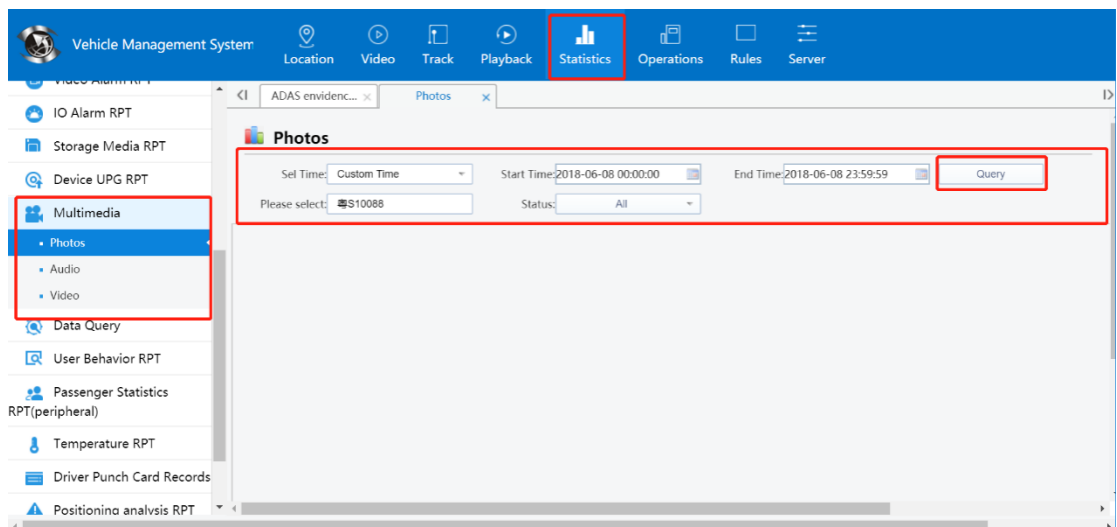


#### 4.3.2.4 System events

1. Recording vehicle control by the user as well as GPS report interval setting.

Vehicle control: Restart the equipment, reset to factory setting, and carry out mileage liquidation and remove alarm (for equipment)

GPS report interval setting: Only data concerning GPS interval is displayed by GPS monitoring

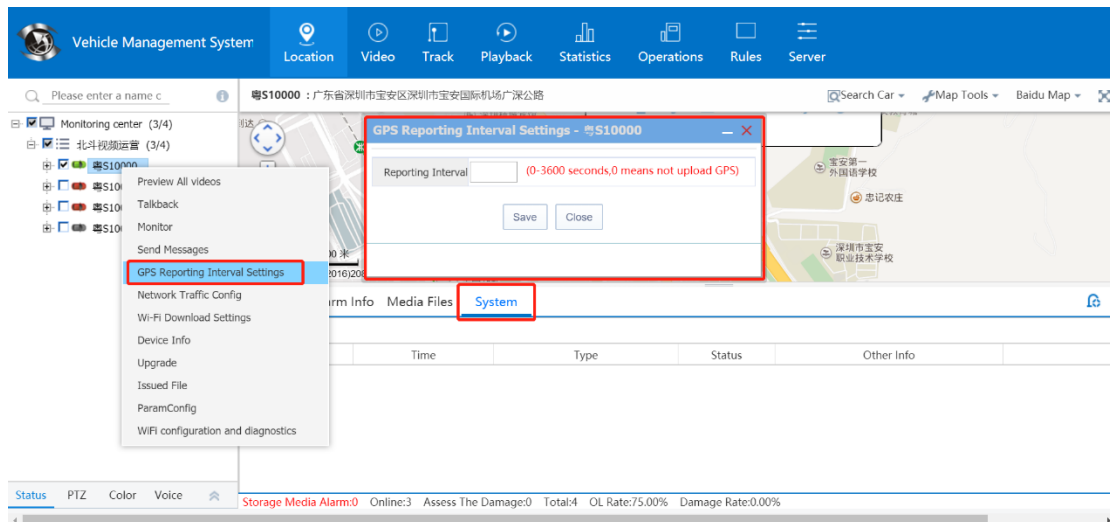


## 4.4 Real-time video

The interface switches to video and real-time video preview in the video window can be realized by direct double-click of the equipment in the equipment list. The user can also open channel video of designated equipment in the designated video preview window (the time of preview video frame shall be synchronous with the time of video frame of installed equipment)

### 4.4.1 Introduction to video form toolbar




Frames of video window mode 1, 4, 6, 8, 9 and 16 are shown in the following figure

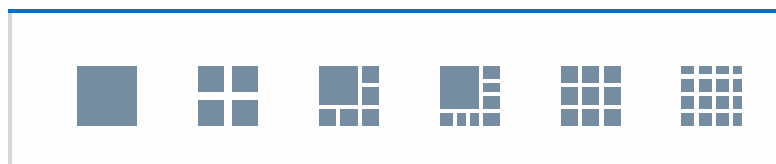


Video frame display mode: 1-Display of full screen 2- 4:3 display 3- 16:9 display


#### 1. Effect of full screen display

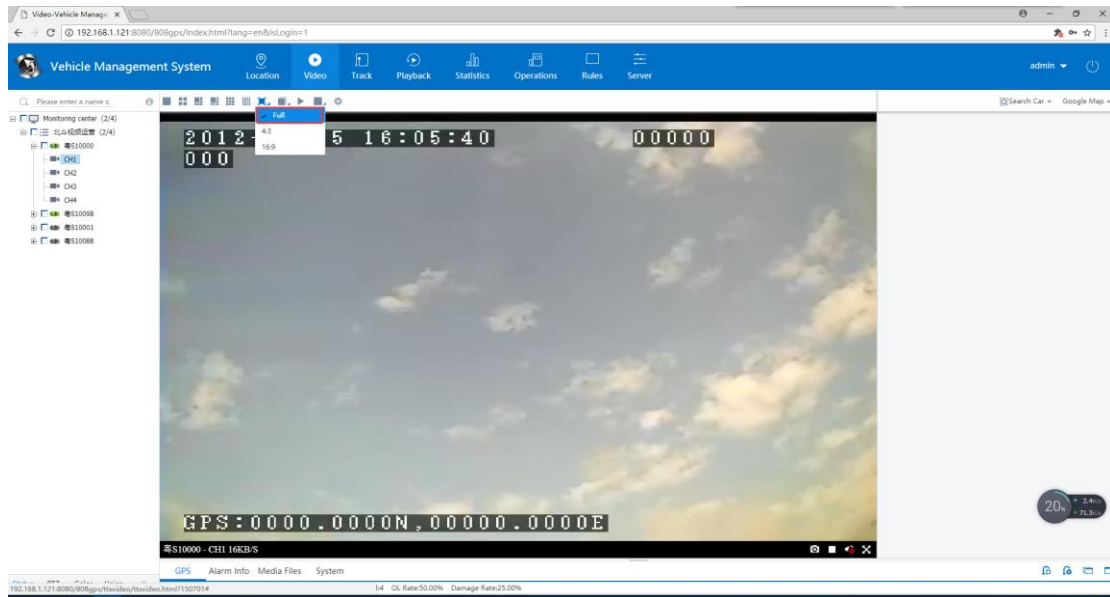

**4:3 display effect:** Video is displayed based on aspect ratio of 4:3

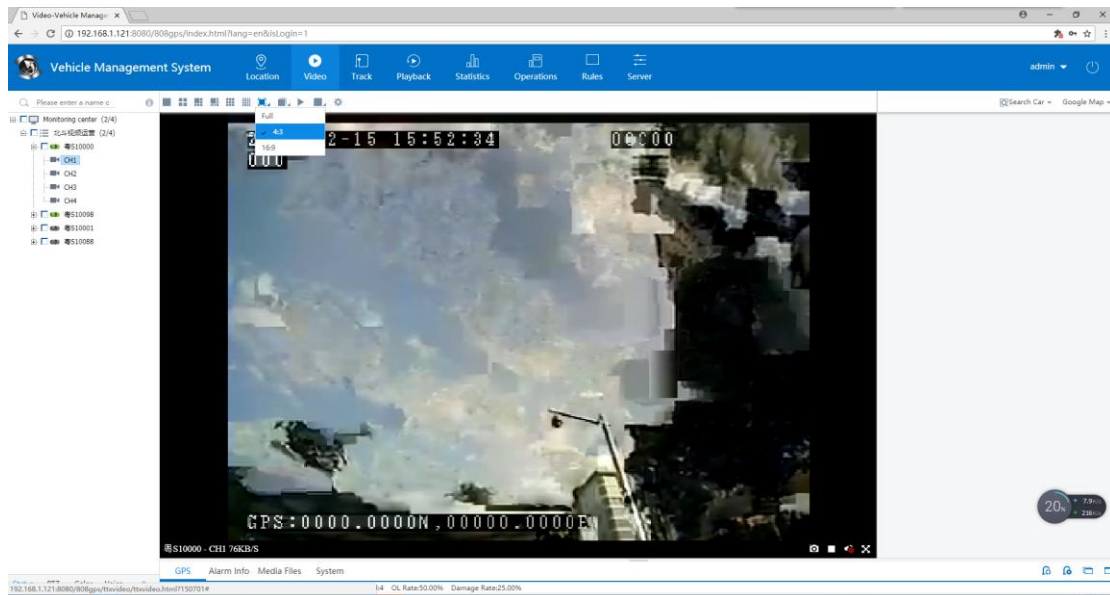

**16:9 display effect:** Video is displayed based on aspect ratio of 16:9

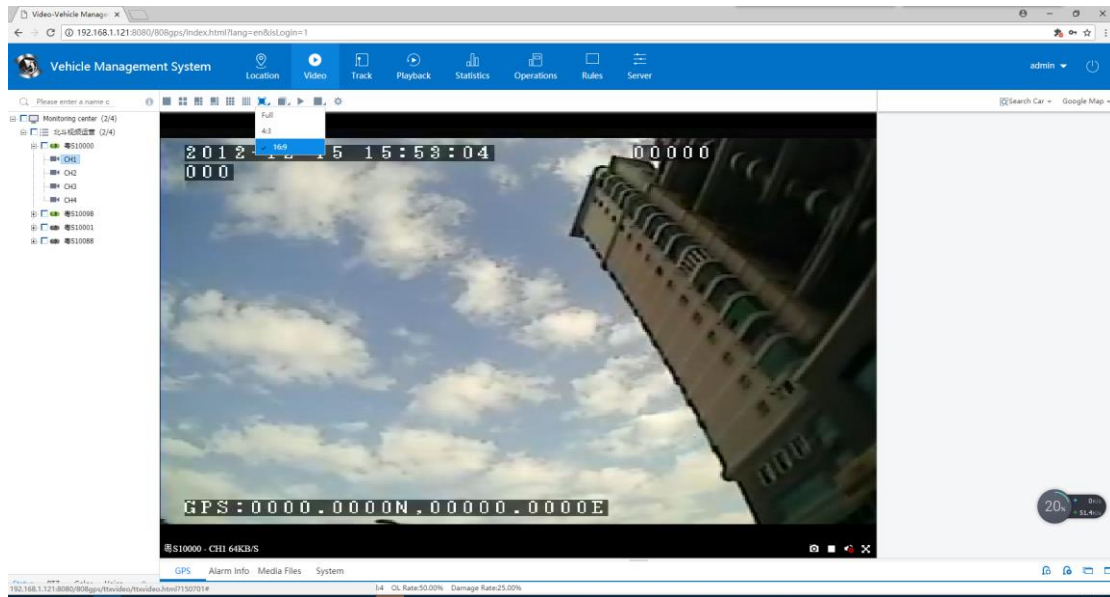


**Selection of video effect: Good real-time:** Giving priority to ensuring video instantaneity



**Good fluency:** Giving priority to ensuring video fluency



Stopping all videos

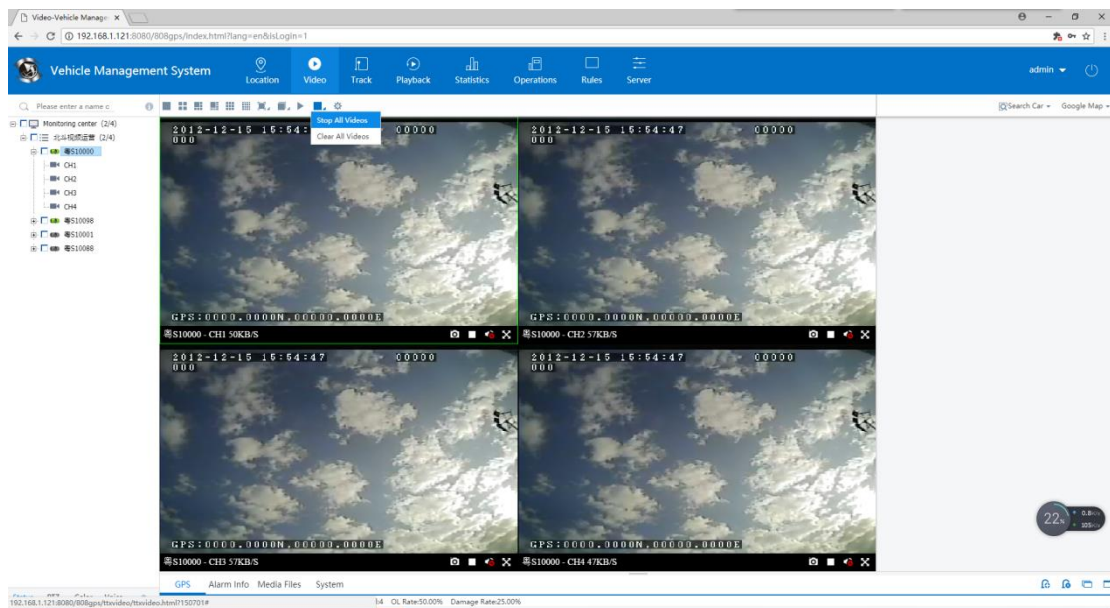

All videos can be opened and eliminated only after the video is opened and stopped firstly.

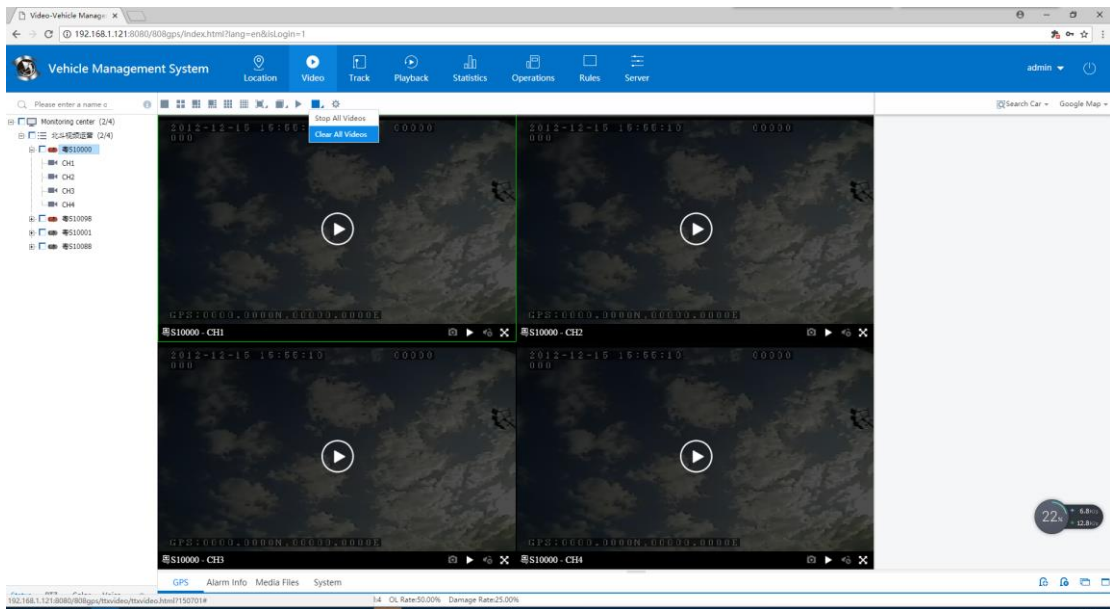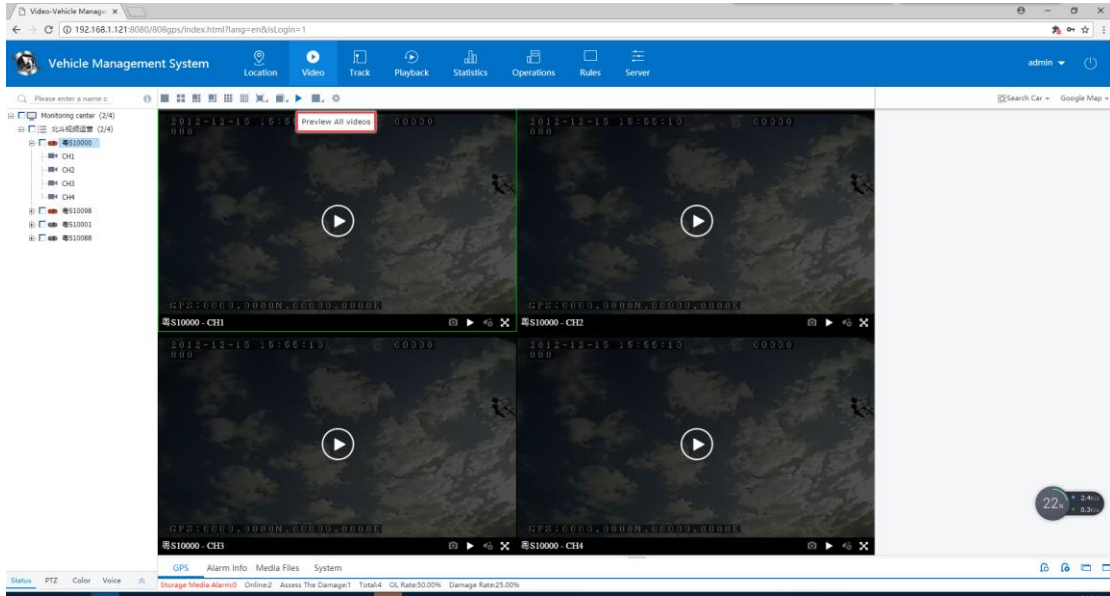

#### 4.4.2 Parameters setting



Video parameters, map parameters and alarm parameters

#### 4.4.2.1 Description about video parameters

Video Param	Parameter	Value
	The default request video	Sub-stream
	Automatic shut-speaking and listening	After 5 minute off
	Automatically turn off the video	After 5 minute off
	Display the highest picture	Display 16 images

Save Close

##### (1) Default request video

When the parameter is used for view screen play, direct click of vehicle node in the left vehicle tree or channel node is conducted to play video, code stream is requested by default (subcode stream or main code stream).

##### (2) Automatic closure of talkback and monitoring


Set default time of talkback or monitoring. When monitoring or talkback time is more than such time, close talkback or monitoring

Automatic closure of video


Set default time of video play. When video play time is more than such time, close video play.

Display of the highest picture


Display of 16 pictures

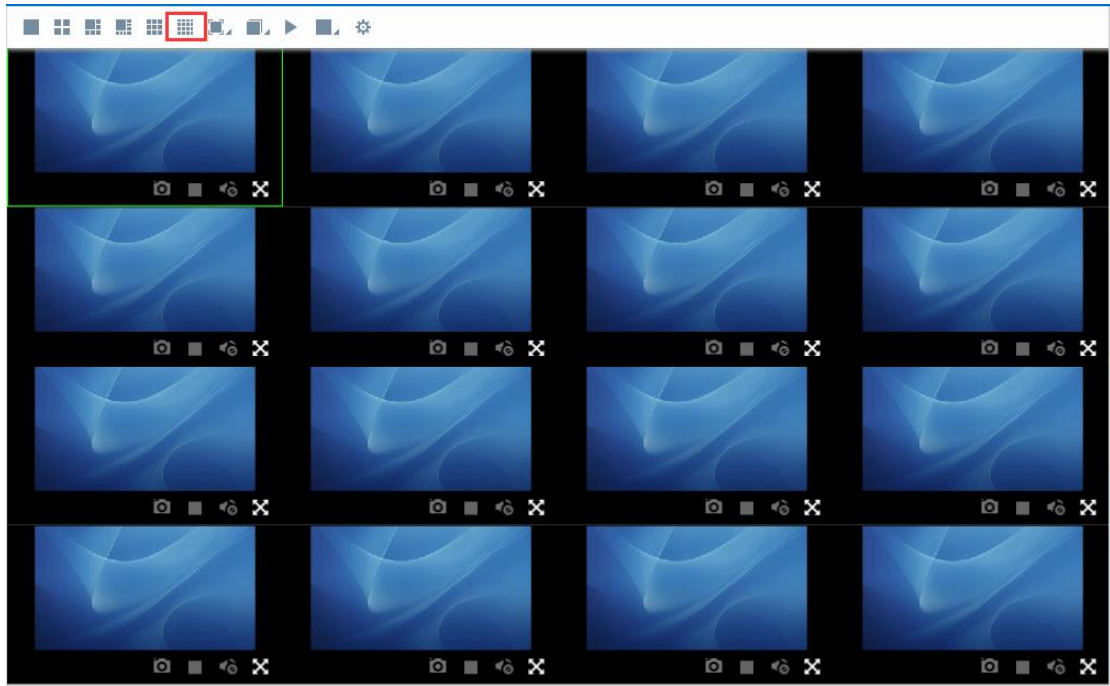

Display of 25 pictures

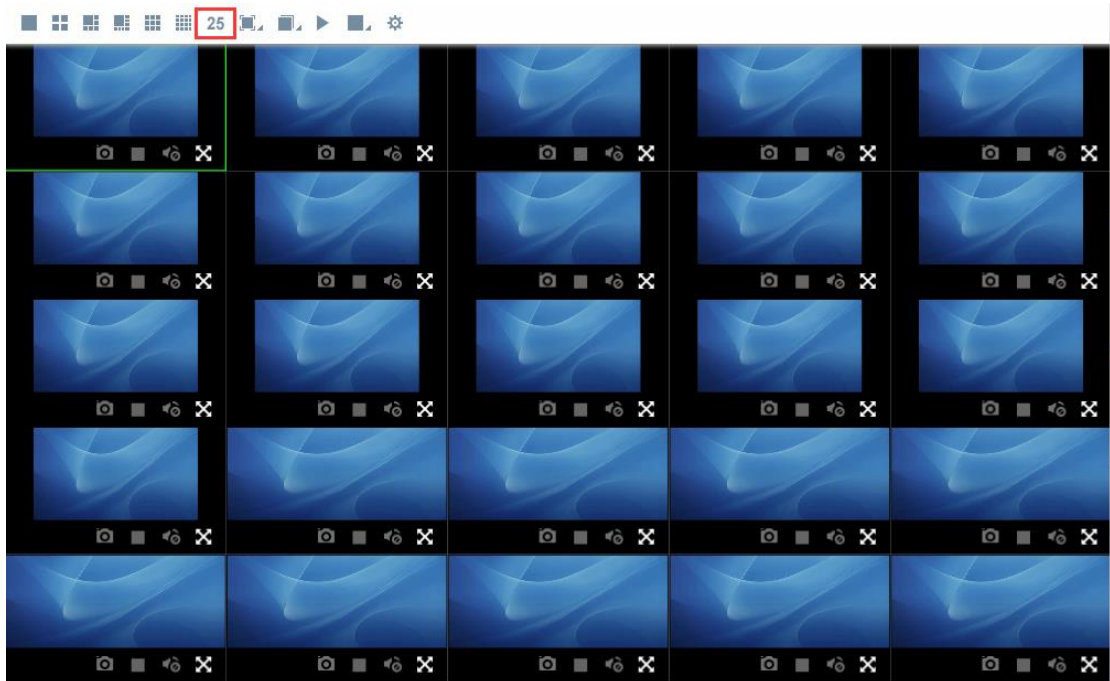

Display of 36 pictures

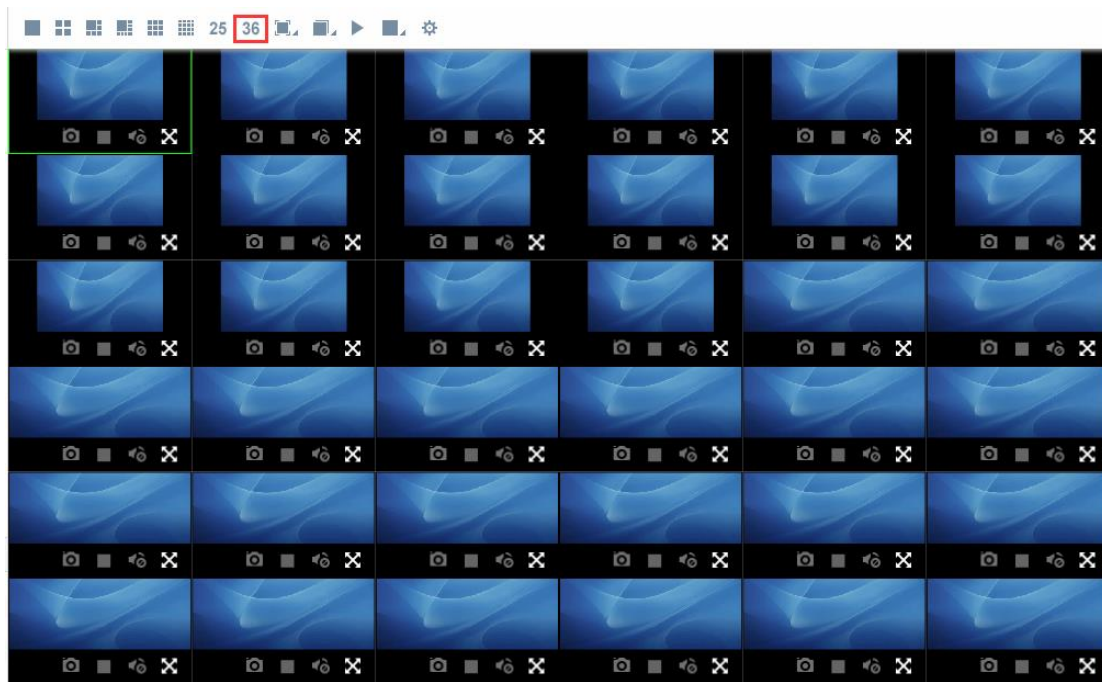

#### 4.4.2.2 Map parameters


GPS refresh interval and aggregation of gauge point

**Param Settings**
✕

Video Param	GPS refresh interval	10s
Map Param	Enable Marker Cluster	<input type="radio"/> Yes <input checked="" type="radio"/> No
Alarm Param	Max Cluster Zoom	100m
	Min Cluster Size	2 <span style="color: red;">(2-999)</span>
	Location Resolution Type	Default
	Velocity Unit	KM
	Does show linesOperation	<input checked="" type="radio"/> Yes <input type="radio"/> No
		<input type="button" value="Save"/> <input type="button" value="Close"/>


(1) GPS refresh interval

For GPS refresh interval, role of the parameter is show how long vehicle GPS status will be refreshed once

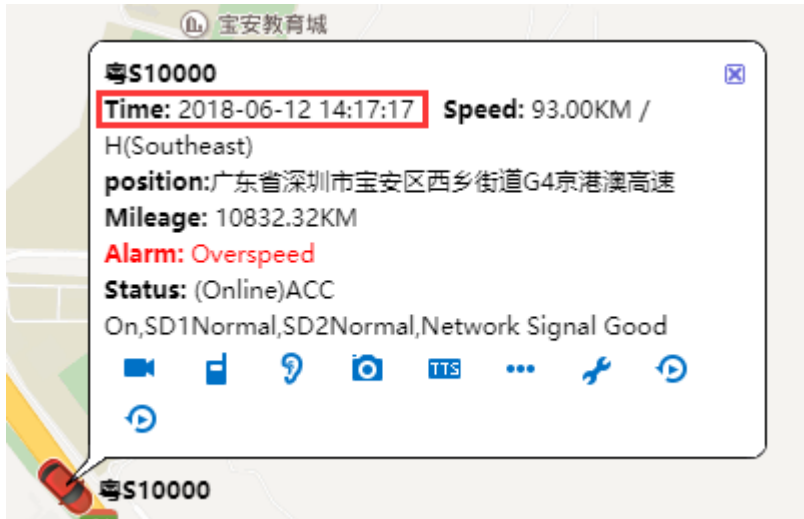


(2) Aggregation of gauge point

At the time of enabling aggregation of gauge point: When maximum aggregation level is 200m and minimum collection quantity is 2, refer to the following figure

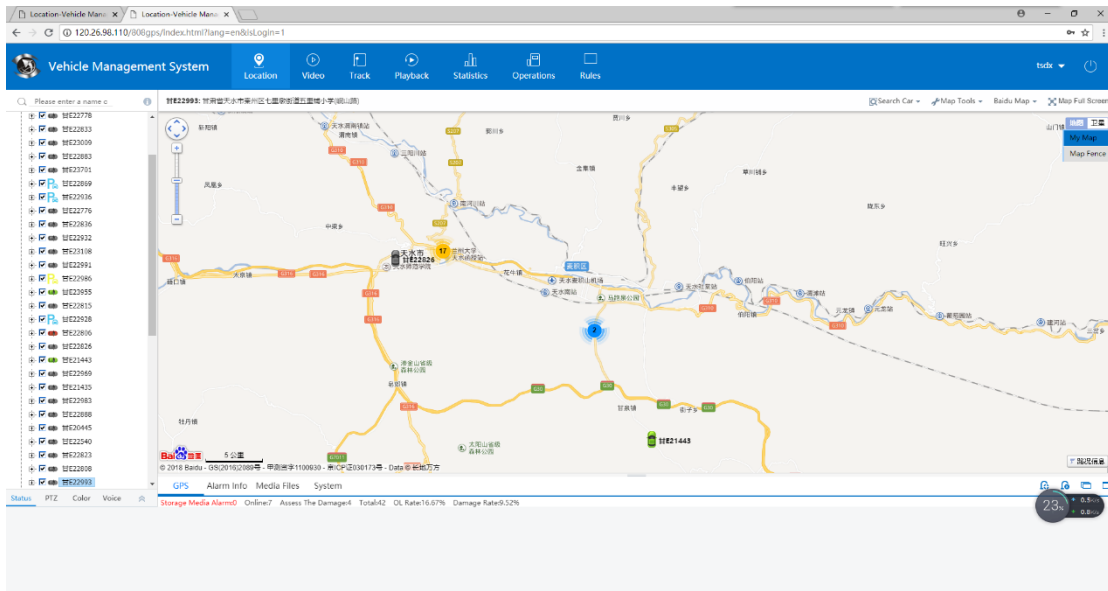

When map distance is less than maximum aggregation level, each vehicle will be displayed

### 4.4.2.3 Alarm parameters

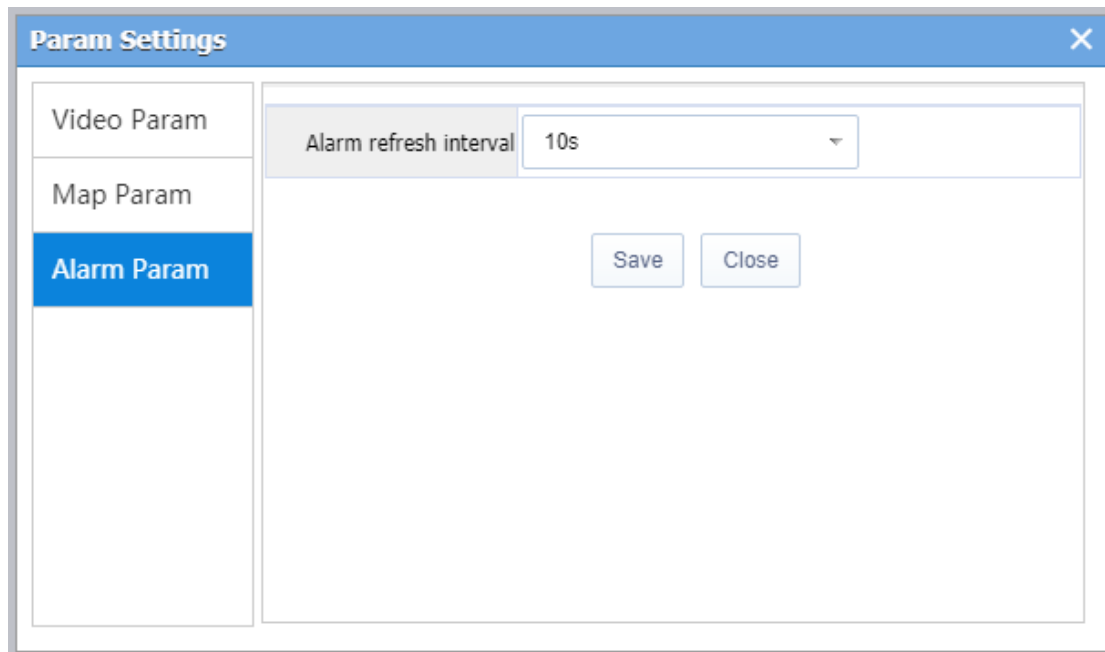


For alarm refresh interval, the parameter is used to show how long alarm status of the vehicle will be refreshed once

Plate No.	GPS Time	Position	Speed	Alarm
粤S10000	2018-06-12 14:34:48	广东省深圳市宝安区松岗街道东方大道	13.00KM / H(South)	
粤S10098	2018-06-12 14:34:47	广东省深圳市南山区南头街道南海大道	33.00KM / H(East)	

## 4.5 Voice talkback and monitoring


The user can carry out monitoring and talkback for the equipment managed by it on the client.

The premise is the equipment end is in possession of talkback equipment and it's necessary to edit vehicle equipment information in the vehicle information and check peripheral module.

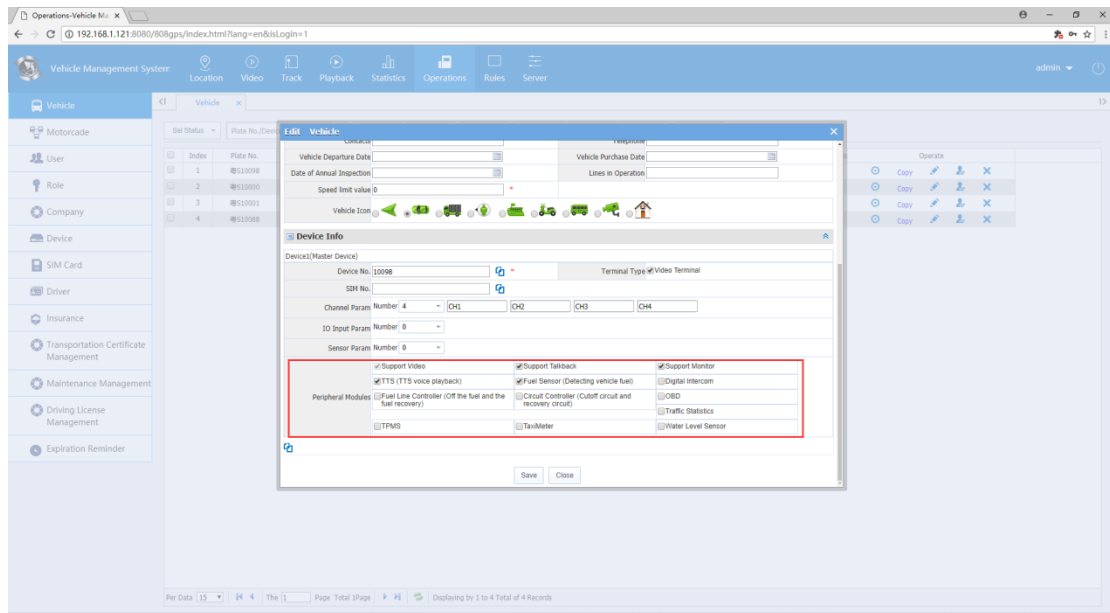


## 4.5.1 Voice talkback

A. Select the channel of the equipment to be talked back in the terminal list, right-click and select "Start Talkback" from the menu that appears.

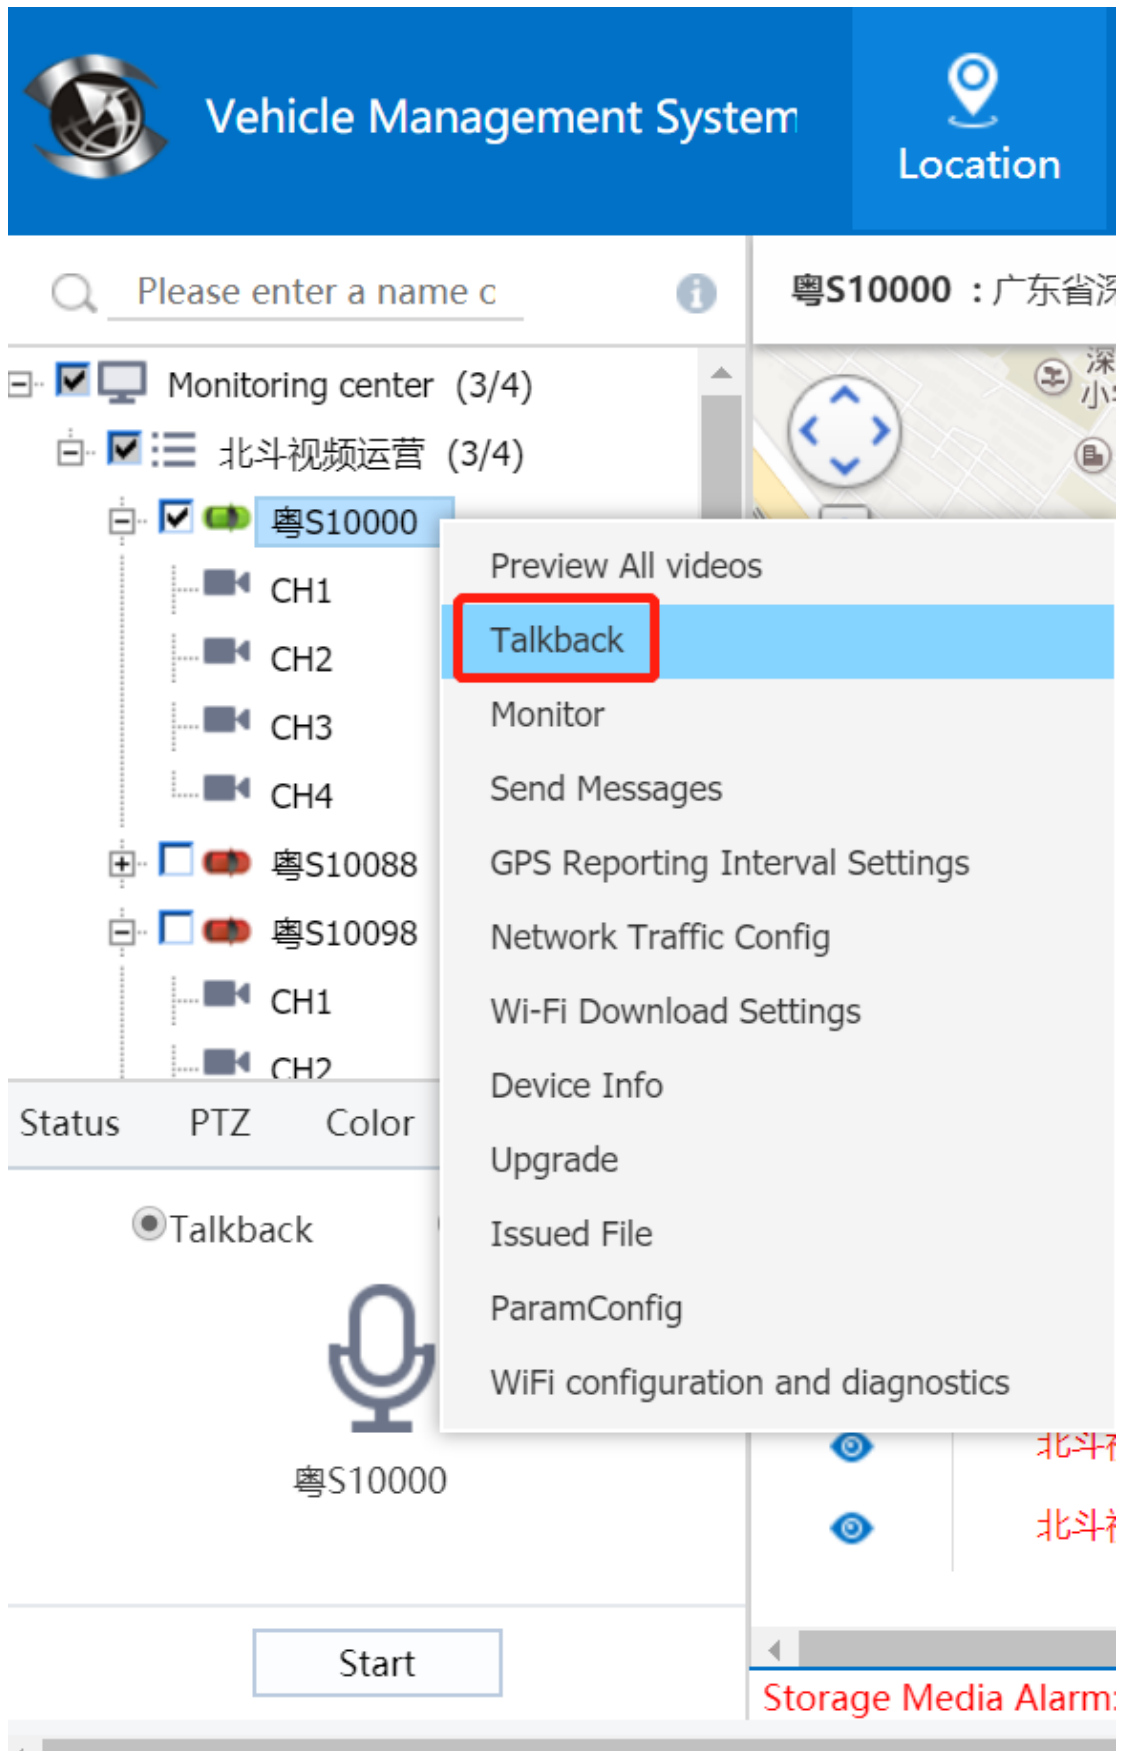


B. Directly click the video window to start talkback, or click the message box on the map to start talkback.

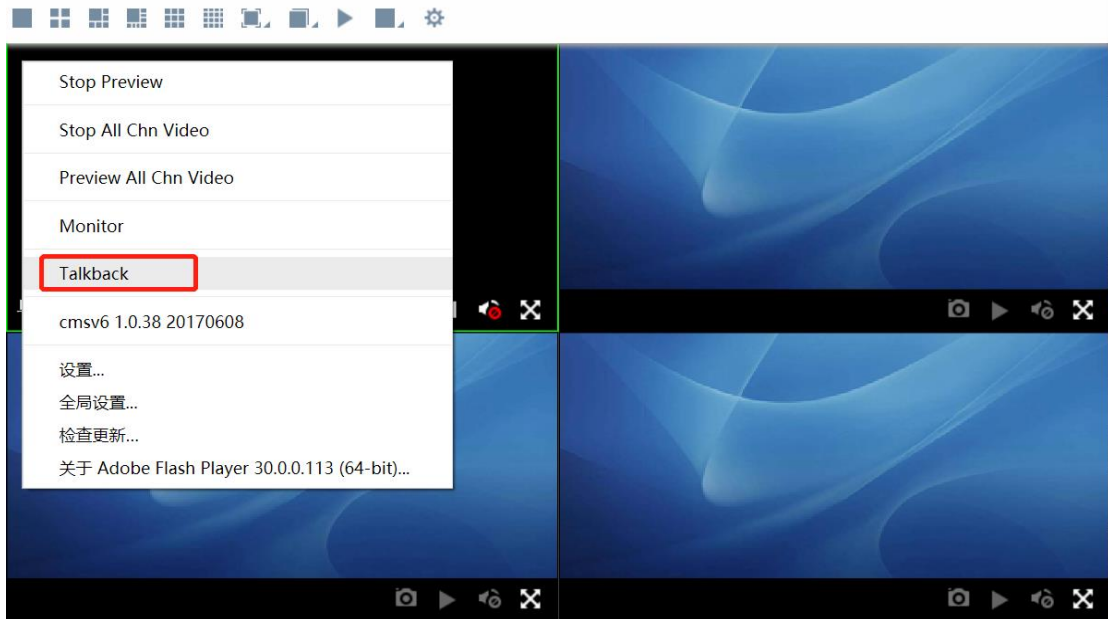

If the browser does not set up talkback properly, you need to set talkback by clicking the video window


**Please turn FLASH plug microphone** ✕

1. select **Settings** in the video window on the right-click menu

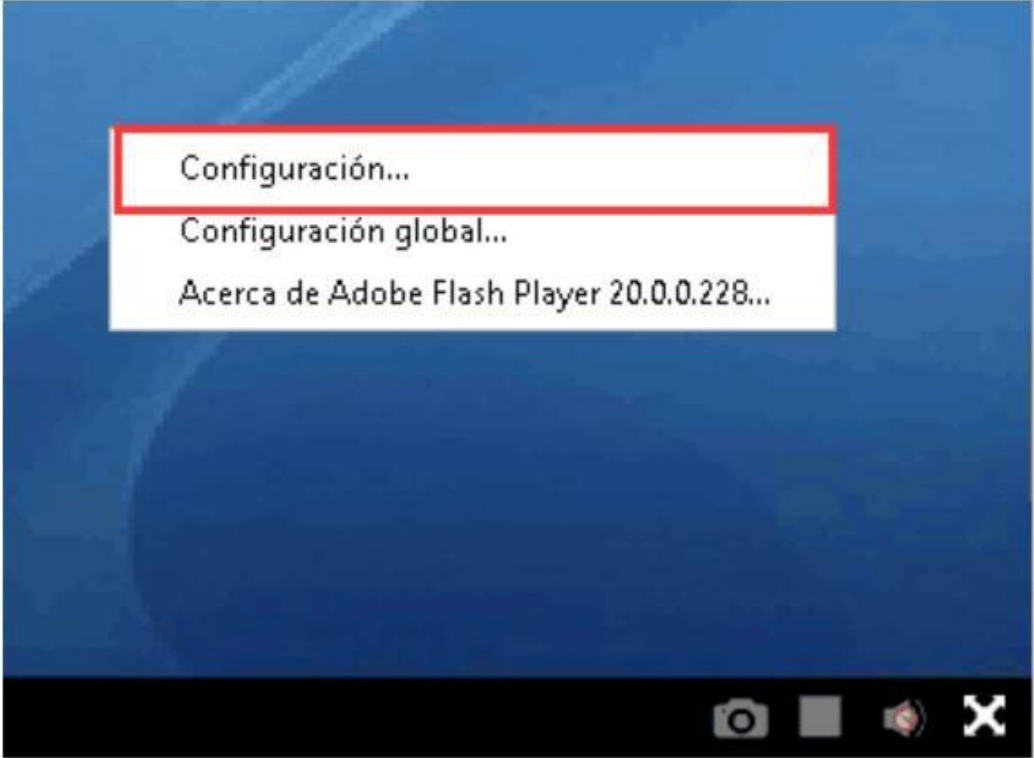

The screenshot shows a video player interface with a right-click context menu open. The menu items are 'Configuración...', 'Configuración global...', and 'Acerca de Adobe Flash Player 20.0.0.228...'. The 'Configuración...' option is highlighted with a red rectangular box. The video player's control bar at the bottom shows icons for camera, video, audio, and full screen.

The second step in the Settings window select 'Allow' and check the 'Remember'




The screenshot shows the 'Configuración de Adobe Flash Player' dialog box. The title is 'Configuración de Adobe Flash Player'. Under the 'Privacidad' section, it asks '¿Desea que 121.197.0.50 pueda acceder a la cámara y al micrófono?'. There are two radio buttons: 'Permitir' (selected) and 'Denegar'. Below the radio buttons, there is a checked checkbox for 'Recordar'. A 'Cerrar' button is at the bottom right. The 'Permitir' and 'Recordar' options are highlighted with a red rectangular box.


Close the settings and restart the intercom

#### 4.5.2 Monitoring

A. Select the equipment to be monitored in the terminal list, right-click and select "Start Monitoring" from the menu that appears.

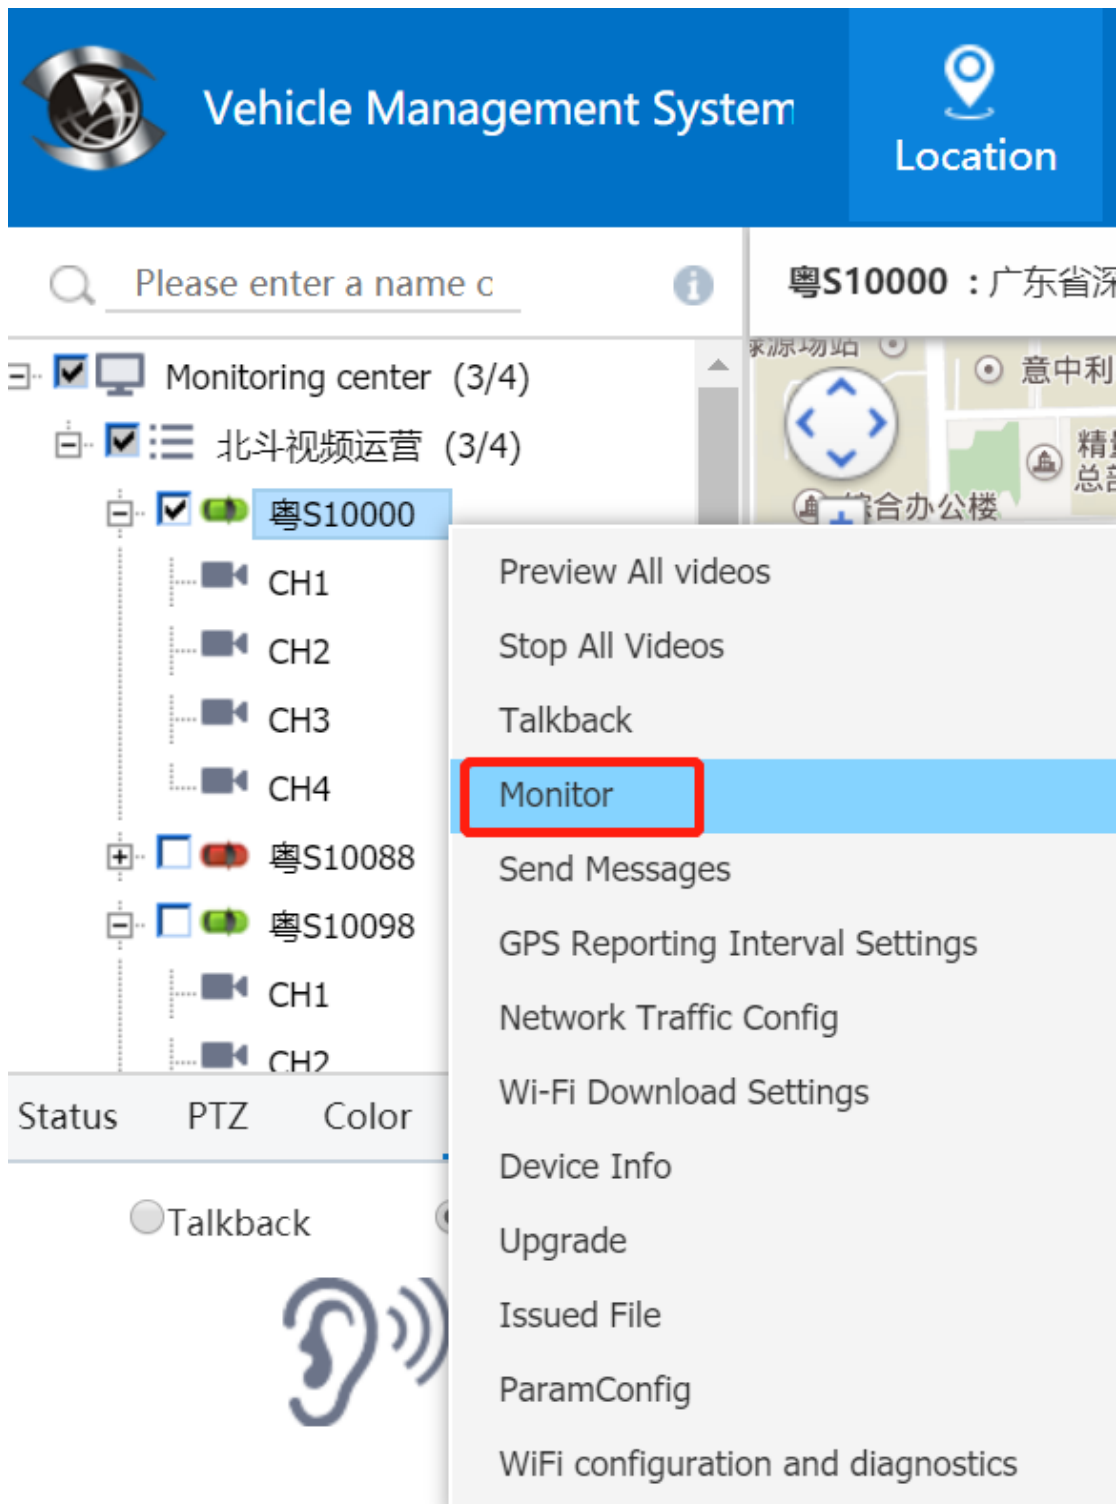

B. Open the real-time video preview of the equipment, right-click, and start the monitoring through the menu or the information bar on the map (see section 11.1.1)

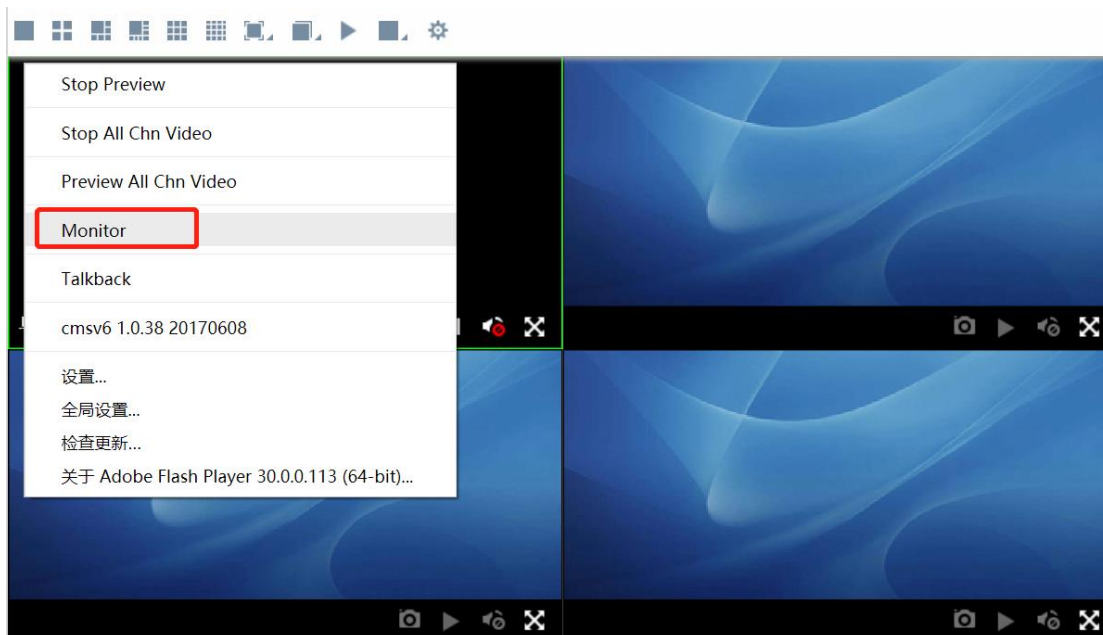

## 4.6 Track playback

The designated equipment performs the trajectory search according to the specified conditions, and displays the trajectory with green lines, and meanwhile displays the trajectory points and the parking spots on the information bar synchronously, and exports the related data as required, as shown in the figure below.

Operate	Index	Time	Speed	The Mileage	Driving Mileage	Position	Status
	1	2018-06-08 10:00:50	Invalid	9685.56KM	0.00	GPS Invalid	ACC On,SD1Normal,SD2Normal,Network Signal Good
	2	2018-06-08 10:00:50	4.00KM / H(South)	9685.58KM	0.02	22.766202,113.845263	ACC On,SD1Normal,SD2Normal,Network Signal Good
	3	2018-06-08 10:01:00	24.00KM / H(South)	9685.66KM	0.10	广东省深圳市宝安区松岗街道广深公路	ACC On,SD1Normal,SD2Normal,Network Signal Good

**Headway:** Upload a GPS data on every selected interval. If it is 0, upload a GPS data for every 10 seconds.

**Parking duration:**

0: Search for all parking gps points and show them

None 0: In case of continuous gps parking spot, only the last gps parking point data is uploaded to the platform.


**Traveled distance:** Total mileage of the current vehicle on the day

**Speed:** Control the speed of track playback

**Location:**

a) Line: Changing from white lines to blue lines, representing the download progress of the trajectory data


b) Drag the button: Progress of trajectory playback

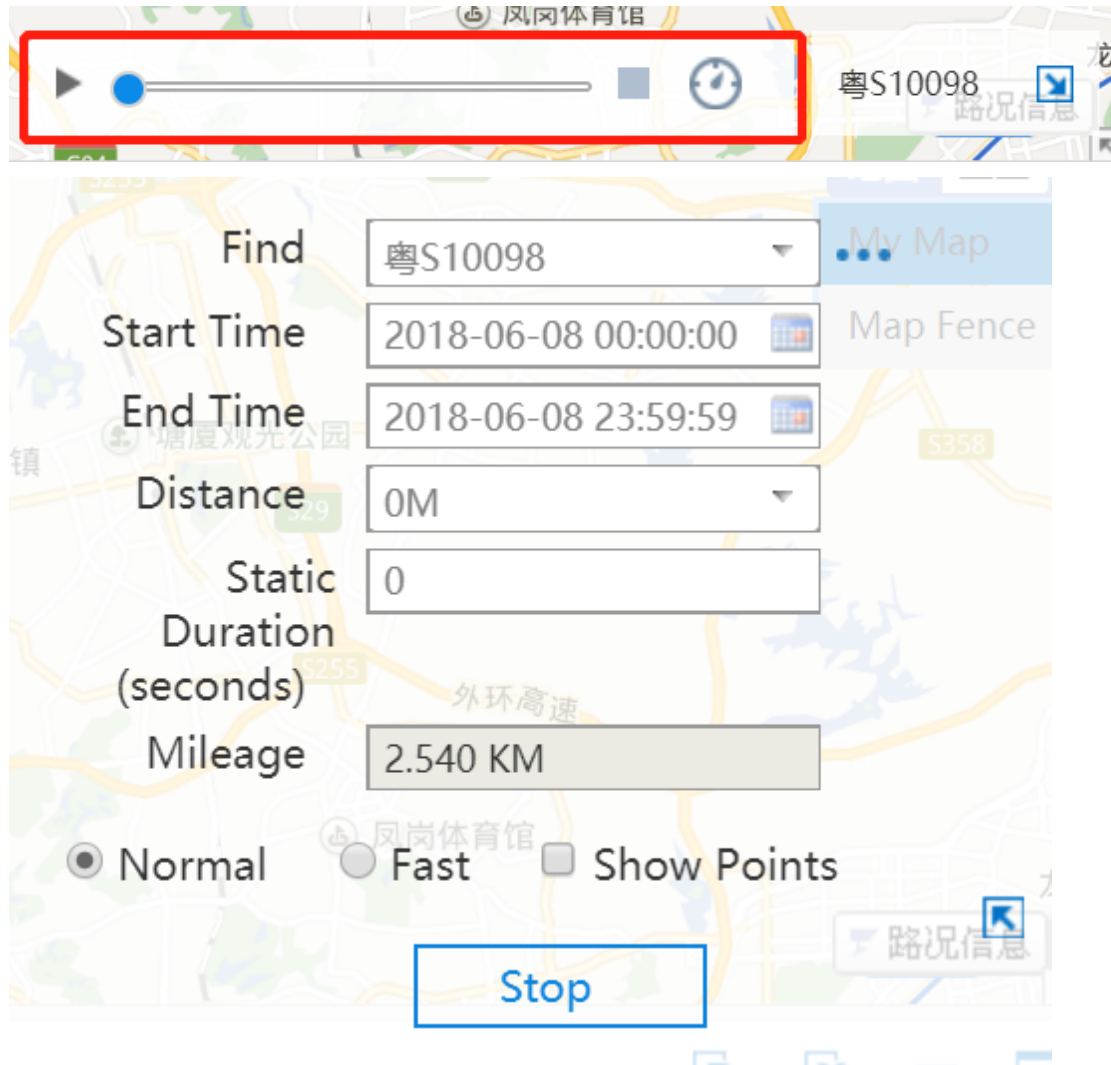

## 4.7 Video replay

### 4.7.1 Video search

Click "Video Replay" on the interface, and select the vehicle and time query, the interface is as follows

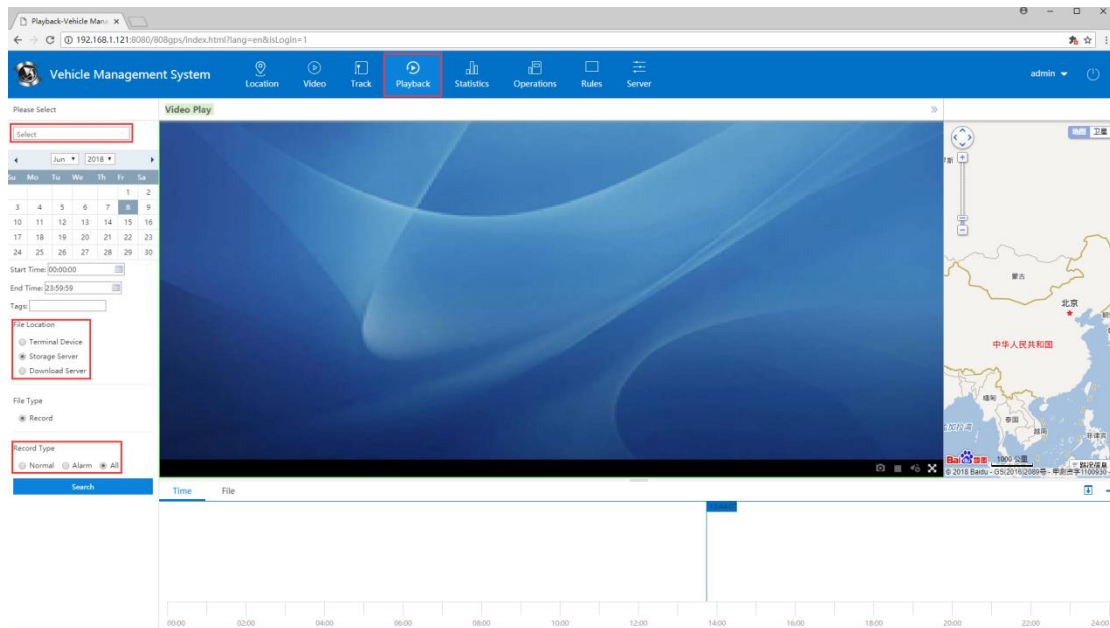

**Terminal equipment:** Search for video file in SD card or hard disk

**Storage server:** The equipment is configured with a storage plan to search for video file recorded on the storage server


**Download server:** Search for video file on the download server

## Video type

When searching for videos, there are three kinds of video search conditions: alarm video, regular video and all videos.


## 4.7.2 Video replay

After specifying the search condition, there is a list of searched file below, as shown below:

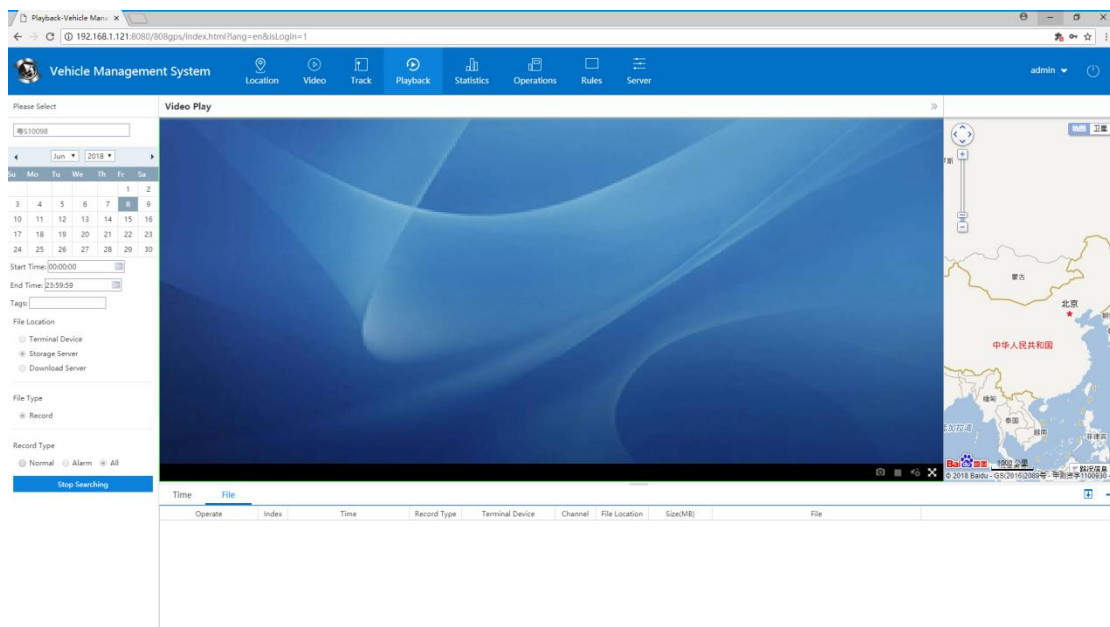


Icon introduction

 Download this file

 Download a section of this file (when one file is too large)

 Video playback

### 4.7.3 Viewing download task

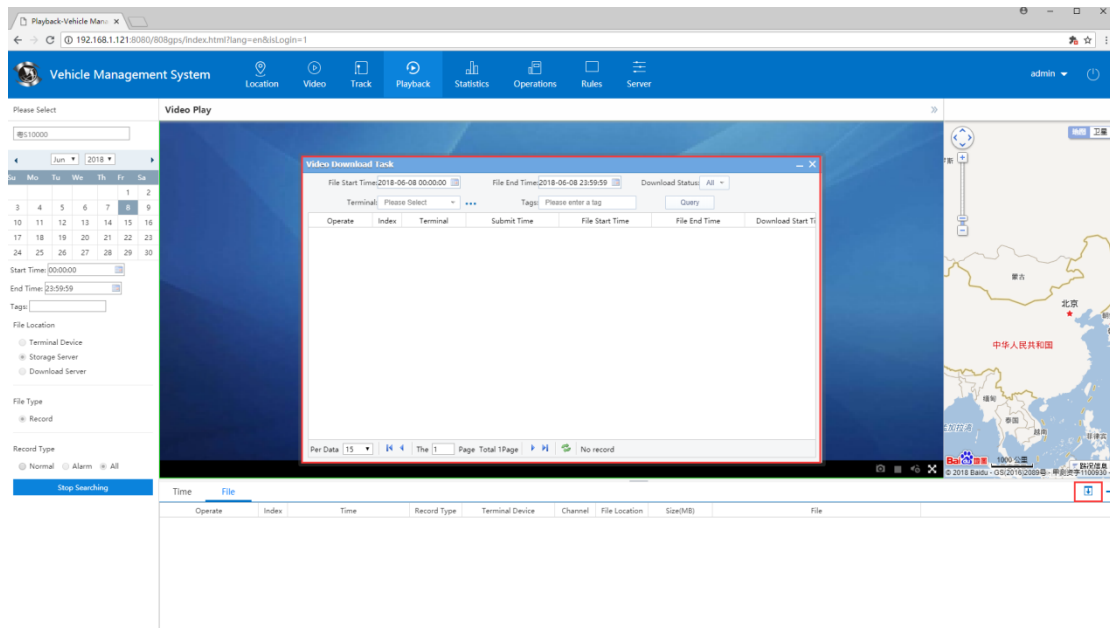

## 4.8 Statistics statement

Statistics statement is divided into safety aided driving, driving behavior analysis, online and offline statement, alarm statement, mileage statement, parking statement, electronic fence statement, oil mass statement, fault alarm statement, video alarm statement, IO alarm statement, storage media statement, equipment upgrade statement, multimedia, data query, user behavior analysis, driver punch card record table, people counting statement.


### 4.8.1 Safety aided driving

Safety aided driving consists of three parts: the safety aided driving evidence table, the safety aided driving summary table, and the safety aided driving schedule.


#### Safety aided driving evidence table:

The alarm snapshot pictures or videos if a vehicle can be queried according to four options: license plate number, date, multimedia type (picture/video), alarm type.


Searching by pictures:

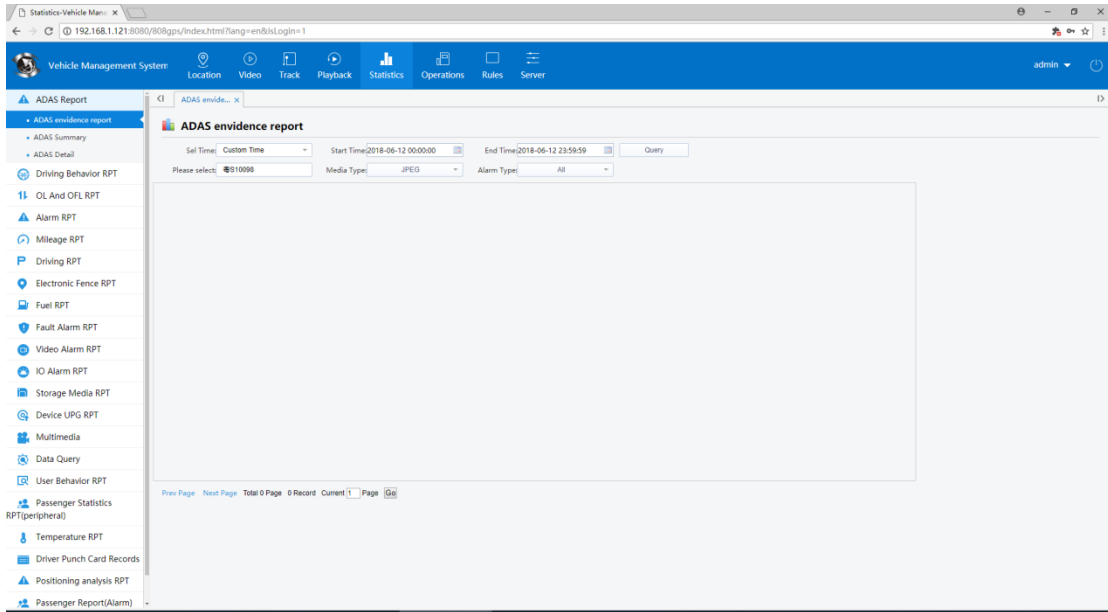

Click the picture to view the large picture, vehicle alarm location, specific alarm information, and click the button function to save the alarm snapshot

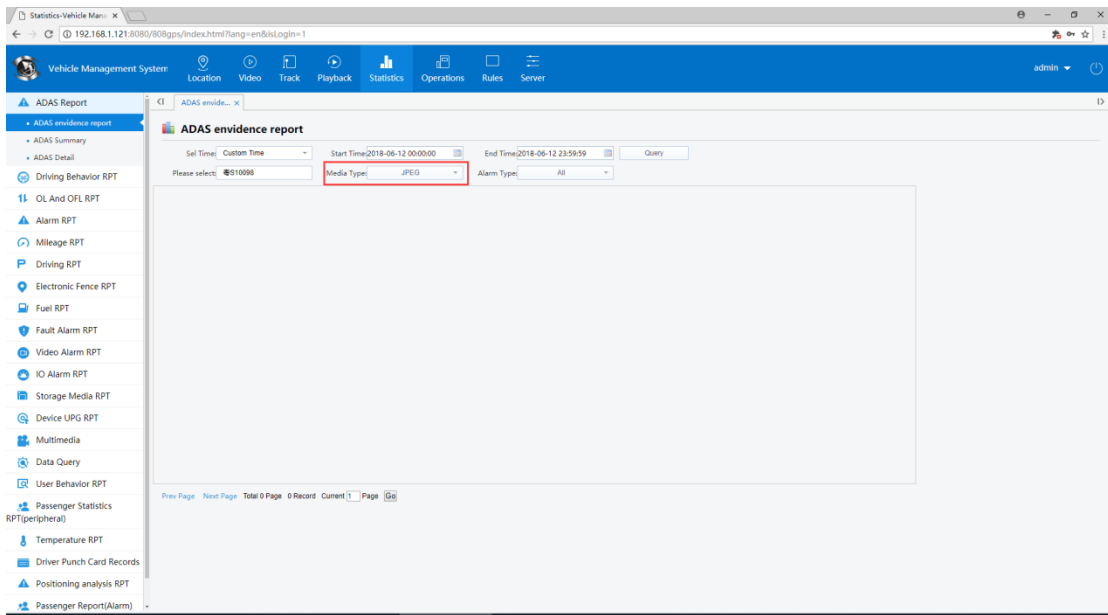


Searching by videos:

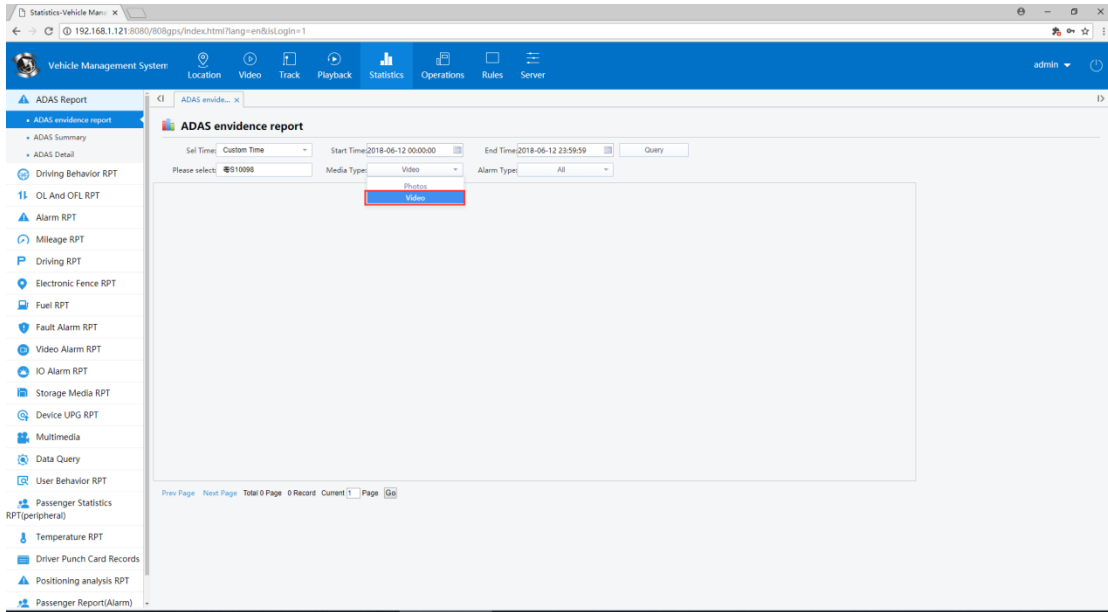


Click the video to preview the video

### Safety aided driving summary:


You can query the alarm information of one or more vehicles according to the four options: license plate number, date, structure, and alarm type. Click a vehicle in statistics chart, and you can switch to the ranking chart to view the ranking.

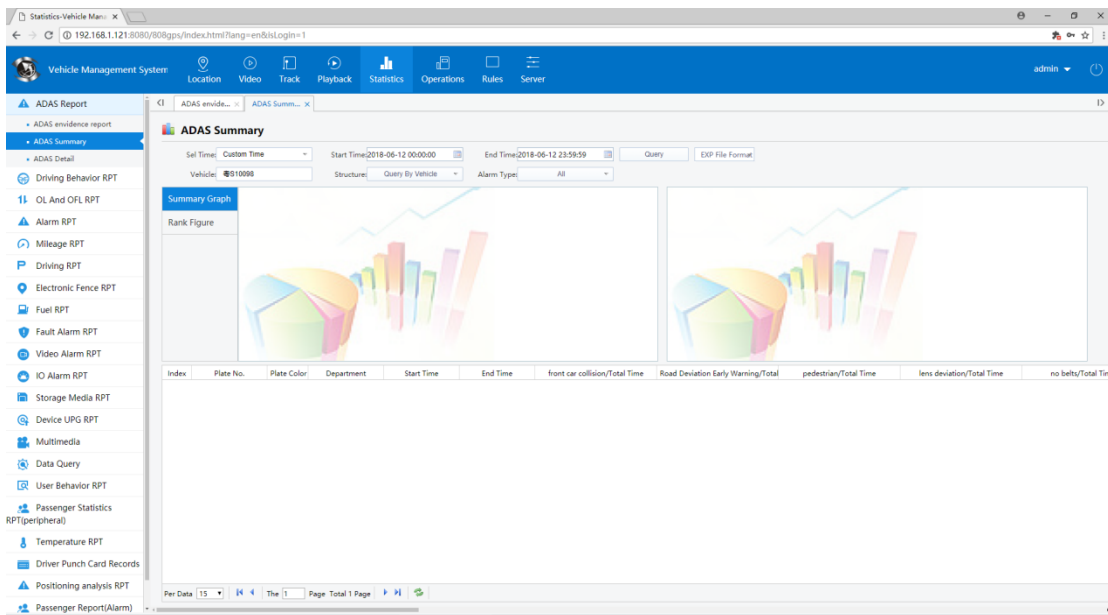

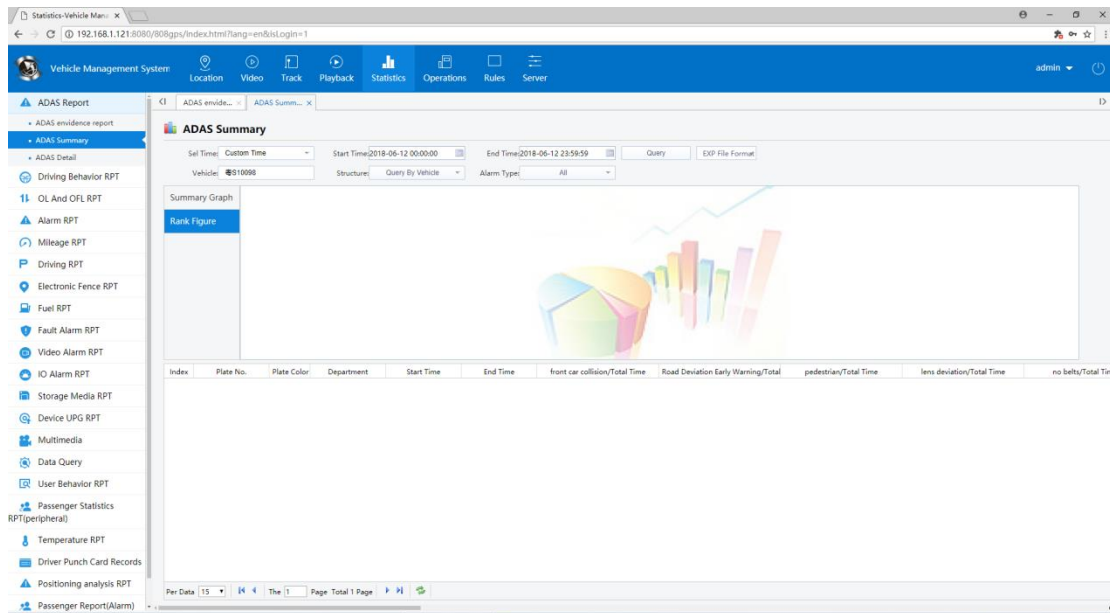

## Safety aided driving evidence table:

You can query the alarm details by setting the query conditions

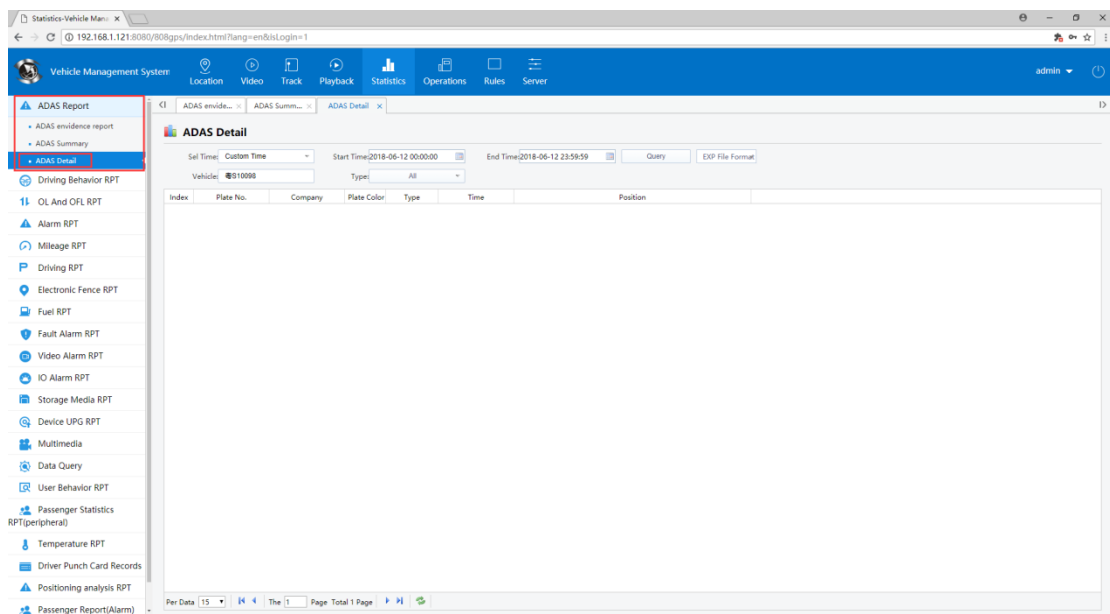

## 4.8.2 Driving behavior analysis

Driving behavior statistics, driving behavior inquiry, driving track schedule, trajectory over-speed summary and schedule

Driving behavior analysis: The system obtains this statement through statistics analysis of the GPS and its alarm information reported by the equipment.

Index	Plate No.	Plate Color	Department	Start Time	End Time	Overspeed Lor	Speeding Rate	Start Speed(KM / H)	Start Mileage(KM)	Starting Position	End Speed(KM / H)	End Mileage(KM)	End Position
1	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:00:59	2018-06-08 10:01:19	20S	100%	60.00	9717.52	广东省深圳市南山区粤海街道北环大道	5.00	9717.70	广东省深圳市南山区
2	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:03:39	2018-06-08 10:04:19	40S	113%	44.00	9718.20	广东省深圳市南山区粤海街道北环大道	26.00	9718.75	广东省深圳市南山区
3	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:04:29	2018-06-08 10:04:59	30S	73%	30.00	9718.83	广东省深圳市南山区粤海街道北环大道	27.00	9719.18	广东省深圳市南山区
4	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:05:09	2018-06-08 10:06:29	1M 20S	147%	44.00	9719.28	广东省深圳市南山区粤海街道北环大道	28.00	9720.52	广东省深圳市南山区
5	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:06:39	2018-06-08 10:06:59	20S	33%	38.00	9720.61	广东省深圳市南山区粤海街道北环大道	0.00	9720.80	广东省深圳市南山区
6	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:07:19	2018-06-08 10:16:29	9M 10S	290%	38.00	9720.83	广东省深圳市南山区粤海街道北环大道	0.00	9734.79	广东省深圳市南山区
7	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:16:59	2018-06-08 10:17:19	20S	70%	49.00	9735.06	广东省深圳市宝安区福永街道福永大道	24.00	9735.32	广东省深圳市宝安区
8	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:18:09	2018-06-08 10:29:40	11M 31S	190%	47.00	9735.73	广东省深圳市宝安区福永街道福永大道	27.00	9748.94	广东省深圳市宝安区
9	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:29:50	2018-06-08 10:30:20	30S	13%	34.00	9749.04	广东省深圳市宝安区福永街道福永大道	14.00	9749.29	广东省深圳市宝安区
10	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:30:40	2018-06-08 10:31:10	30S	77%	49.00	9749.43	广东省深圳市宝安区福永街道福永大道	8.00	9749.80	广东省深圳市宝安区
11	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:33:20	2018-06-08 10:33:50	30S	87%	34.00	9750.63	广东省深圳市宝安区福永街道福永大道	19.00	9751.01	广东省深圳市宝安区
12	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:34:30	2018-06-08 10:46:20	11M 50S	183%	36.00	9751.31	广东省深圳市宝安区福永街道福永大道	28.00	9764.75	广东省深圳市宝安区
13	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:47:10	2018-06-08 10:47:30	20S	70%	47.00	9765.16	广东省深圳市宝安区福永街道福永大道	29.00	9765.42	广东省深圳市宝安区
14	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:48:00	2018-06-08 10:57:10	9M 10S	290%	35.00	9765.63	广东省深圳市宝安区福永街道福永大道	0.00	9779.58	广东省深圳市宝安区
15	粤S10000	Yellow Carc	北汽北汽运营	2018-06-08 10:57:30	2018-06-08 10:59:50	2M 20S	150%	40.00	9779.65	广东省深圳市宝安区福永街道福永大道	27.00	9781.57	广东省深圳市宝安区

Click to export and display Excel, as shown below

Index	Vehicle	License	C	Time Start	Time End	Overspeed Start	Spe	Start Mile	Start Position	End Spee	End Mile	End Position
1	粤S10000	Yellow		2018-06-08 10:00:59	2018-06-08 10:01:19	20S	60	9,717.52	广东省深圳市南山区粤海街道北环大道	5.00	9,717.70	广东省深圳市南山区
2	粤S10000	Yellow		2018-06-08 10:03:39	2018-06-08 10:04:19	40S	64	9,718.2	广东省深圳市南山区粤海街道北环大道	26.00	9,718.75	广东省深圳市南山区
3	粤S10000	Yellow		2018-06-08 10:04:29	2018-06-08 10:04:59	30S	30	9,718.83	广东省深圳市南山区粤海街道北环大道	27.00	9,719.18	广东省深圳市南山区
4	粤S10000	Yellow		2018-06-08 10:05:09	2018-06-08 10:06:29	1M 20S	44	9,719.28	广东省深圳市南山区粤海街道北环大道	28.00	9,720.52	广东省深圳市南山区
5	粤S10000	Yellow		2018-06-08 10:06:39	2018-06-08 10:06:59	20S	38	9,720.61	广东省深圳市南山区粤海街道北环大道	0.00	9,720.80	广东省深圳市南山区
6	粤S10000	Yellow		2018-06-08 10:07:19	2018-06-08 10:16:29	9M 10S	38	9,720.83	广东省深圳市南山区粤海街道北环大道	0.00	9,734.79	广东省深圳市宝安区福永街道福永大道
7	粤S10000	Yellow		2018-06-08 10:16:59	2018-06-08 10:17:19	20S	49	9,735.06	广东省深圳市宝安区福永街道福永大道	24.00	9,735.32	广东省深圳市宝安区
8	粤S10000	Yellow		2018-06-08 10:18:09	2018-06-08 10:29:40	11M 31S	47	9,735.73	广东省深圳市宝安区福永街道福永大道	27.00	9,748.94	广东省深圳市宝安区
9	粤S10000	Yellow		2018-06-08 10:29:50	2018-06-08 10:30:20	30S	34	9,749.04	广东省深圳市宝安区福永街道福永大道	14.00	9,749.29	广东省深圳市宝安区
10	粤S10000	Yellow		2018-06-08 10:30:40	2018-06-08 10:31:10	30S	49	9,749.43	广东省深圳市宝安区福永街道福永大道	8.00	9,749.80	广东省深圳市宝安区
11	粤S10000	Yellow		2018-06-08 10:33:20	2018-06-08 10:33:50	30S	34	9,750.63	广东省深圳市宝安区福永街道福永大道	19.00	9,751.01	广东省深圳市宝安区
12	粤S10000	Yellow		2018-06-08 10:34:30	2018-06-08 10:46:20	11M 50S	36	9,751.31	广东省深圳市宝安区福永街道福永大道	28.00	9,764.75	广东省深圳市宝安区
13	粤S10000	Yellow		2018-06-08 10:47:10	2018-06-08 10:47:30	20S	47	9,765.16	广东省深圳市宝安区福永街道福永大道	29.00	9,765.42	广东省深圳市宝安区
14	粤S10000	Yellow		2018-06-08 10:48:00	2018-06-08 10:57:10	9M 10S	35	9,765.63	广东省深圳市宝安区福永街道福永大道	0.00	9,779.58	广东省深圳市宝安区
15	粤S10000	Yellow		2018-06-08 10:57:30	2018-06-08 10:59:50	2M 20S	40	9,779.65	广东省深圳市宝安区福永街道福永大道	27.00	9,781.57	广东省深圳市宝安区
16	粤S10000	Yellow		2018-06-08 11:00:10	2018-06-08 11:00:50	40S	47	9,781.73	广东省深圳市南山区粤海街道北环大道	0.00	9,782.32	广东省深圳市南山区
17	粤S10000	Yellow		2018-06-08 11:03:10	2018-06-08 11:04:00	50S	47	9,782.73	广东省深圳市南山区粤海街道北环大道	0.00	9,783.4	广东省深圳市南山区
18	粤S10000	Yellow		2018-06-08 11:04:10	2018-06-08 11:04:40	30S	35	9,783.48	广东省深圳市南山区粤海街道北环大道	0.00	9,783.83	广东省深圳市南山区
19	粤S10000	Yellow		2018-06-08 11:04:50	2018-06-08 11:06:10	1M 20S	45	9,783.94	广东省深圳市南山区粤海街道北环大道	0.00	9,785.17	广东省深圳市宝安区福永街道福永大道
20	粤S10000	Yellow		2018-06-08 11:07:00	2018-06-08 11:15:58	8M 58S	46	9,785.5	广东省深圳市宝安区福永街道福永大道	0.00	9,799.41	广东省深圳市宝安区福永街道福永大道
21	粤S10000	Yellow		2018-06-08 11:16:08	2018-06-08 11:16:58	50S	35	9,799.43	广东省深圳市宝安区福永街道福永大道	24.00	9,799.97	广东省深圳市宝安区福永街道福永大道
22	粤S10000	Yellow		2018-06-08 11:17:38	2018-06-08 11:29:38	12M	43	9,800.29	广东省深圳市宝安区福永街道福永大道	0.00	9,813.79	广东省深圳市宝安区福永街道福永大道
23	粤S10000	Yellow		2018-06-08 11:30:18	2018-06-08 11:30:38	20S	58	9,814.13	广东省深圳市宝安区福永街道福永大道	0.00	9,814.4	广东省深圳市宝安区福永街道福永大道
24	粤S10000	Yellow		2018-06-08 11:32:58	2018-06-08 11:33:28	30S	47	9,815.31	广东省深圳市宝安区福永街道福永大道	0.00	9,815.67	广东省深圳市宝安区福永街道福永大道
25	粤S10000	Yellow		2018-06-08 11:33:58	2018-06-08 11:34:18	20S	33	9,815.88	广东省深圳市宝安区福永街道福永大道	27.00	9,816.08	广东省深圳市宝安区福永街道福永大道

## 4.8.2 Online and offline statement

Online/offline statements: Make the statistics of the vehicle online/offline rate, and analyze the company's vehicle online rate according to the information uploaded by the equipment.

The summary statement of vehicle online/offline, the detailed statement on the vehicle online/offline, the daily online rate statement, the monthly online rate statement of vehicles, and the online rate alarm of vehicles

The following describes the operation taking the vehicles online/offline as an example: Search the online/offline conditions of equipment

Index	Plate No.	Department	Plate Color	OnlineTime	OnlinePosition	OfflineTime	OfflinePosition	Network Address
1	粤S10098	北斗视频监控	Yellow	2018-06-08 10:00:40	广东省深圳市宝安区松岗街道广			192.168.1.121 64109
2	粤S10000	北斗视频监控	Yellow	2018-06-08 10:00:49	广东省深圳市南山区粤海街道北			192.168.1.121 95575
3	粤S10088	北斗视频监控	Yellow	2018-06-08 10:57:40	湖北省恩施土家族苗族自治州恩			192.168.1.138 1028

## Export the Excel form

Index	Vehicle	Affiliated Organizations	License Color	OnlineTime	OnlinePosition	OfflineTime	OfflinePosition	Net Address
1	粤S10098	北斗视频监控	Yellow	2018-06-08 10:00:40	广东省深圳市宝安区松岗街道广			192.168.1.121 64109
2	粤S10000	北斗视频监控	Yellow	2018-06-08 10:00:49	广东省深圳市南山区粤海街道北			192.168.1.121 95575
3	粤S10088	北斗视频监控	Yellow	2018-06-08 10:57:40	湖北省恩施土家族苗族自治州恩			192.168.1.138 1028

## 4.8.3 Statement of alarm

The alarm statement consists of alarm query and alarm statistics. The information of this alarm statement conducts statistics and analysis on information mainly based on the alarm information on the equipment terminal.

Index	Plate No.	Company	Plate Color	Alarm Type	Alarm Sour	Start Time	End Time	Alarm Duration	Start Speed(KM / H)	End Speed(KM / H)	Starting Position	End Position	Alarm
1	粤S10000	北斗视频监控	Yellow	Carc Video Signal Li	Device	2018-06-08 11:45:48			41.00	0.00	广东省深圳市宝安区深圳市宝安区		
2	粤S10000	北斗视频监控	Yellow	Carc Emergency But	Device	2018-06-08 11:45:36	2018-06-08 14:00:40	2H 15M 4S	46.00	0.00	广东省深圳市宝安区深圳市宝安区	广东省深圳市宝安区粤海街道	
3	粤S10088	北斗视频监控	Yellow	Carc ACC Alarm	Device	2018-06-08 10:57:31			67.00	0.00	湖北省恩施土家族苗族自治州		
4	粤S10088	北斗视频监控	Yellow	Carc Fatigue Alarm	Device	2018-06-08 10:57:31			67.00	0.00	湖北省恩施土家族苗族自治州		
5	粤S10088	北斗视频监控	Yellow	Carc Emergency But	Device	2018-06-08 10:57:31			67.00	0.00	湖北省恩施土家族苗族自治州		

In case of the statistics type, click the dialog box and check

Index	Plate No.	Company	Plate Color	Alarm Type	Alarm Sour	Start Time	End Time	Alarm Durator
1	粤S10000	北斗视频运营	<input checked="" type="checkbox"/> Index		al Lc Device	2018-06-08 11:45:48		
2	粤S10000	北斗视频运营	<input checked="" type="checkbox"/> Plate No.		But Device	2018-06-08 11:45:36	2018-06-08 14:00:40	2H 15M 4S
3	粤S10088	北斗视频运营	<input checked="" type="checkbox"/> Company		n Device	2018-06-08 10:57:31		
4	粤S10088	北斗视频运营	<input checked="" type="checkbox"/> Plate Color		rm Device	2018-06-08 10:57:31		
5	粤S10088	北斗视频运营	<input checked="" type="checkbox"/> Alarm Type		But Device	2018-06-08 10:57:31		

- Alarm Sources
- Start Time
- End Time
- Alarm Duration
- Start Speed(KM / H).
- End Speed(KM / H).
- Starting Position
- End Position
- Alarm Info
- Handle Status
- Handle User
- Handle Content
- Handle Time

#### 4.8.4 Other statements


Other statements reanalyze their role based on specific functions

### 4.9 Rule management

Rule management is a flexible management tool that sets restrictions on the rules of conduct based on the customer's own management needs of the vehicle and personnel, and the platform calculates through the information reported by the terminal to determine whether it conforms to the rules and then makes the alarm statistics.

## 4.9.1 Server is configured with email and SMS

### 4.9.1.1 Configure the e-mail

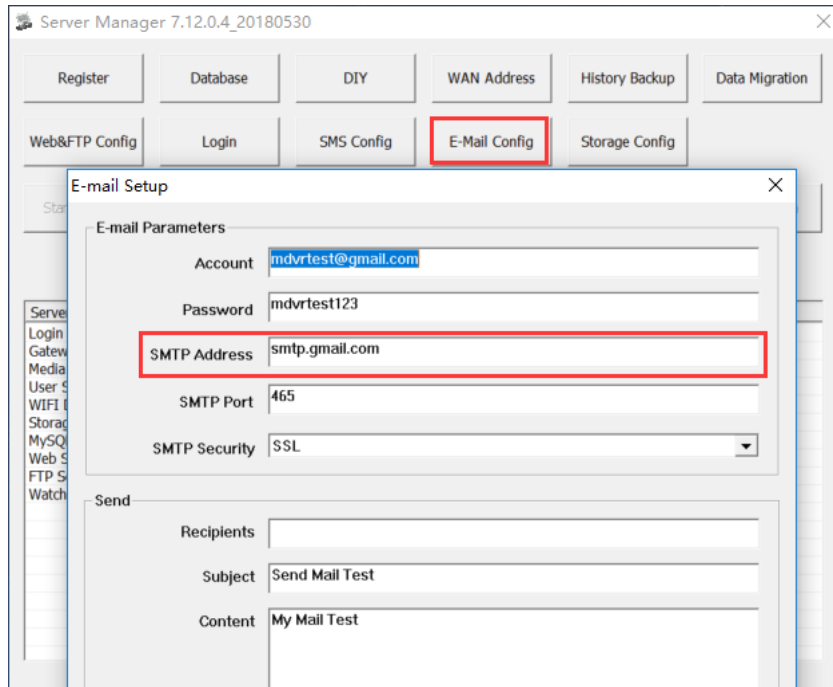

Server Manager 7.12.0.4\_20180530

Register Database DIY WAN Address History Backup Data Migration

Web&FTP Config Login SMS Config **E-Mail Config** Storage Config

E-mail Setup

E-mail Parameters

Account mdvrtest@gmail.com

Password mdvrtest123

**SMTP Address smtp.gmail.com**

SMTP Port 465

SMTP Security SSL



Send

Recipients

Subject Send Mail Test

Content My Mail Test

Fill in the same email sending server as that you used to send the text message

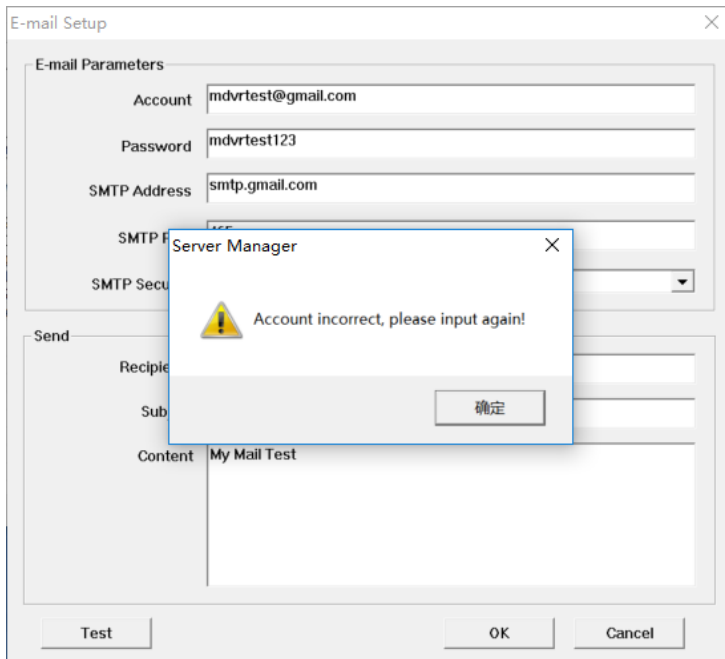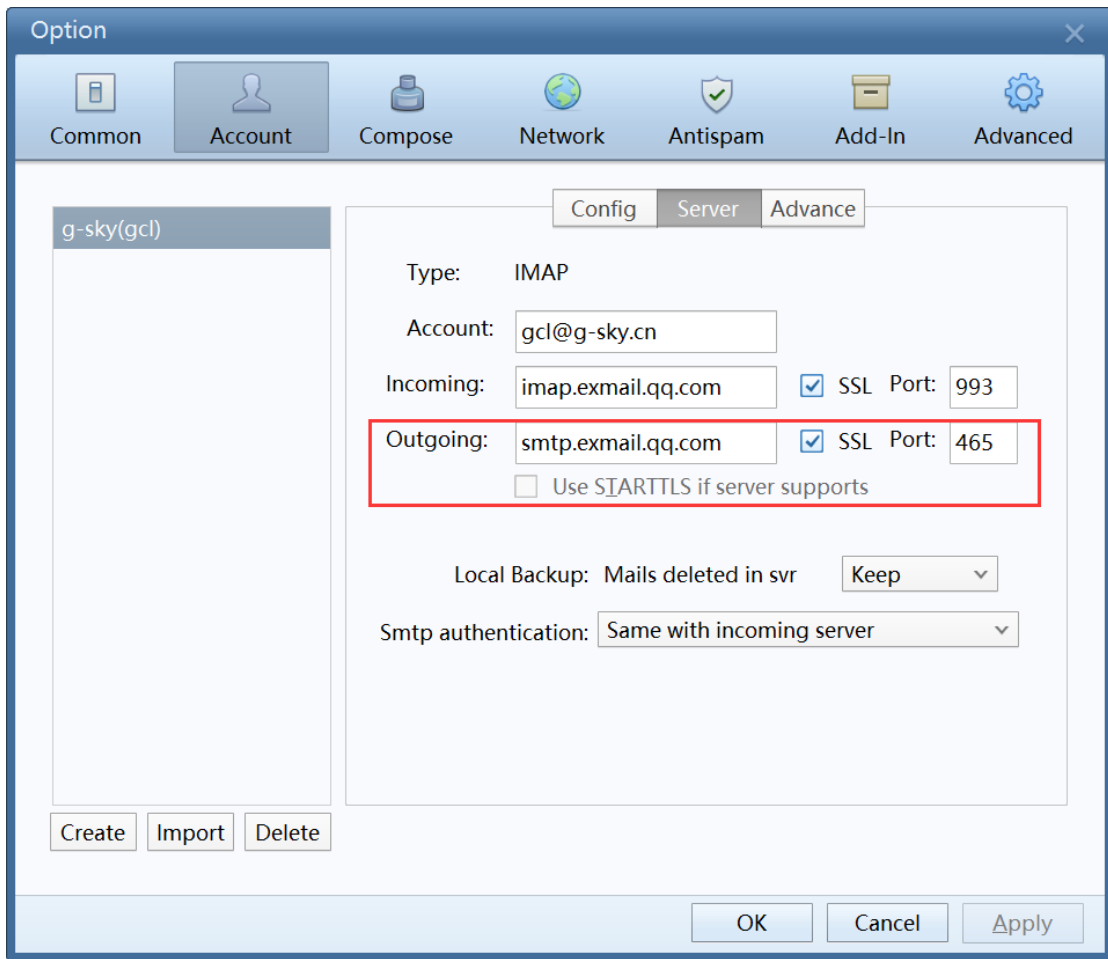

E-mail configuration:


The account and password are the email account and password used to send the email.

Note:

For overseas customers, the default email address cannot be used. It is necessary to fill email and email password applied in the local, and then restart the gateway server.

The Hong Kong server also needs to replace the email.

#### 4.9.1.2 Configure SMS configuration

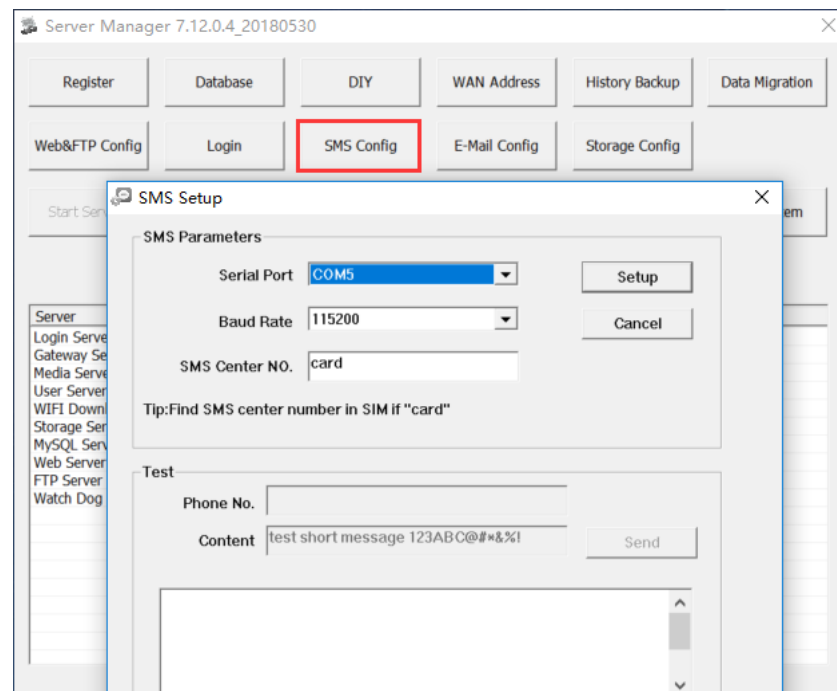


When sending SMS, you need to connect an SMS modem to the server, and install a serial port driver. Then, when configuring this, select the corresponding serial port number and click "Configure". If an SMS modem is not connected externally, text messages cannot be sent.

### 4.9.2 Fatigue rules

Fatigue rule is a management rule to ensure the driver safety setting


#### 4.9.2.1 Set rules

If you need configuration to send e-mailing and messages, first configure the directory 4.9.1

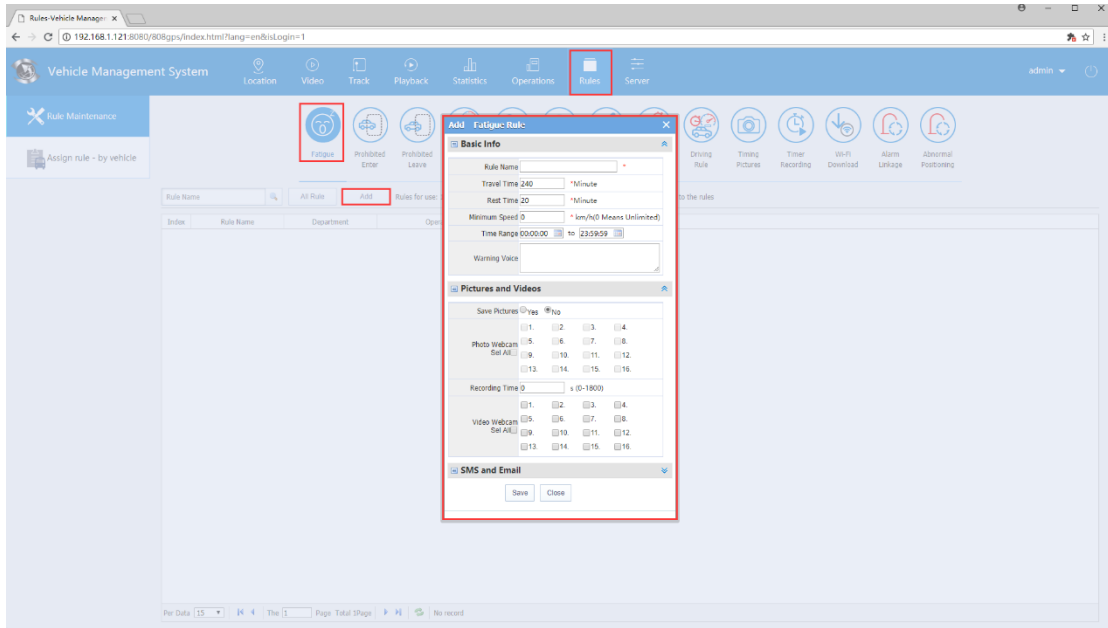


#### 4.9.2.2 Vehicle assignment rule


Select the rule and open the assignment button to find vehicles in unassigned vehicles and assign to this rule

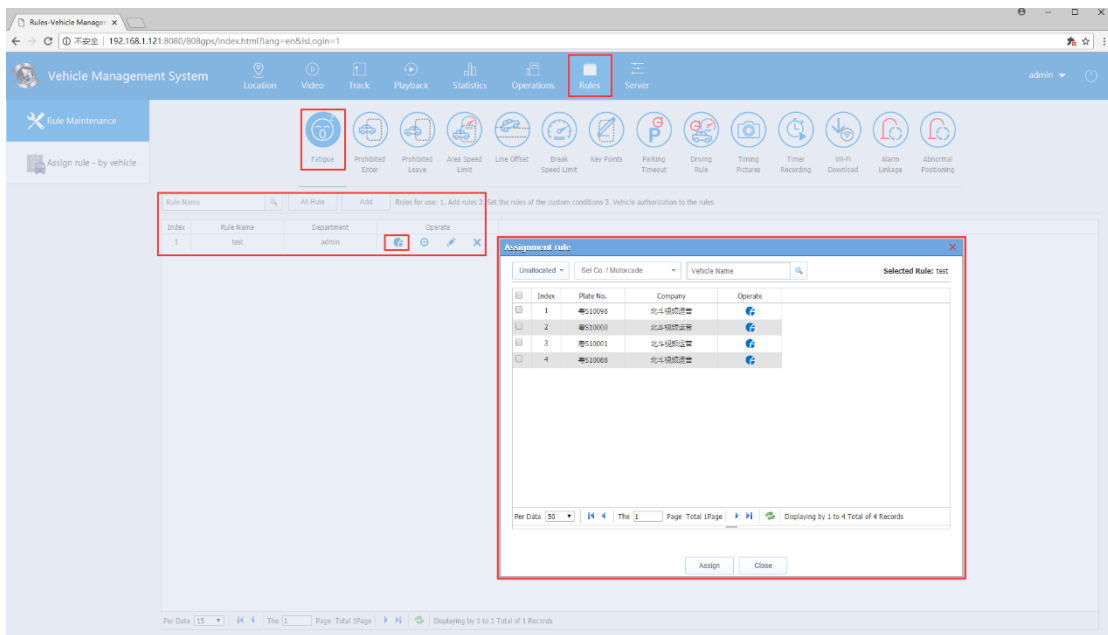

### 4.9.2.3 Cancellation of vehicle distribution from the rules

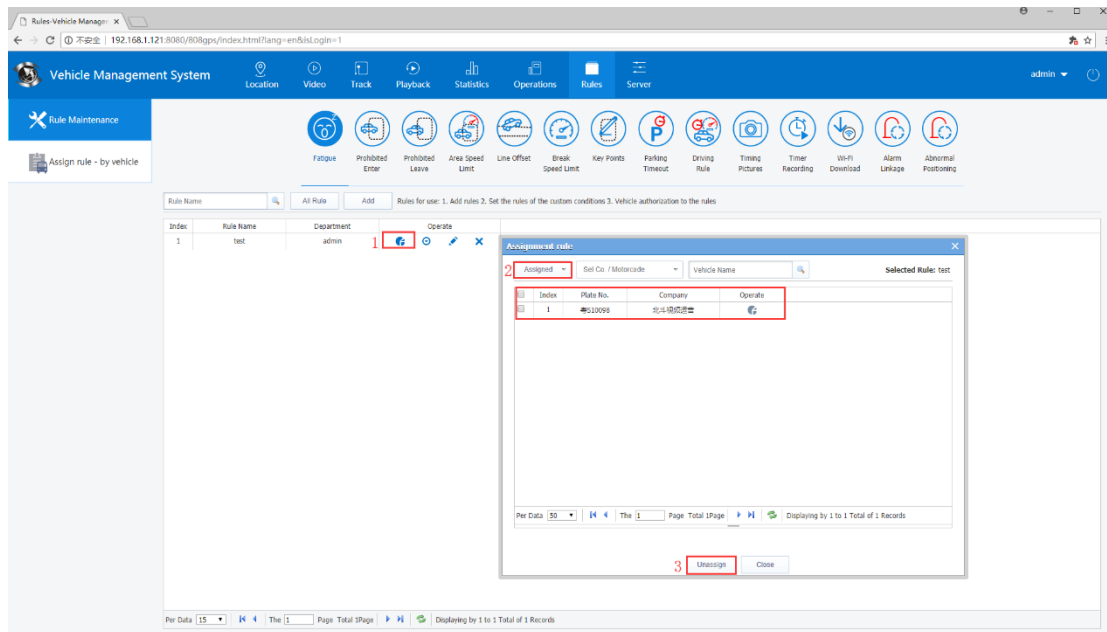

### 4.9.2.4 Query statement in alarm statement

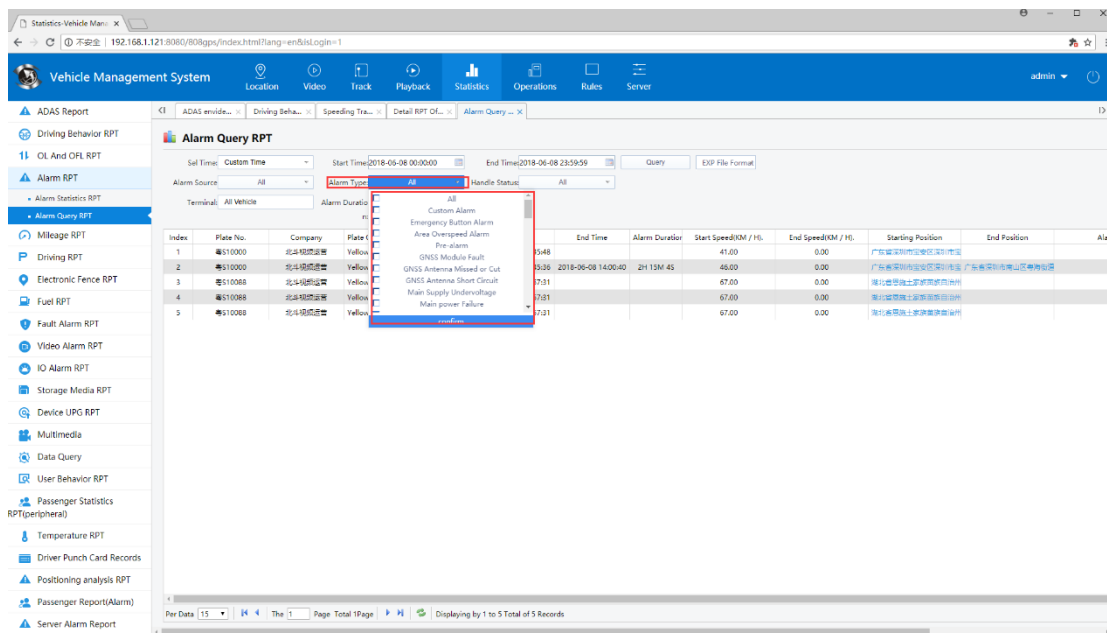


### 4.9.3 Parking timeout


Parking timeout is divided into two types: one is the timeout judged by the terminal software and the other one is judged by the platform.

The following is the one judged by the platform.

### 4.9.3.1 Add rule

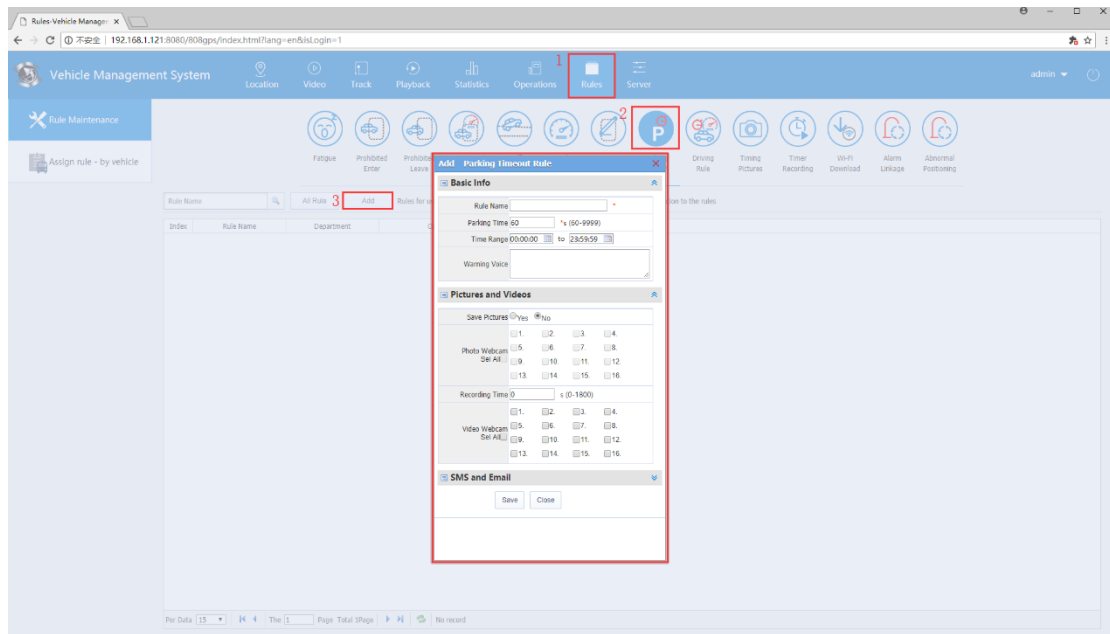


### 4.9.3.2 Distribution rule

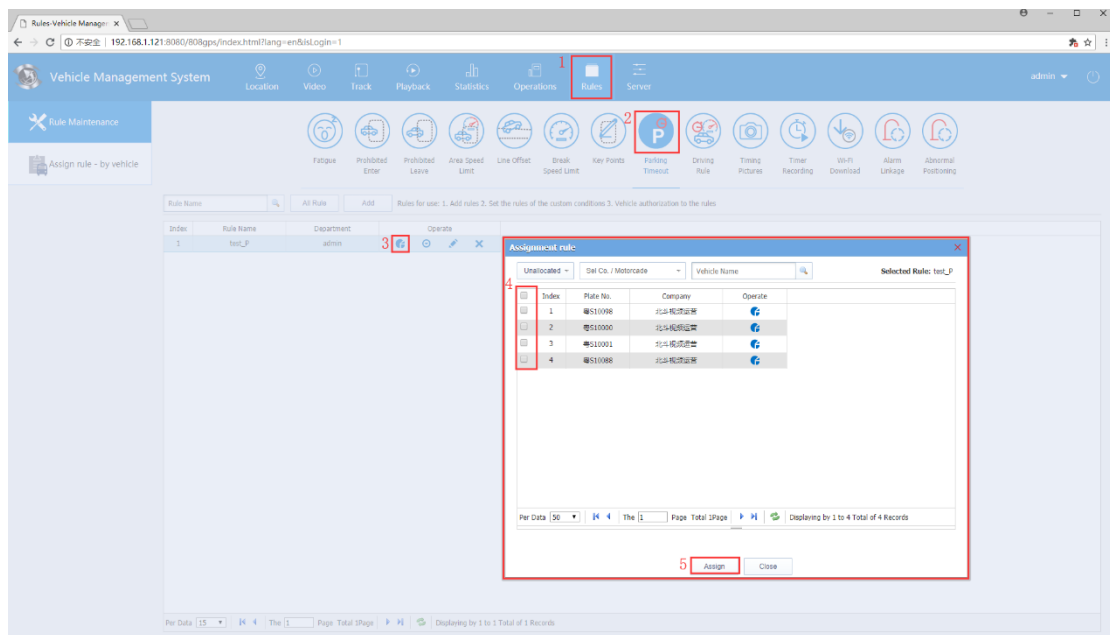


### 4.9.3.3 Statistics query on statements

It is the data statement submitted by the equipment

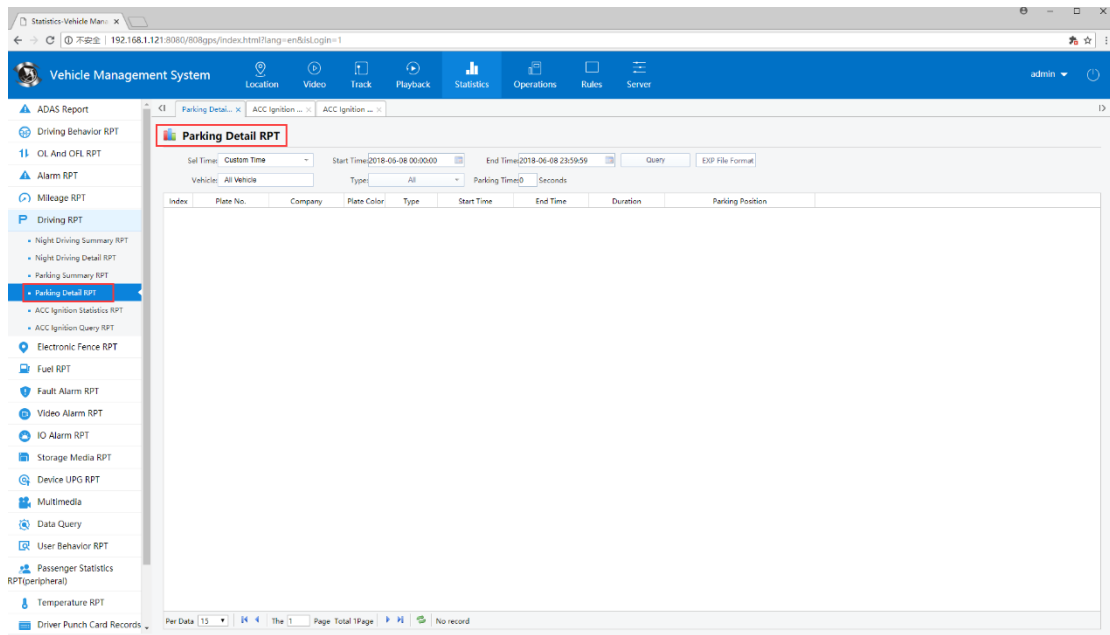

The parking statement generated by the platform rule

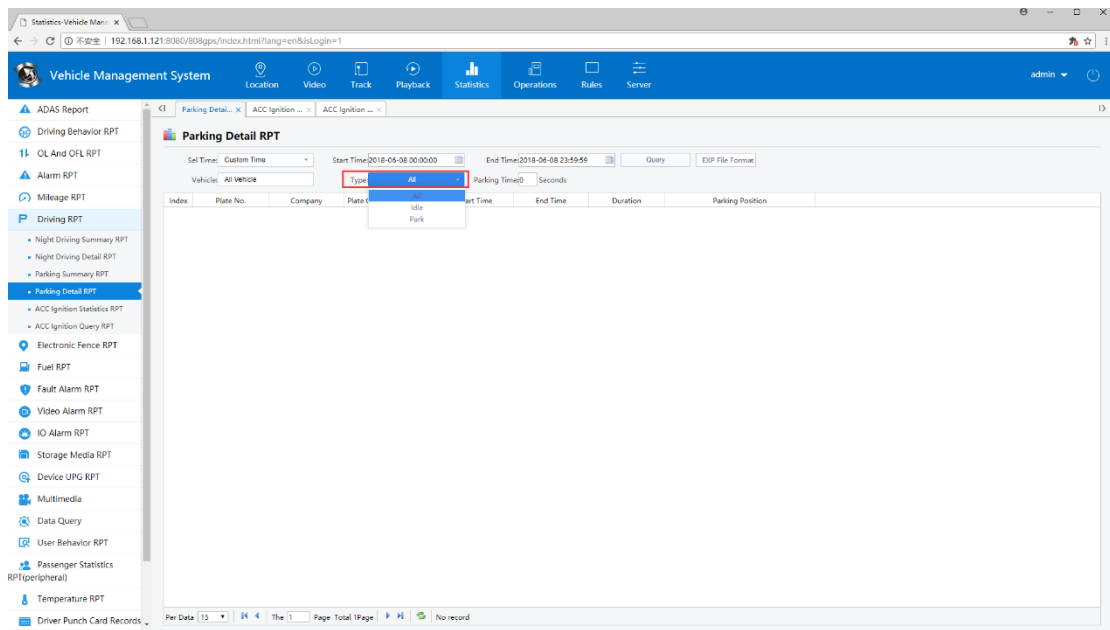

## 4.10 Electronic fence rules

Regional electronic fence: Entry prohibition rule, exit prohibition rule, regional speed limit


Line electronic fence: Line deviation, segmented speed limit

Point electronic fence: Key Points:


Taking the entry prohibition rule as an example

## 4.10.1 Set rules

If you need configuration to send e-mailing and messages, first configure the directory 4.9.1

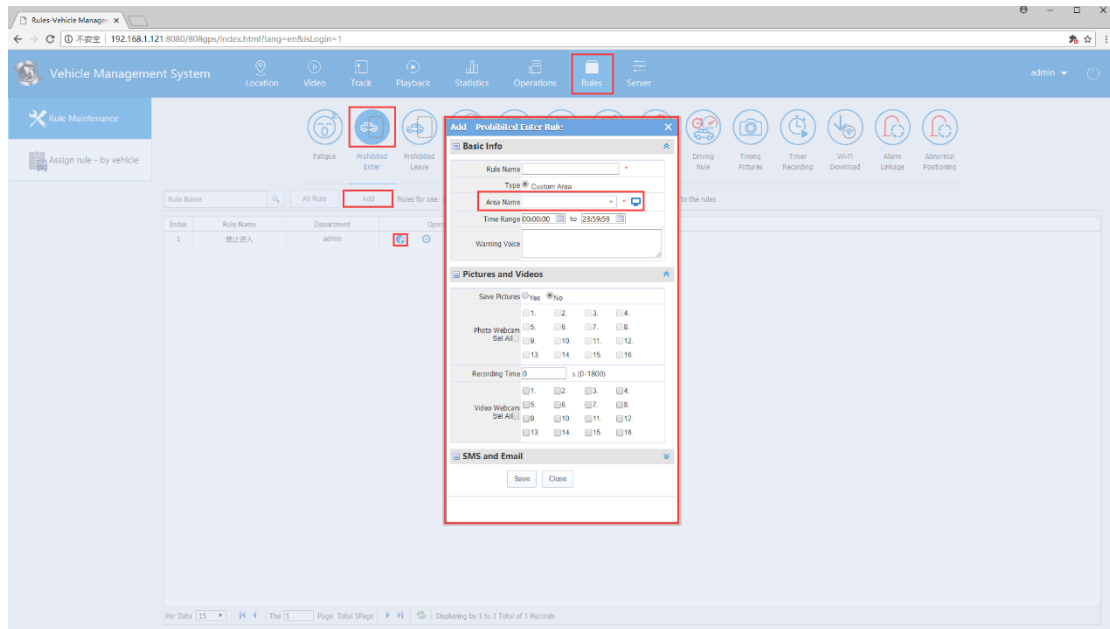


Set up regions and region names

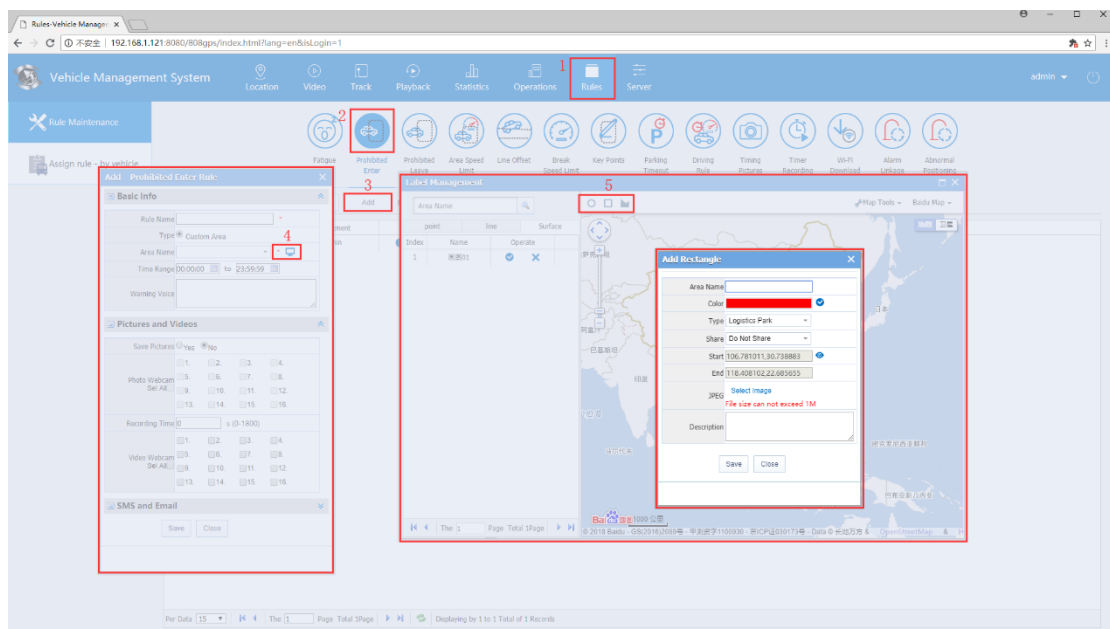

## 4.10.2 Distribution rules

The vehicles of entry prohibition are distributed below the rules: Select the rule and open the assignment button to find vehicles in unassigned vehicles and assign to this rule

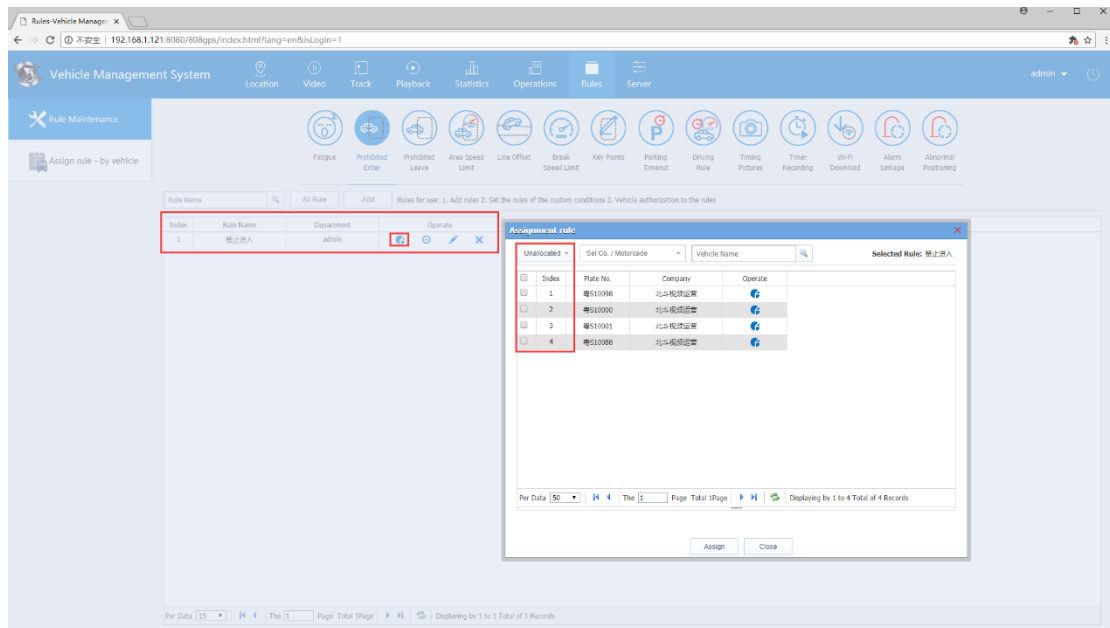


### 4.10.3 Cancellation of vehicle distribution from the rules

See the above directory 4.9.2.3

### 4.10.4 Query of related statements in the statements

Related statements can be queried both in the electronic fence statement and the alarm statement.

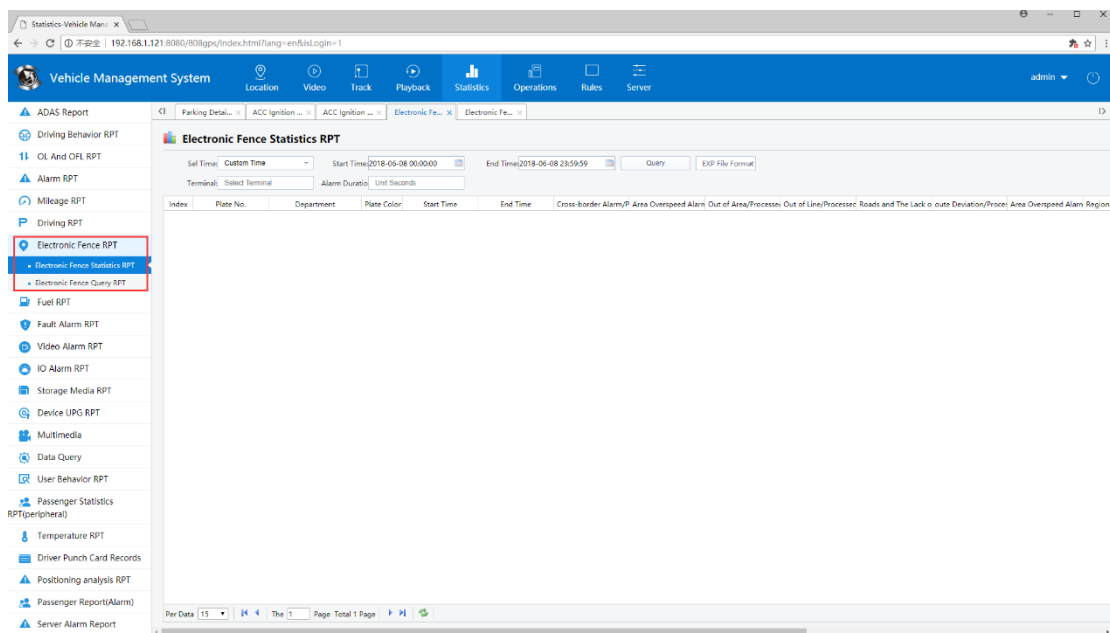


## 4.11 Timed photographing and timed video

### 4.11.1 Addition of the storage server and the storage relevance


Log in the background, enter the "server management" page, add the storage server, including the storage associated configuration.

The storage server can automatically download and save data to a storage server according to a user-configured plan. When the user uses the data, the data are downloaded directly from the storage server. For example: The channel video snapshots greatly reduce the costs, compared to real-time preview video (consuming 3G traffic).

a. Add a storage server (If you already have one, you do not need to add it again. This number must be consistent with the server number in the server configuration on the server console -> Service Configuration)

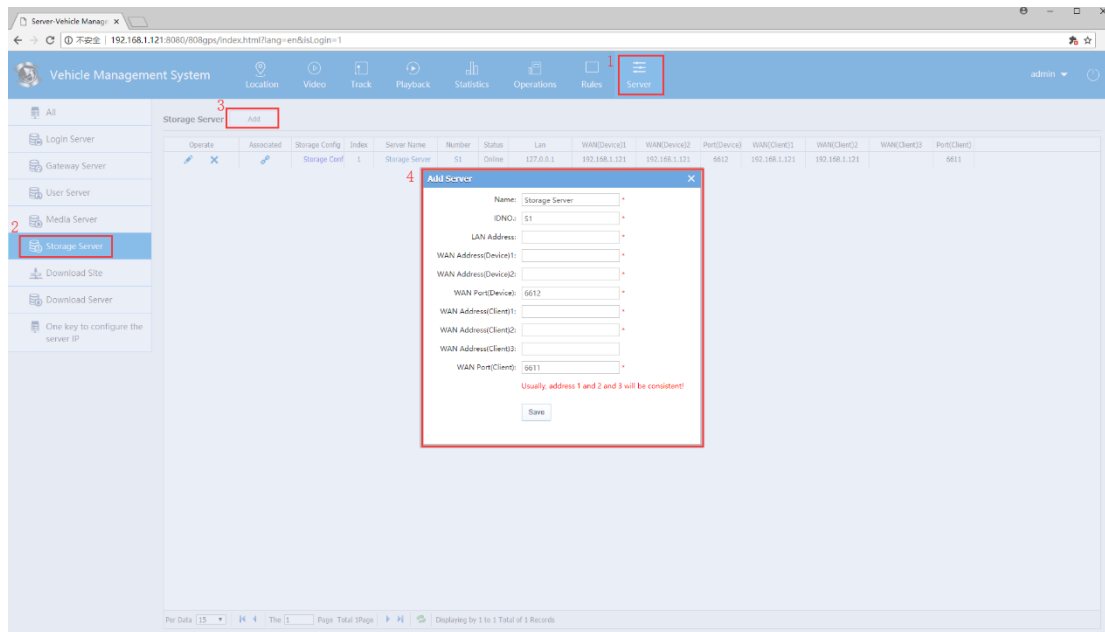

b. Add storage association

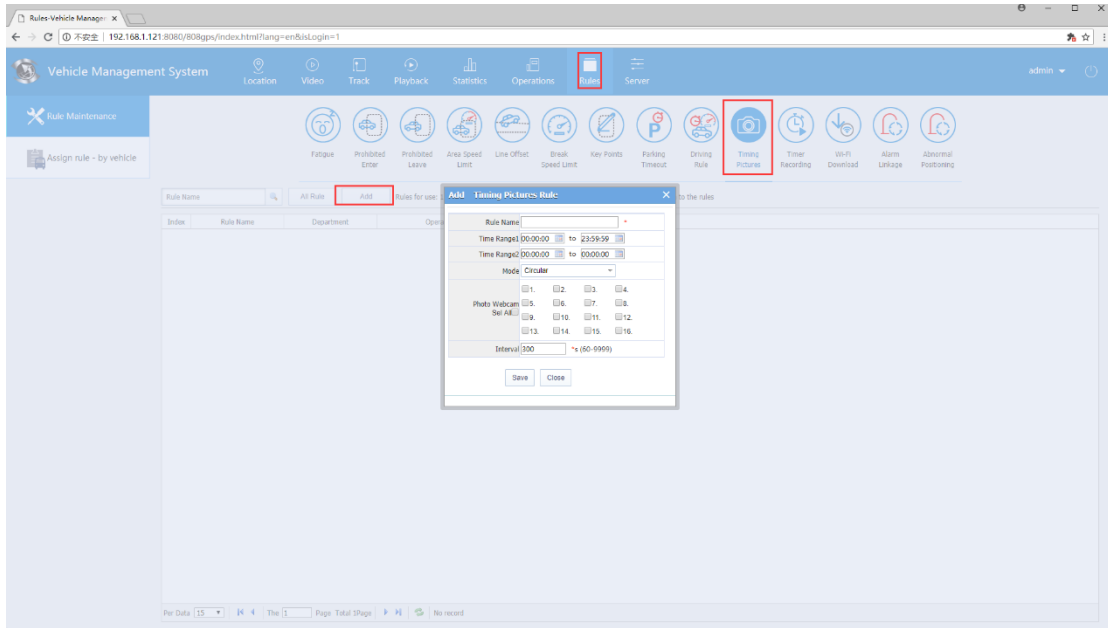


#### 4.11.2 Setting timing snapshot rules and timing video rules


Cycle snapshot in the snapshot mode:

After snapshotting channel 1, snapshot the second channel at the specified interval, and circulate it independently in order:


Each channel is independent, taking snapshots at intervals

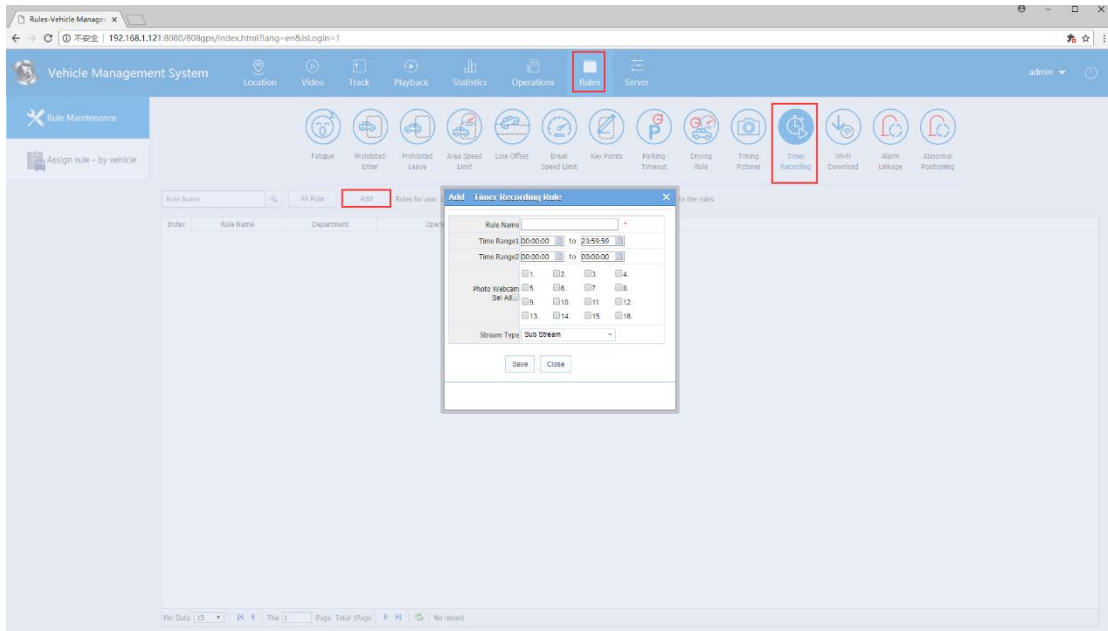

Timing video rule

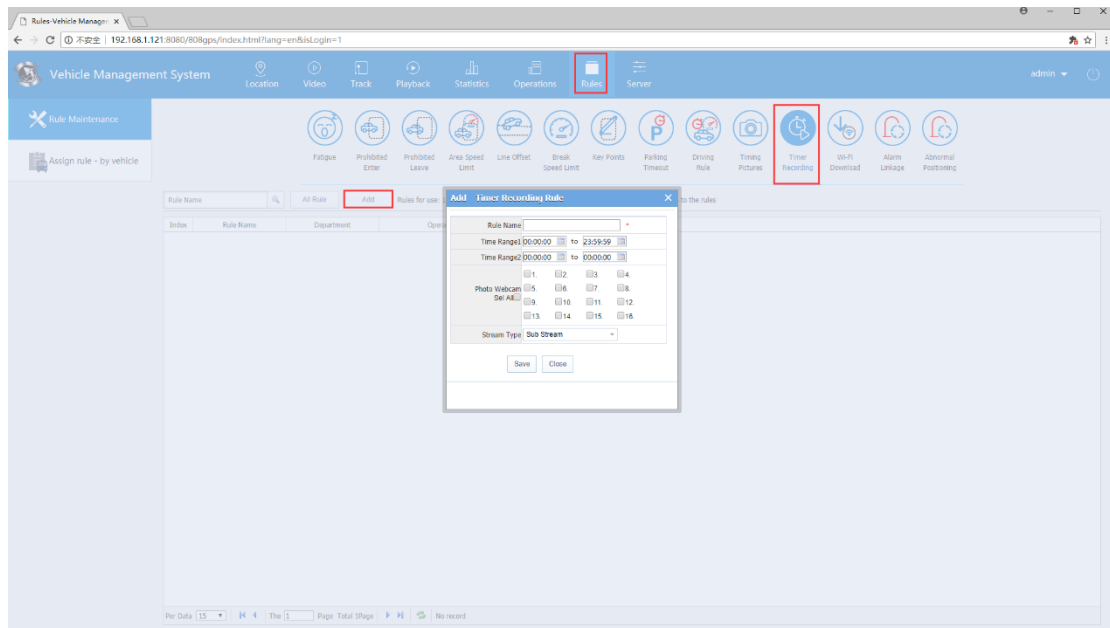

### 4.11.3 Query of video from Video replay selection server

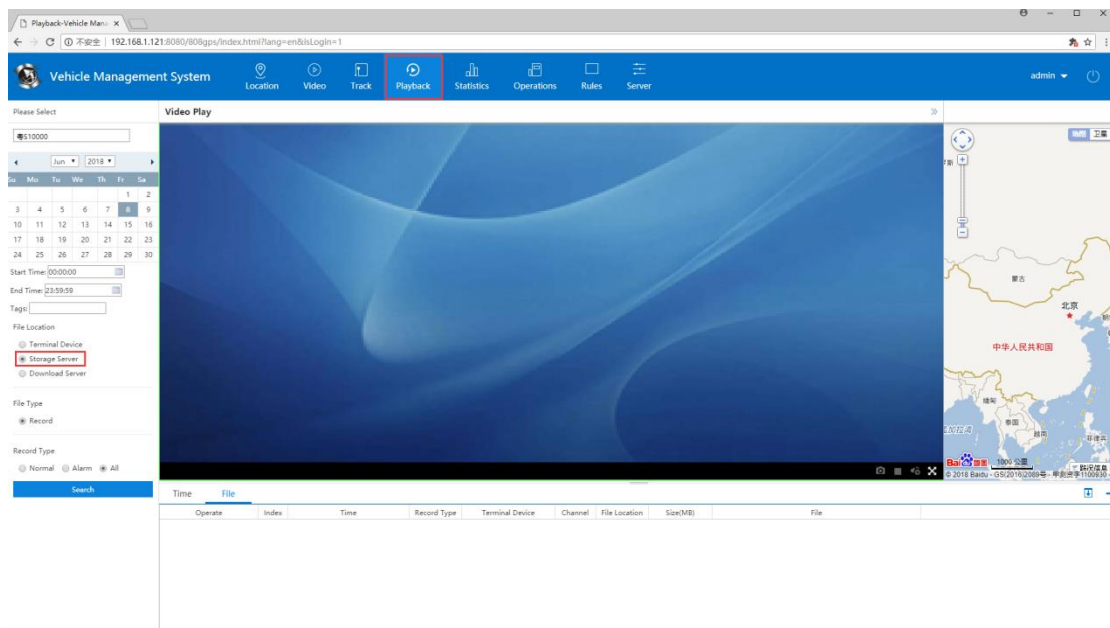


## 4.12 WIFI video download plan

Prerequisites for using wifi video download plan: The equipment has the wifi function.

### 4.12.1 Increase wifi download sites


Log in the background, open the server management, click the Download Site, open the page, and then click Add Download Site for configuration.


Note: The wifi download site must be the same as the wifi site used when the equipment reports, that is, the SSID must be the same in the same LAN, otherwise the download plan will not be executed.

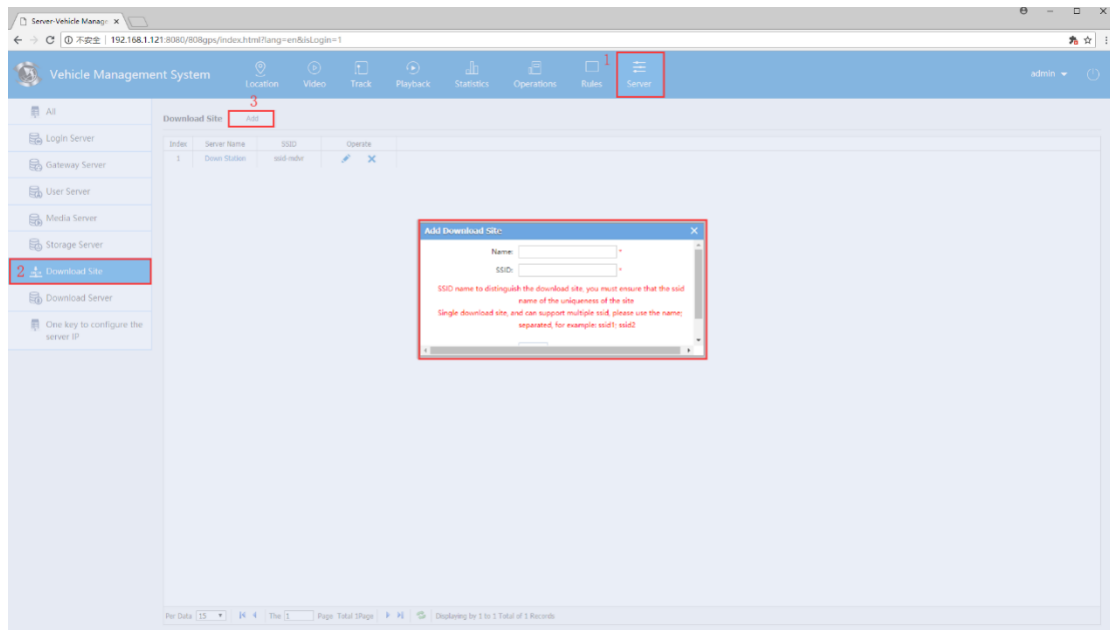

#### 4.12.2 Increase wifi download servers


After successfully adding the download site, add a wifi download server. As shown in the figure

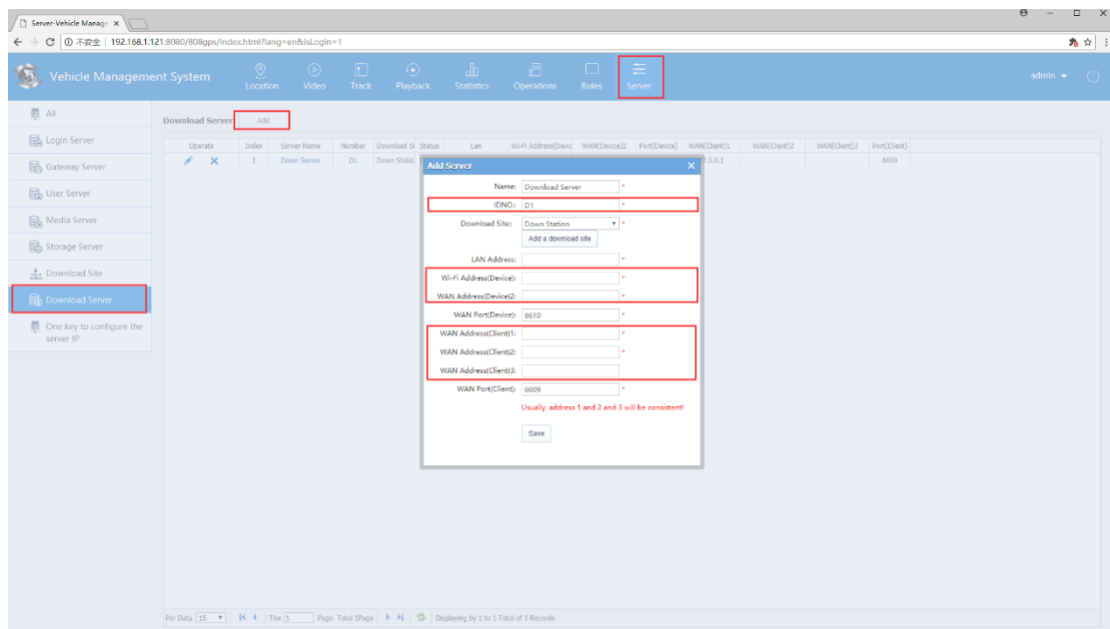

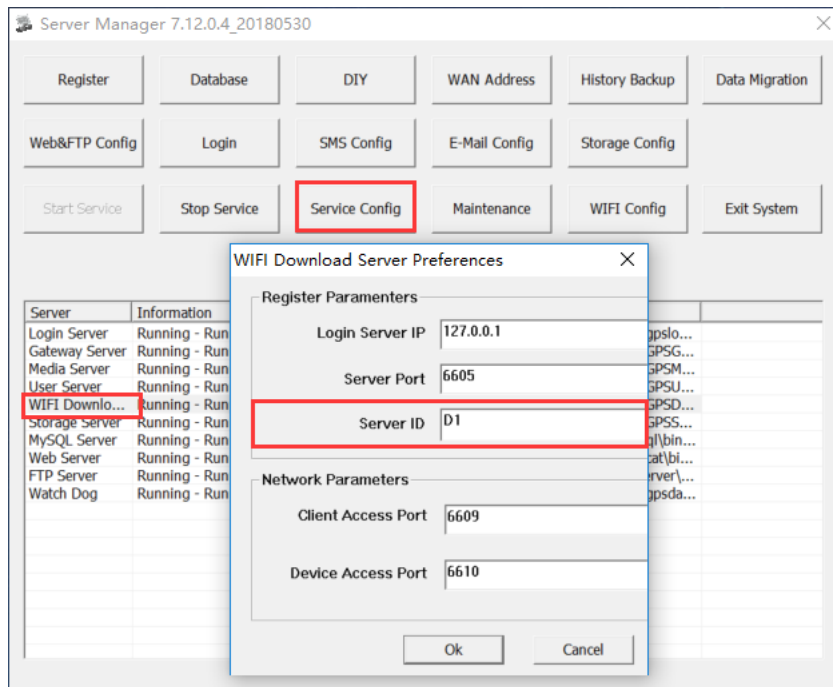


### 4.12.3 Configuration of wifi download plan


Log in web rules management, configure wifi download plan after successful configuration, the video file on the server will be automatically downloaded according to the configuration plan when the equipment is connected to wifi.

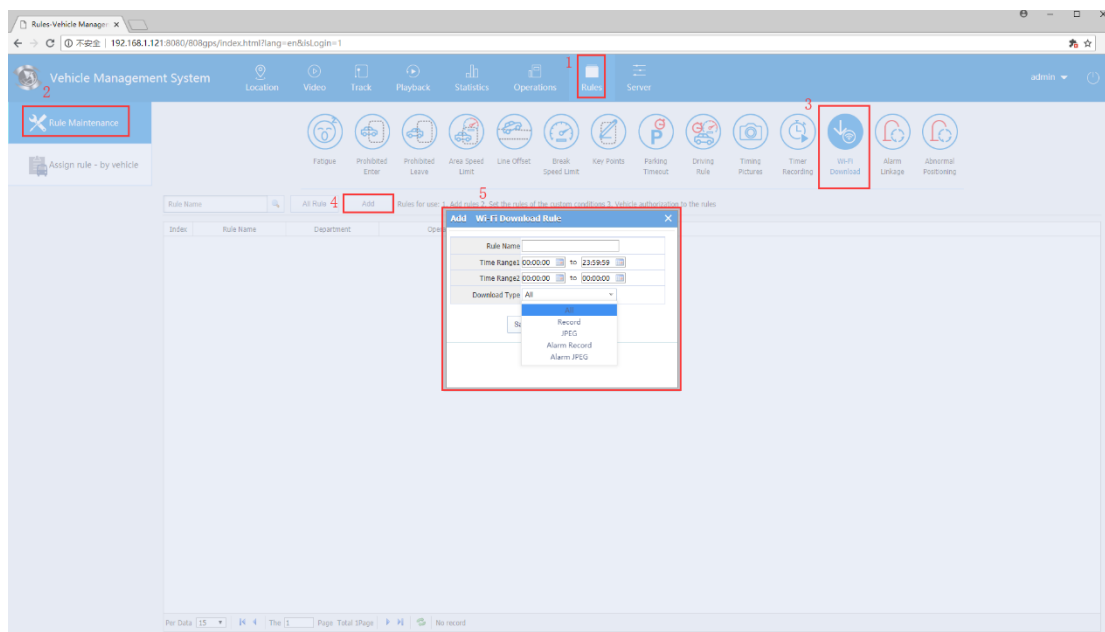


Distribution rule

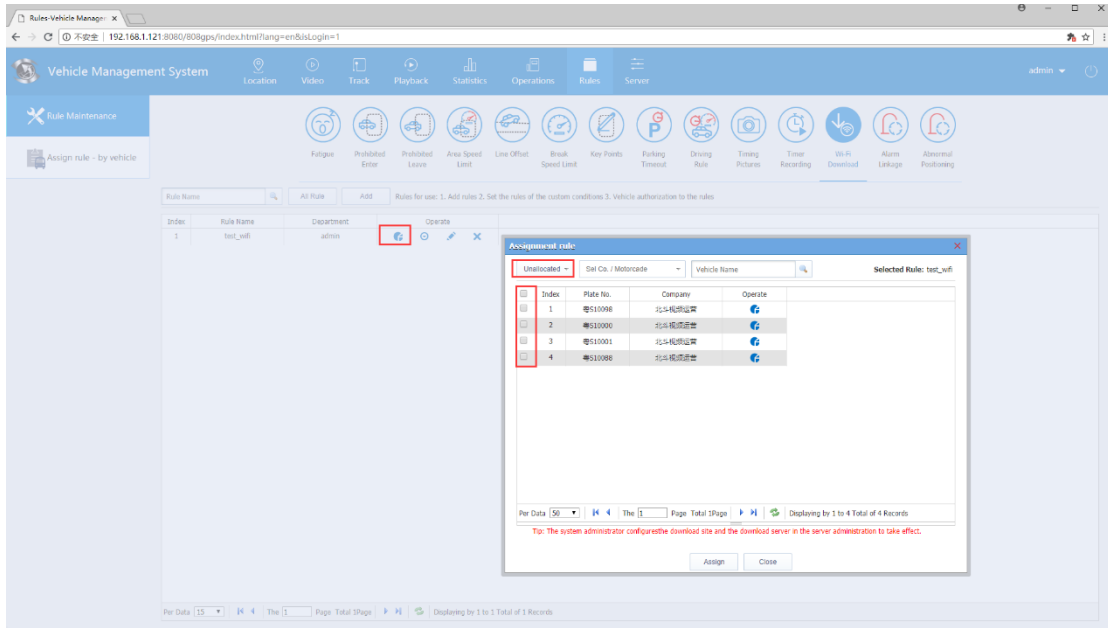

#### 4.12.4 Setting wifi download path and download status on the server software

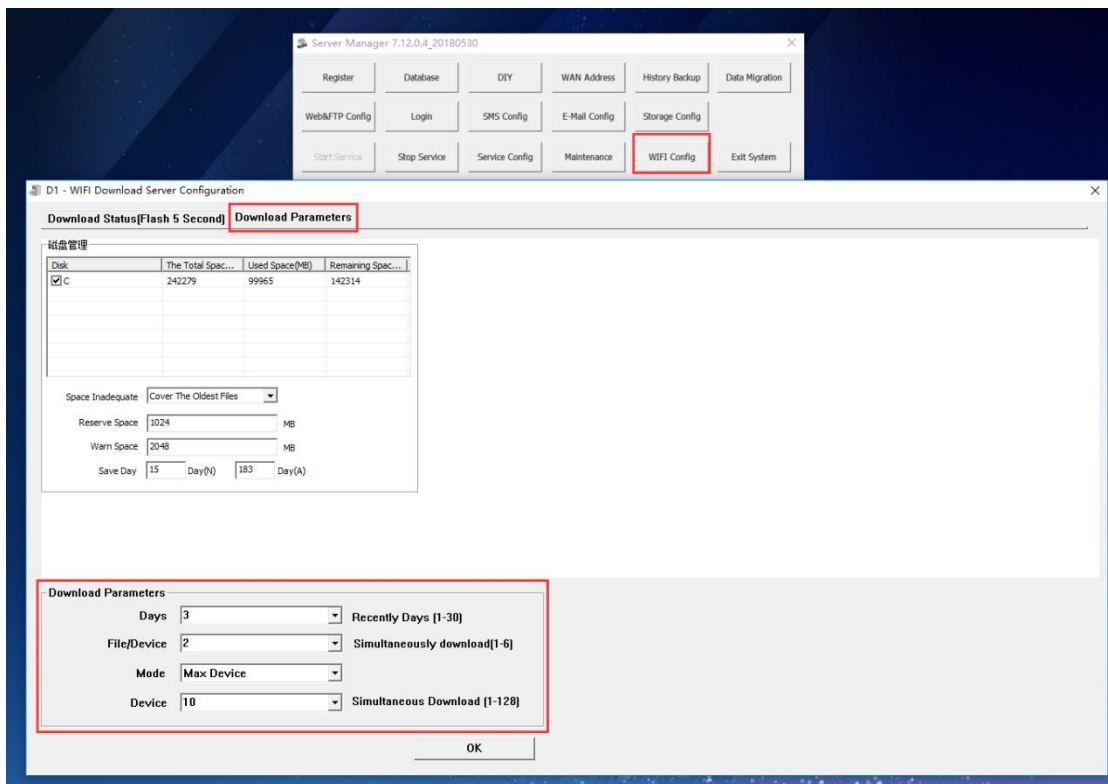

## 4.12.5 Playback of downloaded video under the interface of the video replay

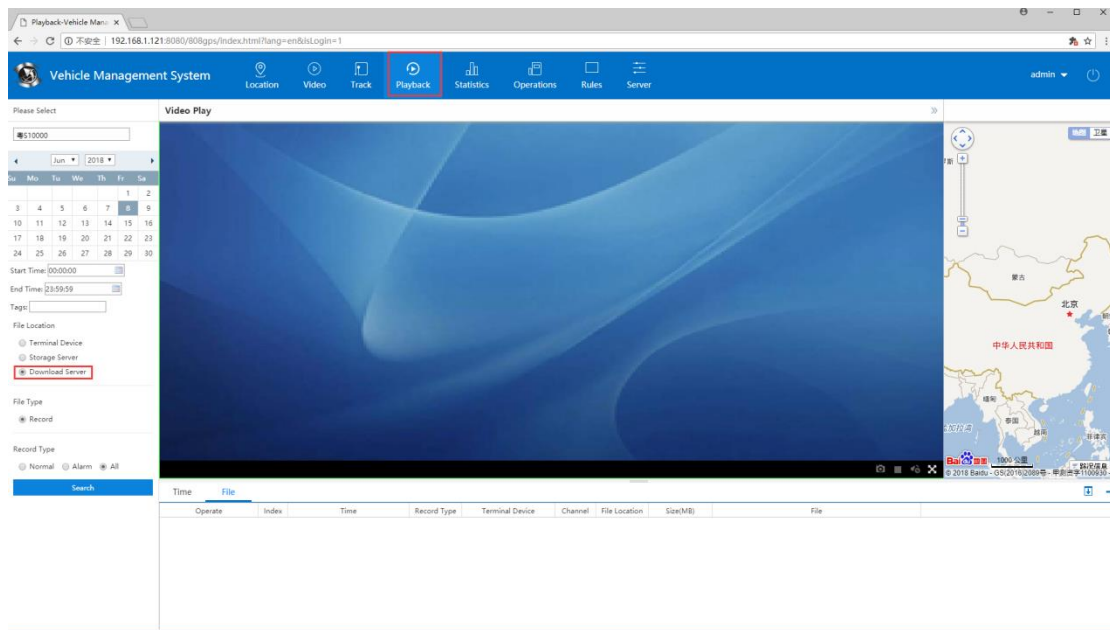


## 4.13 Alarm

### 4.13.1 Shielding alarm information

If the alarm in the mask list is checked, there will be no such alarm in the "Alarm Information" column of the WEB client side.

Click "Alarm Shield Configuration" to open the "Alarm Shield Configuration" window as shown in the figure.

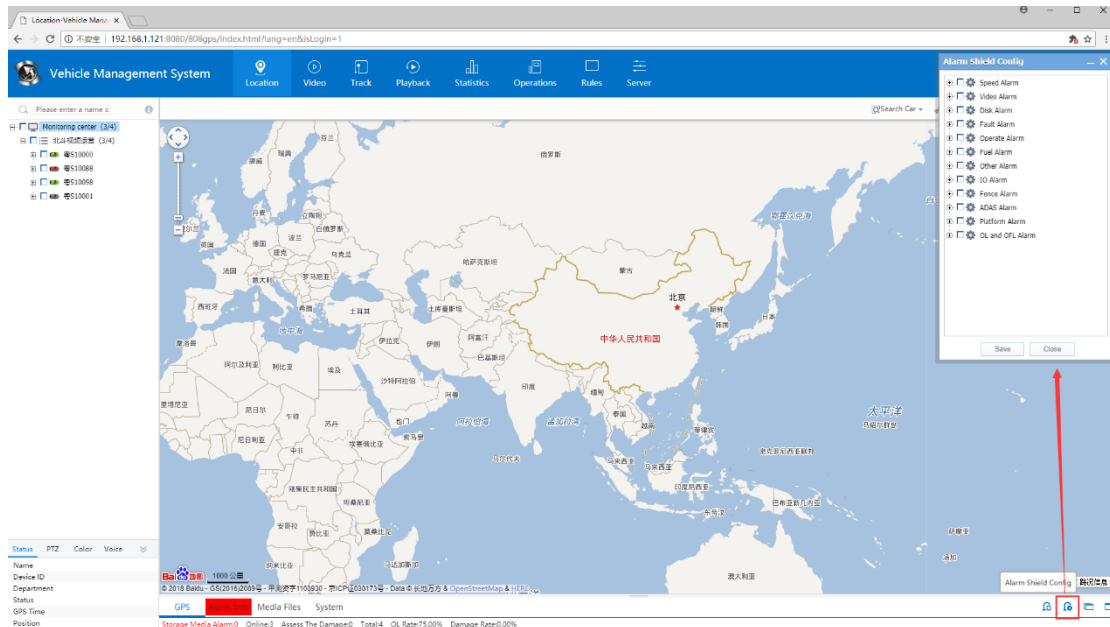


Directly check the alarms that needn't displaying on the WEB client.

### 4.13.2 Action with alarm of WEB client

When the user can specify one or more types of alarms to be generated through action with alarm function of the configuration equipment on the client, the web client can pop up a video window that generates an alarm, an electronic map lock function and other settings. (This action with alarm is only for this page)

Click "Action with Alarm Setting" to open the "Action with Alarm Setting" window as shown in the figure.

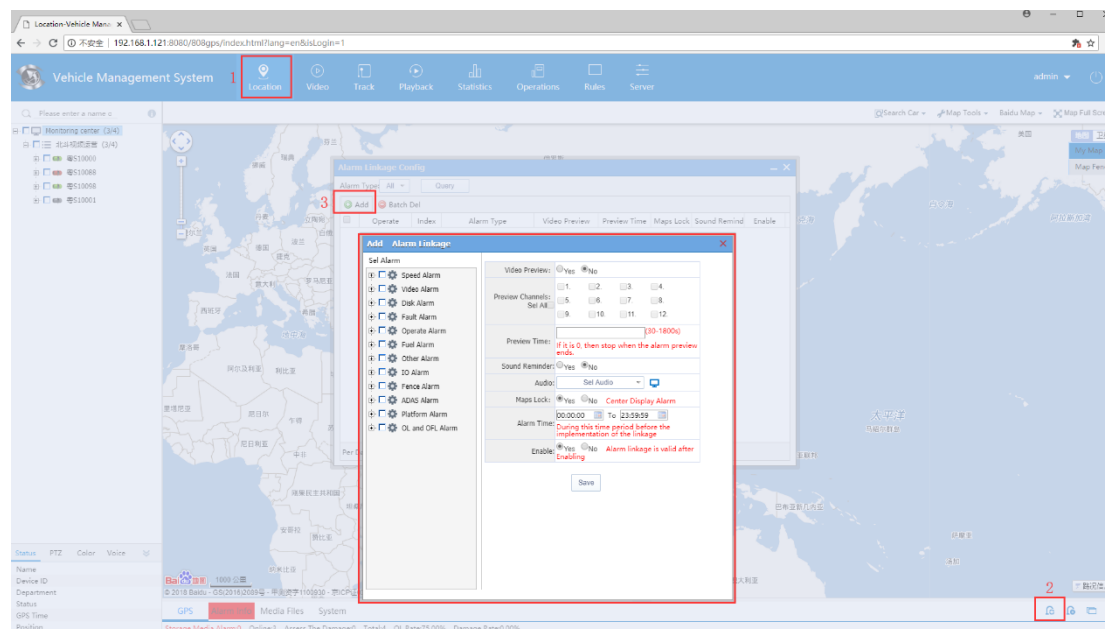

#### Add linkage alarm

When the setting window of the action with alarm is opened by default, the function of the left panel is not editable. Only when the equipment is selected, the right panel can be editable. Here you can set the action with alarm for each type of alarm for each equipment.

**Type of alarm:** Select the type of alarm associated with the equipment alarm (The corresponding action can be performed only when the device alarm type is the same as the alarm type set here).

**Video preview:** When an alarm is generated, a video of the channel of the equipment will be popped (the current version of the code stream type supports only the subcode stream).

**Alarm sound:** Set the sound of the action with alarm to select the default or customized sound.

**Electronic map locking:** When the associated equipment is linked, the monitored equipment will be centrally displayed on the map.

**Deployment time:** The action with alarm within this time period will be valid after it is enabled.

**Add Alarm Linkage**

Sel Alarm

- Speed Alarm
- Video Alarm
- Disk Alarm
- Fault Alarm
- Operate Alarm
- Fuel Alarm
- Other Alarm
- IO Alarm
- Fence Alarm
- ADAS Alarm
- Platform Alarm
- OL and OFL Alarm

Video Preview:  Yes  No

Preview Channels:  1.  2.  3.  4.  
 5.  6.  7.  8.  
 9.  10.  11.  12.

Preview Time:  (30-1800s)  
 If it is 0, then stop when the alarm preview ends.

Sound Reminder:  Yes  No

Audio:  Sel Audio

Maps Lock:  Yes  No **Center Display Alarm**

Alarm Time:  00:00:00 To  23:59:59  
 During this time period before the implementation of the linkage

Enable:  Yes  No **Alarm linkage is valid after Enabling**

Query linkage set

**Alarm Linkage Config**

Alarm Type: All

<input type="checkbox"/>	Operate	Index	Alarm Type	Video Preview	Preview Time	Maps Lock	Sound Remind	Enable
<input type="checkbox"/>	<input type="button" value="✎"/> <input type="button" value="✖"/>	1	Speed Alarm	No	no	Yes	No	Yes

Per Data 15   The 1 Page Total 1Page  Displaying by 1 to 1 Total of 1 Records

When the alarm generates, the corresponding linkage occurs.

### 4.13.3 Action with alarm of server rules

This action with alarm is for all login users.


### 4.13.3.1 Action with alarm of rule management configuration

When the specified equipment occurs with the specified alarm, the server will automatically send SMS and email notifications to the configured mobile phone number and mailbox. (See email and SMS settings in directory 9.1)


#### 1. Configuration rule

1 Please fill in the mobile number normally; if there are more than one mobile number, please separate them with ";"multiple. The SMS contents are terminal+time+alarm description.

2 Please fill in the email address normally; if there is more than one mobile number, please separate them with ";"multiple. The SMS contents are terminal+time+alarm description.

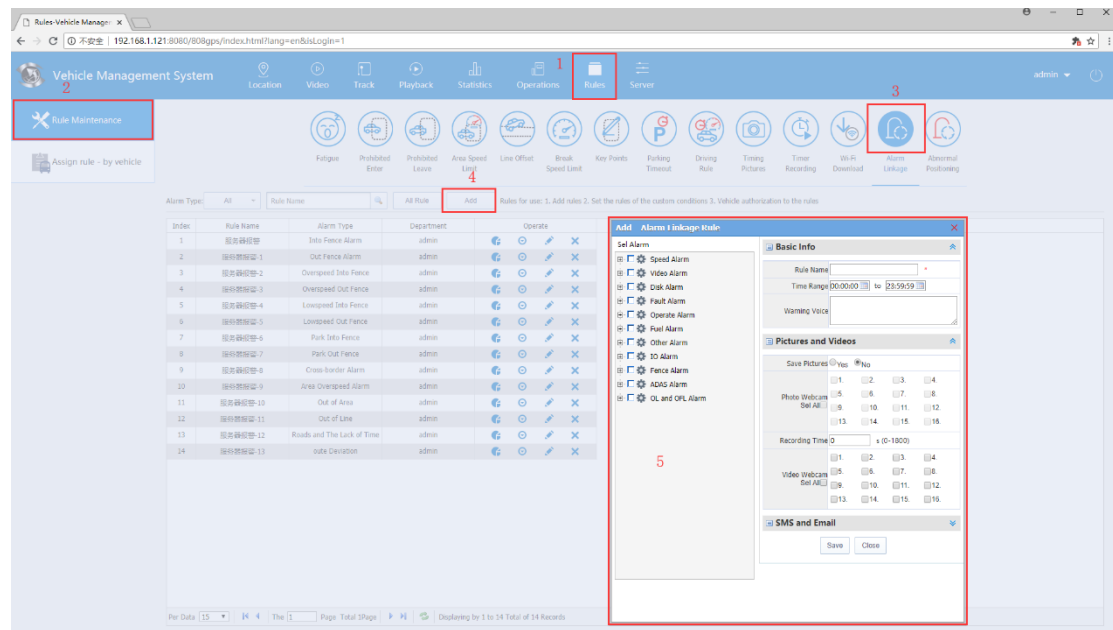


#### 2. Distribution rule

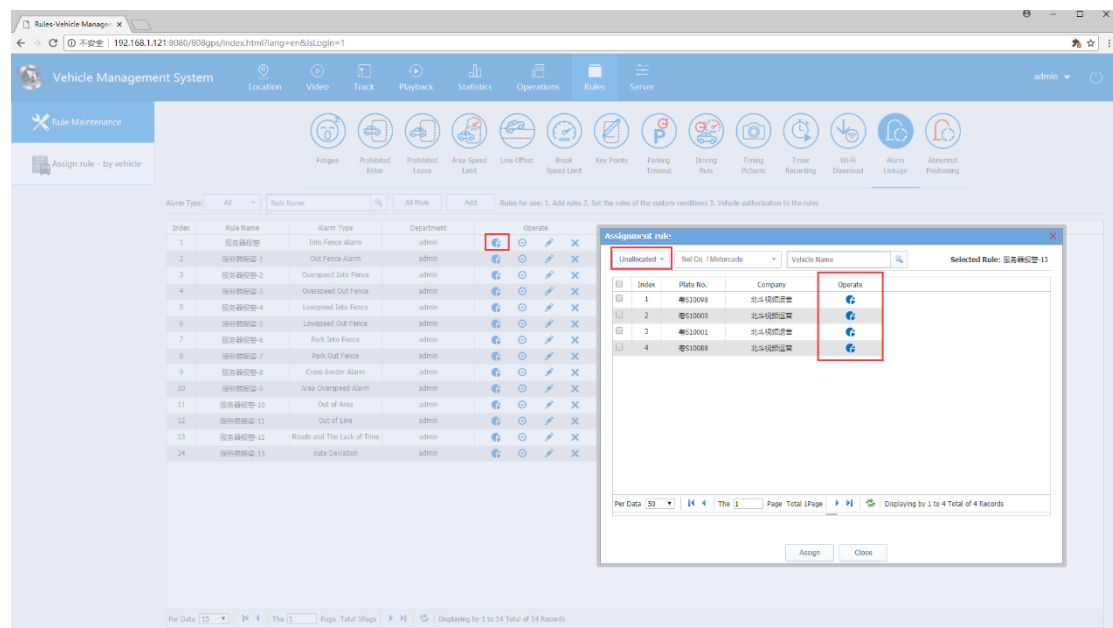

## 4.14 Issuance of literal information


Users can send the literal information to the vehicle it manages to notify the driver in the WEB client.

The premise is that the equipment has a TTS voice function or a display screen, and at the same time, the peripheral information module TTS is checked on the Vehicle Information » Edit Vehicle » Equipment Information.

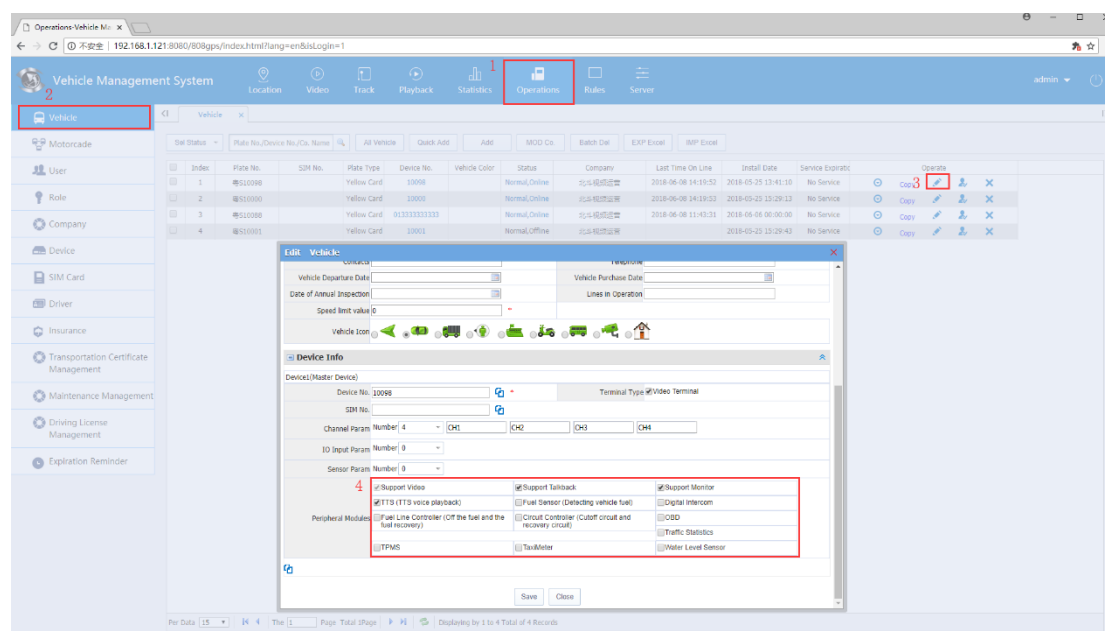

### 4.14.1 Opening of issued literal information

The opened literal information includes: In the vehicle list, on the map vehicle information

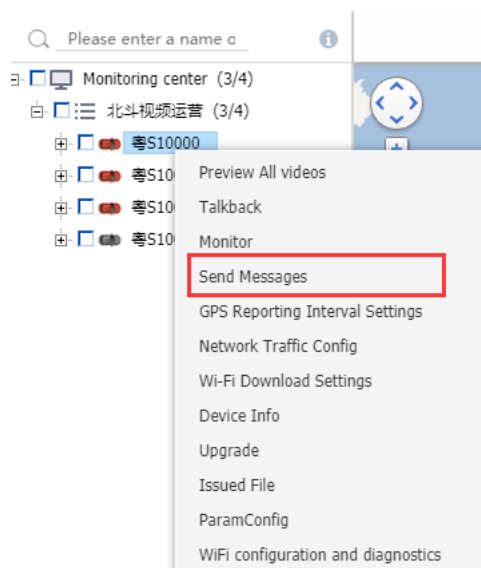


### 4.14.2 Operation of issued literal information

A. Click Send Literal Information on the vehicle list, and the sending interface appears; the vehicle tree on the right shows the online vehicle; check the Vehicles Sent, input the delivered text, and click Send; the sending status will be prompted in the list below.






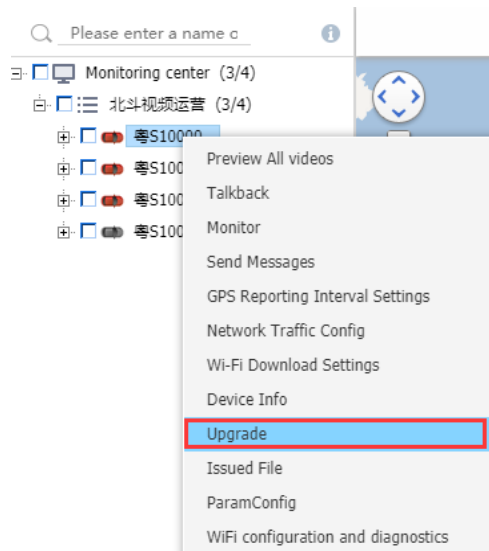


### 4.15.1 Addition of the upgrade task

When the equipment has no upgrade task

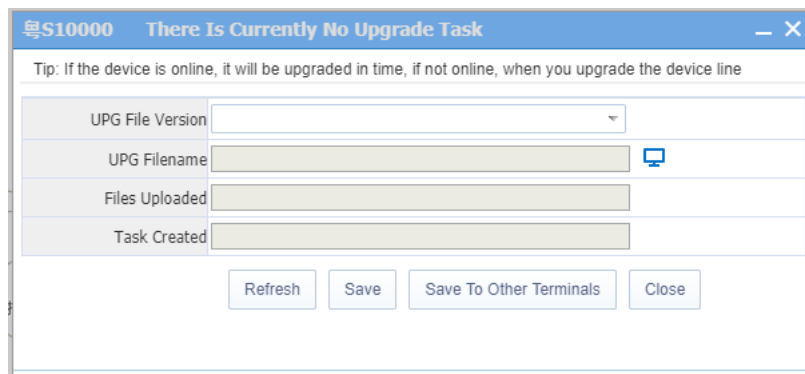

When the equipment has upgrade task

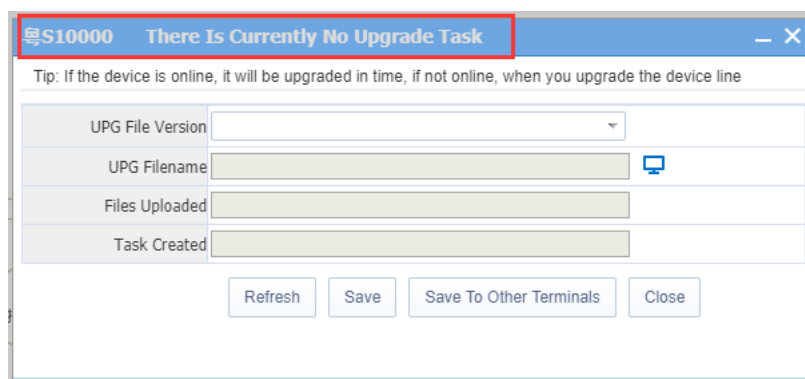


When the equipment has the upgrade task, the edit button needs to be clicked before the upgrade file version is replaced

Description: Those listed in the upgrade file version refer to the latest ten file records

### 4.15.2 Saving to other vehicles

It means that the current upgrade task can be saved to other multiple vehicles at the same time


After clicking to save to other vehicles, the page is shown as the figure below

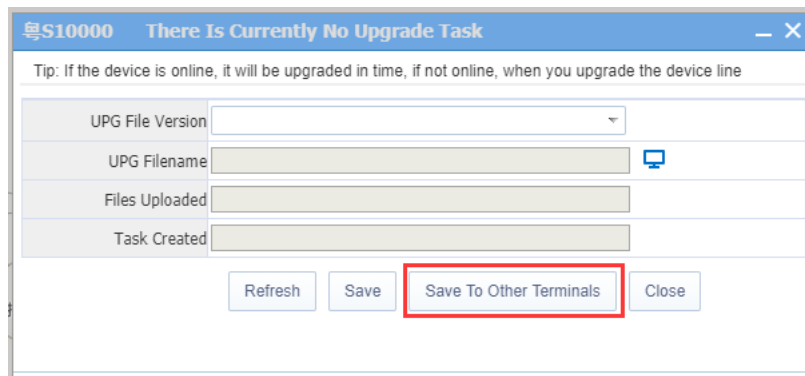

The vehicles listed in the above figure refer to those with the same agreement as the equipment under the equipment upgrade task interface

### 4.15.3 File management


When clicking the file management button on the equipment upgrade task interface, the following interface will display (shown in the figure below)

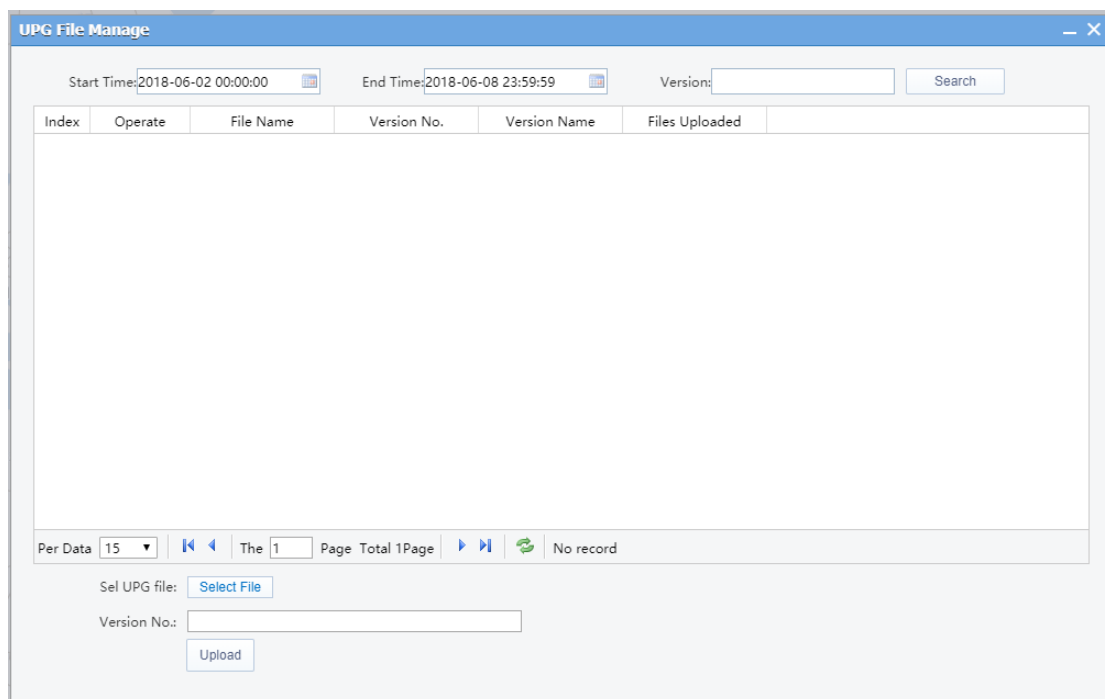


### 4.16 Issuance of files

It refers to the function of issuing the picture or file on the platform to the equipment.

1、 When selecting the vehicle on the vehicle list to issue the file, right click to select the file issuance. As the figure below

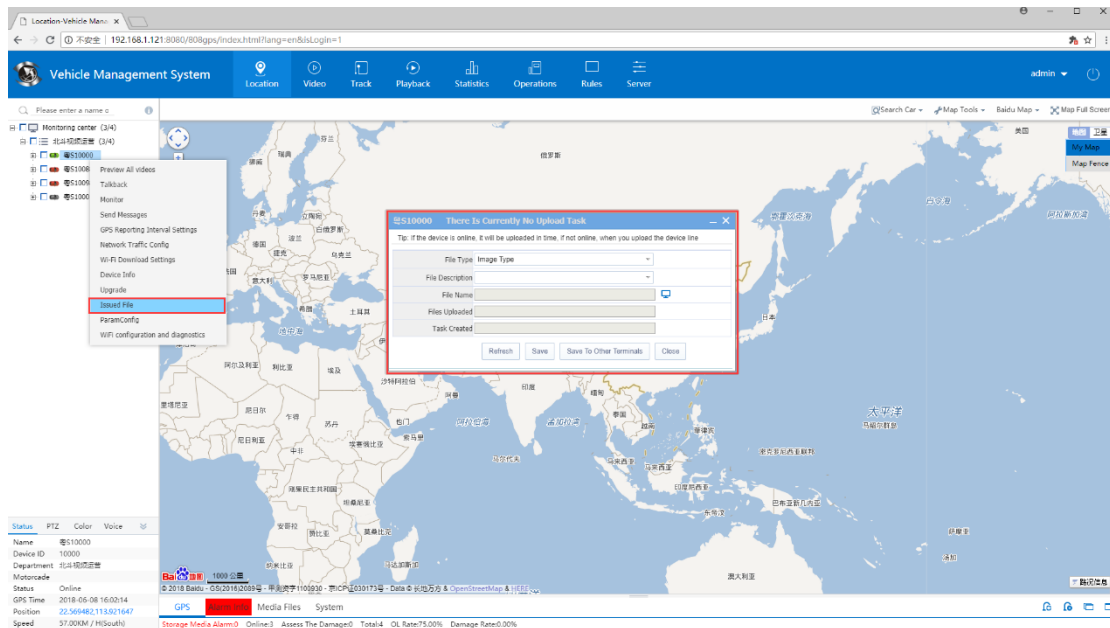

## 2、Uploaded file management

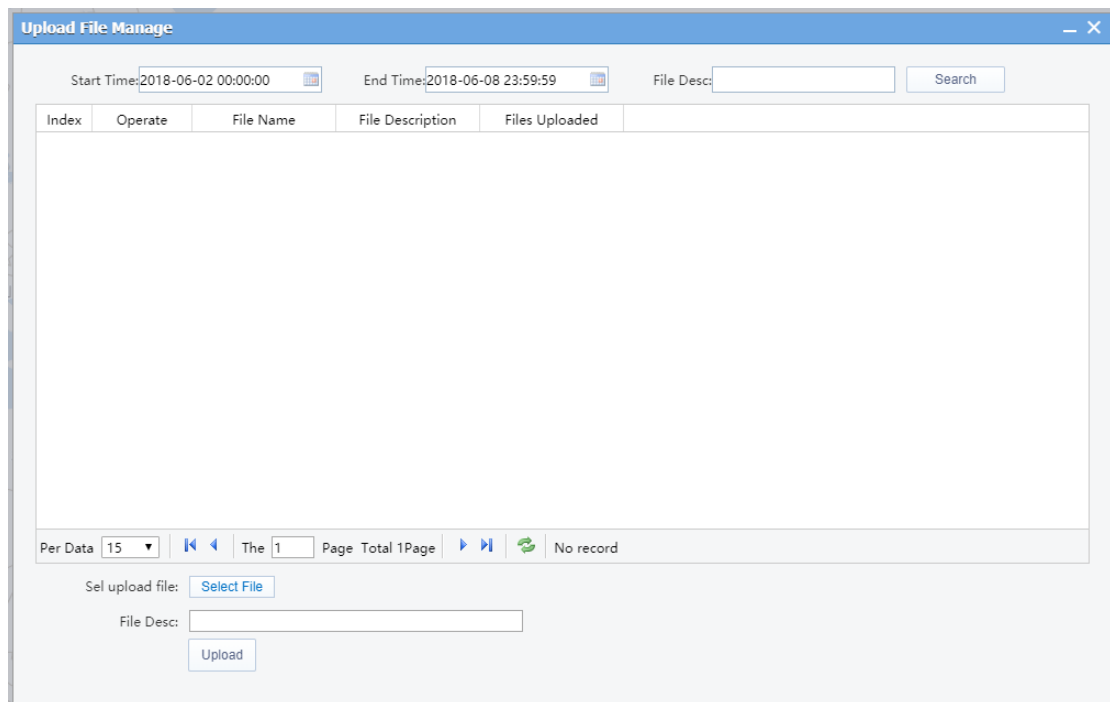


- A. File type: Picture type and configuration file (the file realization mainly depends on whether the equipment has this function)
- B. File description: It can be customized
- C. File title: It can be uploaded to the server from PC port
- D. Time of uploading the file: The time of uploading the file can be recorded
- E. Task creation time: The creation time can be generated after saving

## 4.17 Configuration of oil mass


### 4.17.1 Setting configuration of oil mass

With the oil mass sensor function, the equipment can carry out the configuration of oil mass parameters and tick the peripheral module in the vehicle information.

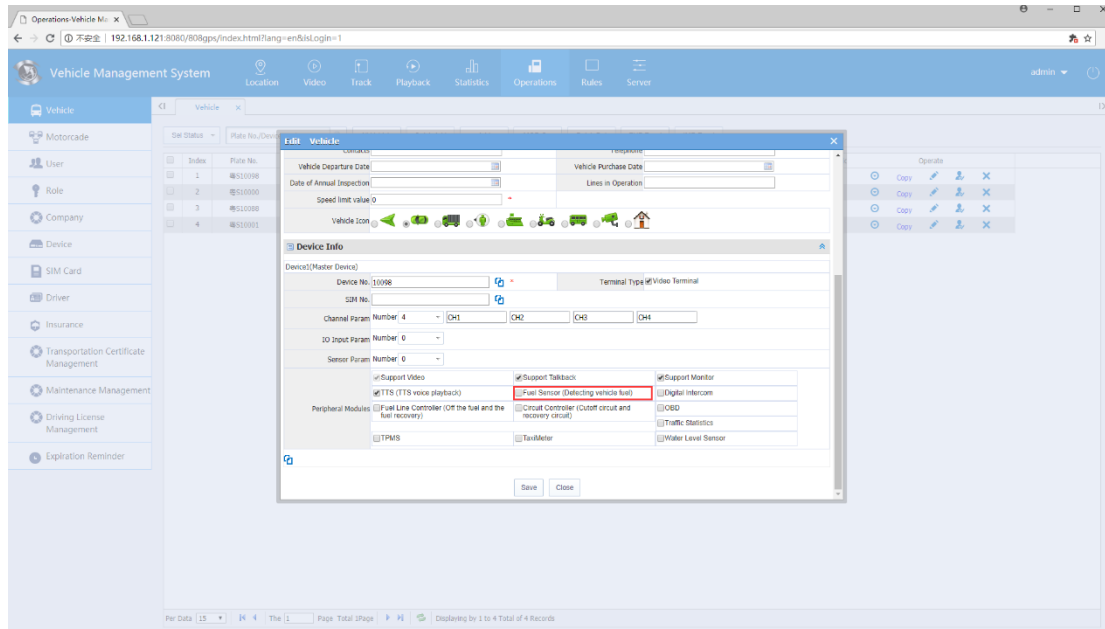


Configuration operation of oil mass: Right click the vehicle to be configured on the vehicle list to select the configuration of oil mass


With the oil mass sensor (as shown in the figure below) Equipped with the oil mass configuration button

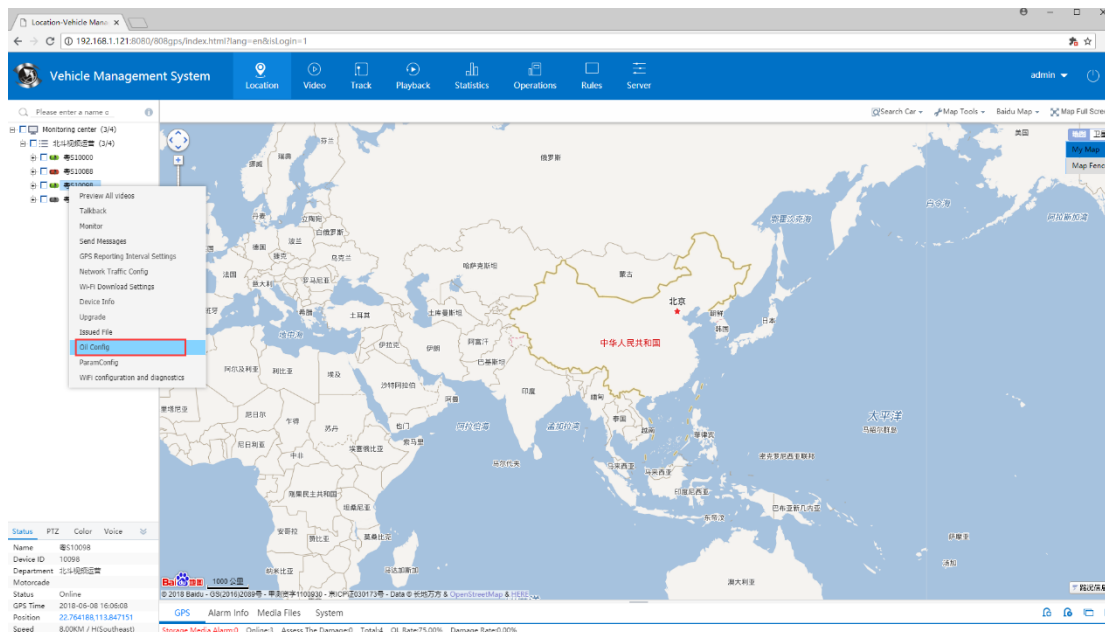

Without the oil mass sensor (as shown in the figure below) not possess the oil mass configuration button

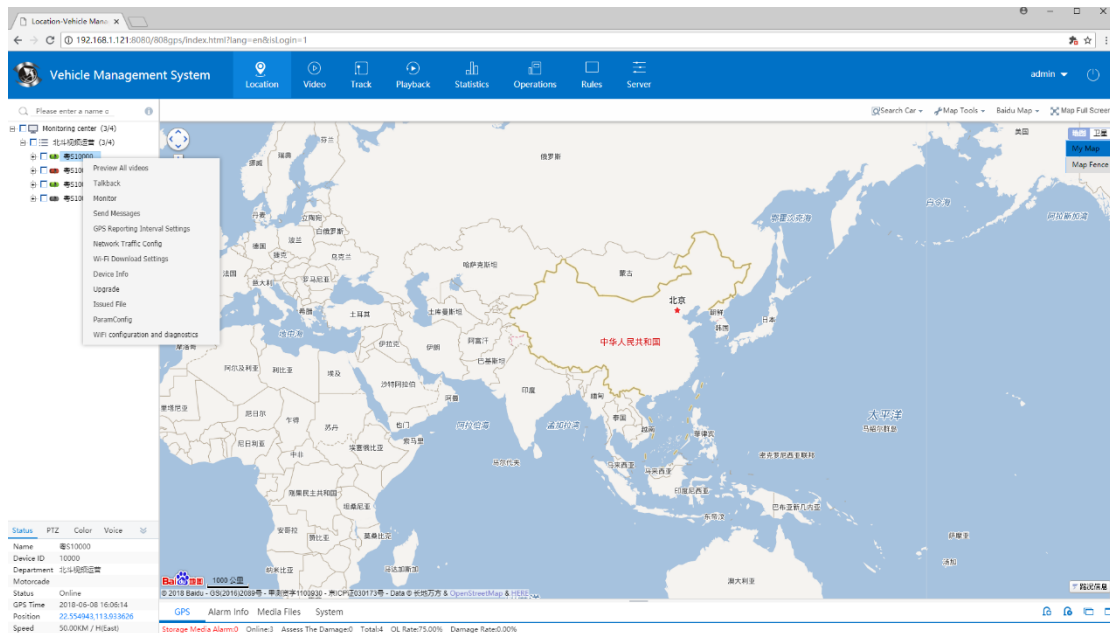


The oil mass configuration interface is shown in the figure below

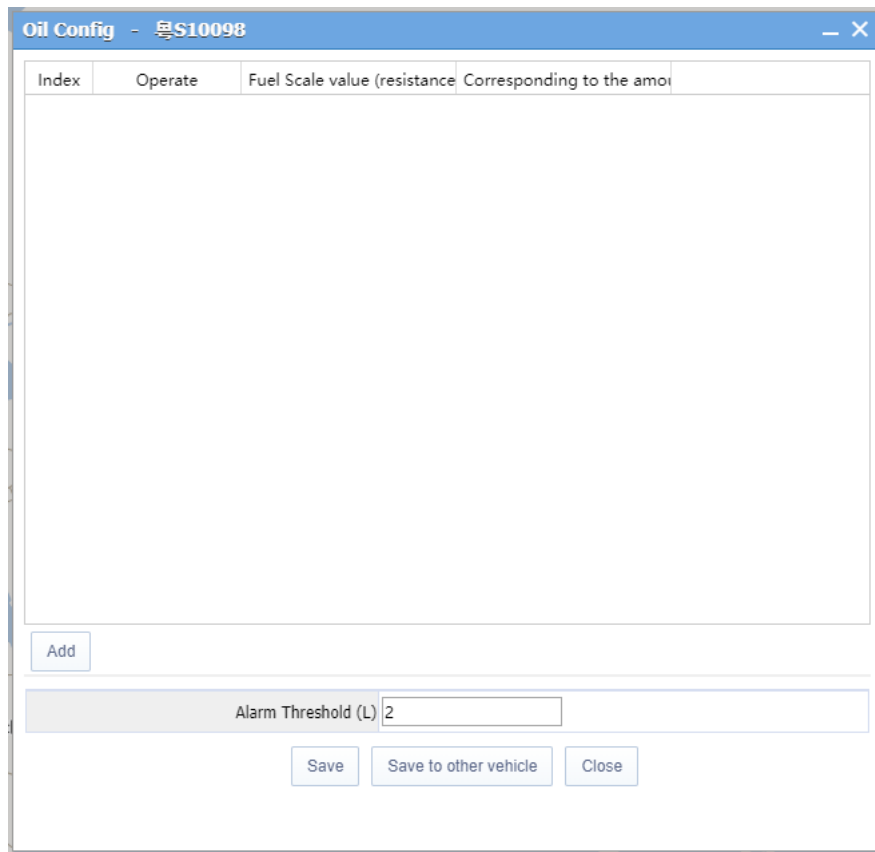


2.1 Click the add button to add the oil scale value and setting of corresponding oil mass

After clicking, the following interface will display

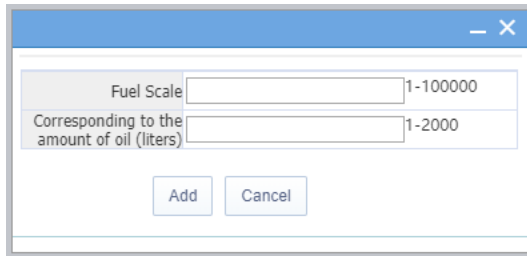

It can be added for many times but the page needs to be manually closed

Requirements for configuration scale and the corresponding oil mass, take an example: As follows

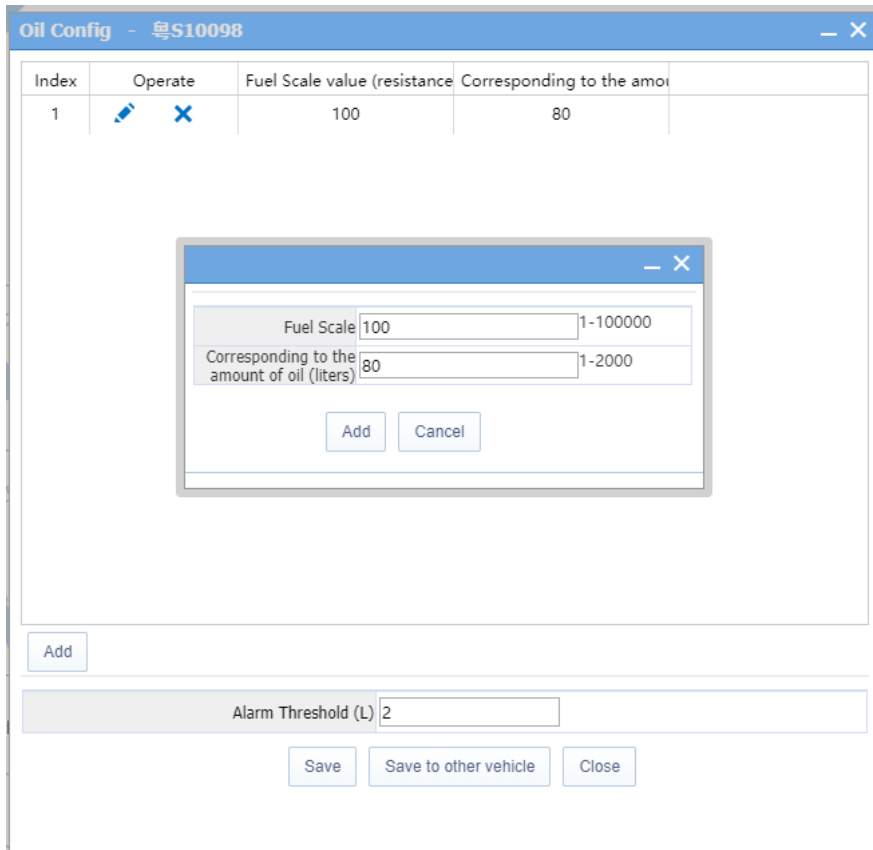

Rules filling in: 1 Fill in the relatively small value and the relative oil mass value 2 Fill in the maximum sensor value and the corresponding maximum oil mass value 3 Fill in the value between the above two values. (The more you fill in, the more accurate)

Alarm threshold setting: When the oil mass suddenly changes and is more than or less than the set threshold, the alarm will sound. At the same time, the alarm information will be also recorded in the statement.

## 2.2 Edit button

After clicking, the following interface will display (as shown in the above example, click the edit button corresponding to the serial number 2)

A dialog box with a blue header and a white body. It contains two input fields. The first is labeled 'Fuel Scale' with the value '100' and a range '1-100000'. The second is labeled 'Corresponding to the amount of oil (liters)' with the value '80' and a range '1-2000'. Below the fields are two buttons: 'Add' and 'Cancel'.



The modified value shall be required to be the same as that when adding (remove the corresponding value in this column)

After saving, the page will be automatically closed

### 2.3 Delete button


As shown in the above example in 2.1, after clicking delete button corresponding to the serial number 2, the following results will display

The 'Oil Config' window for vehicle 'S10098' displays a table with the following data:

Index	Operate	Fuel Scale value (resistance)	Corresponding to the amount of oil (liters)
1	 	100	80

Below the table is an 'Add' button. At the bottom of the window, there is an 'Alarm Threshold (L)' field with the value '2' and three buttons: 'Save', 'Save to other vehicle', and 'Close'.

### 2.4 Save to other vehicles

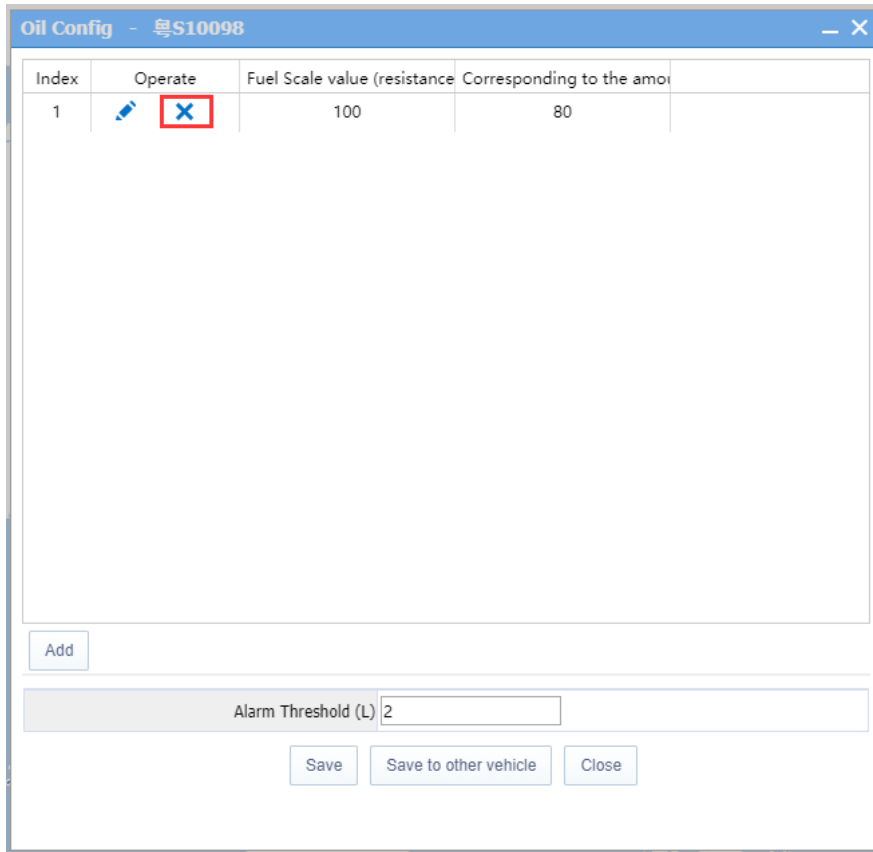


The vehicles listed in the above figure refer to those configured with the oil mass sensor

#### 4.17.2 Statement of oil mass


Summary on oil mass, dynamic statement on oil mass, obvious abnormality statement on oil mass

- 1 OL And OFL RPT
  - Summary RPT Of OL And OFL
  - Detail RPT Of OL And OFL**


1. Summary on oil mass: Record the oil mass of vehicle upon startup and shutdown within a certain time, as well as the driven mileage and total oil consumption.

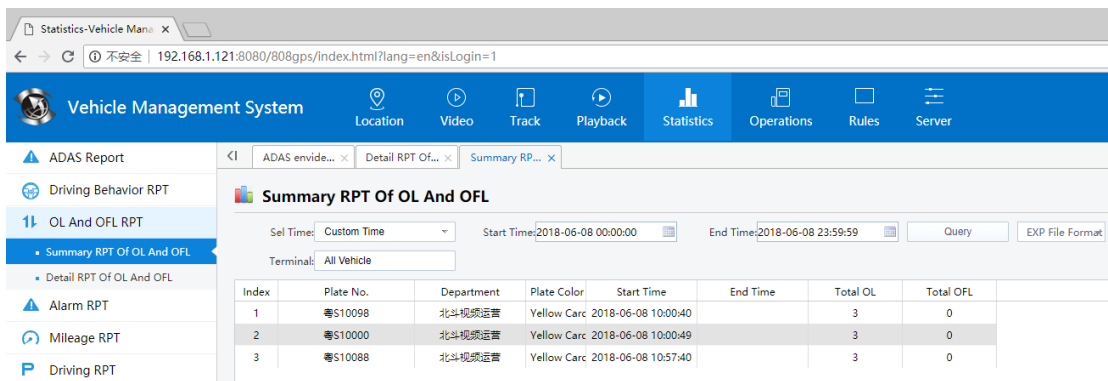

2. Dynamic statement on oil mass: Upload the value of oil mass along with the GPS in an isochronous real-time manner.

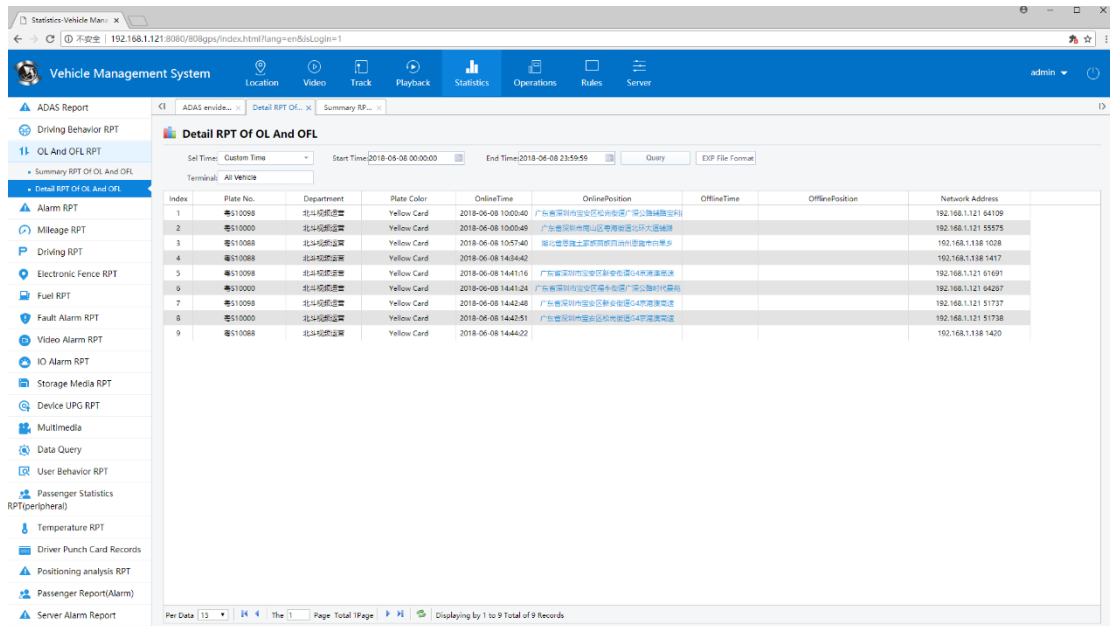

3. Obvious abnormality statement on oil mass: Once the alarm sounds, the record can be made in the statement. (The above value refers to the set alarm threshold)

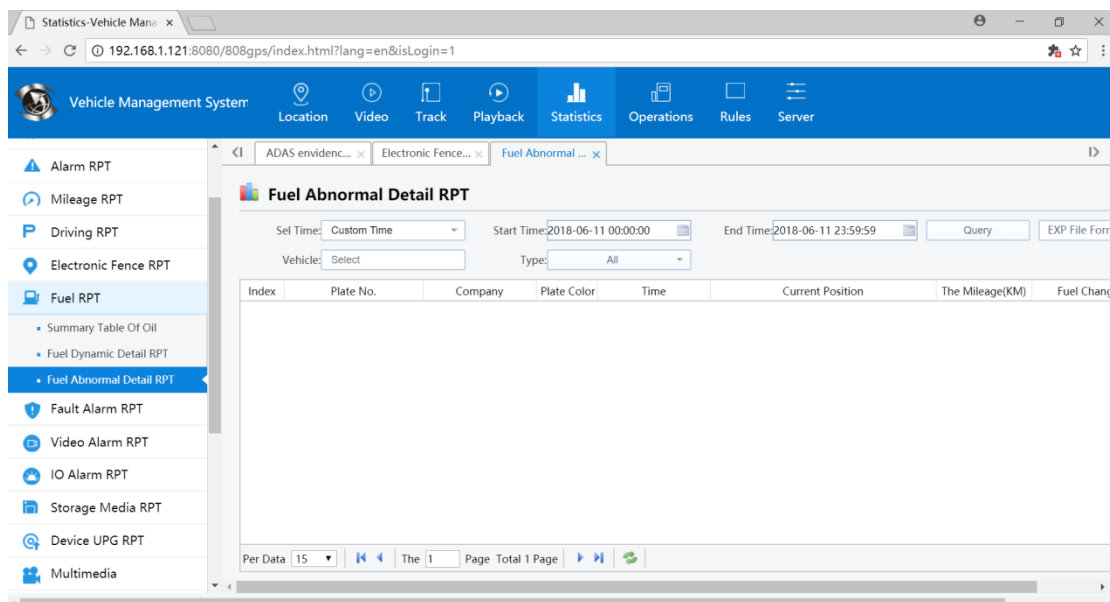

### Statistics time and oil mass change:


If the oil mass change exceeds the setting value of "oil mass change" in designated "statistics time", then the client will have oil mass alarm displayed.

## 4.18 Commonly used functions

### 4.18.1 Vehicle control

The vehicle control can carry out the remote control for the equipment on the vehicle: Oil mass disconnection, oil mass recovery, power supply closing, power supply opening, equipment restarting, factory setting recovery, mileage reset, alarm reset.


On the vehicle list» clicking the vehicle» select the vehicle

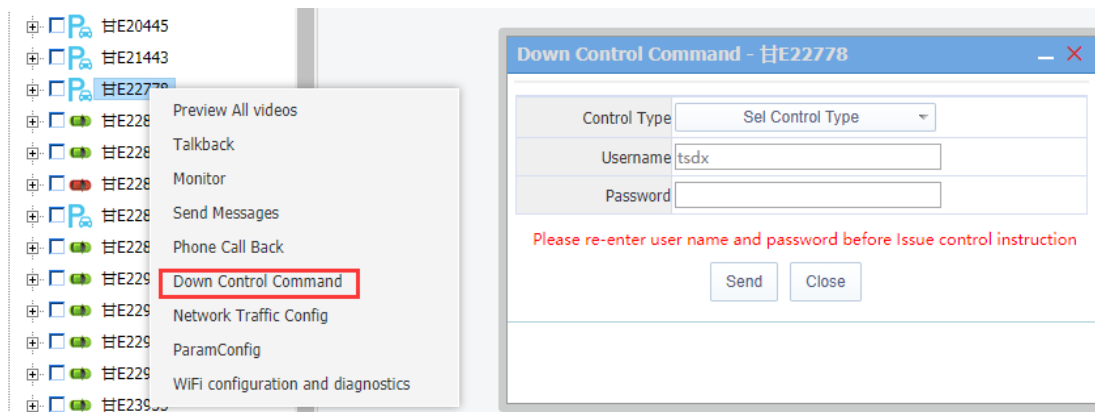

### 4.18.2 Setting of GPS report interval

Set up the GPS report interval on the vehicle: Reduce the data volume of GPS on the vehicle


On the vehicle list» clicking the vehicle» select the vehicle

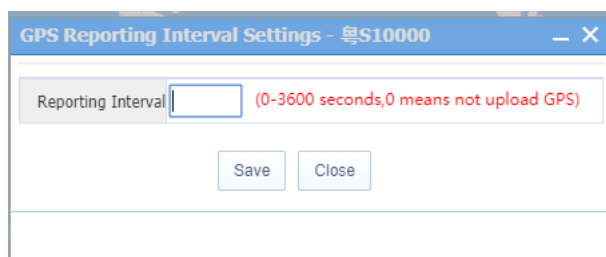

### 4.18.3 Configuration of network flow

For the equipment tree, right click the configuration of network flow

#### 4.15.3.1 Viewing the flow service state

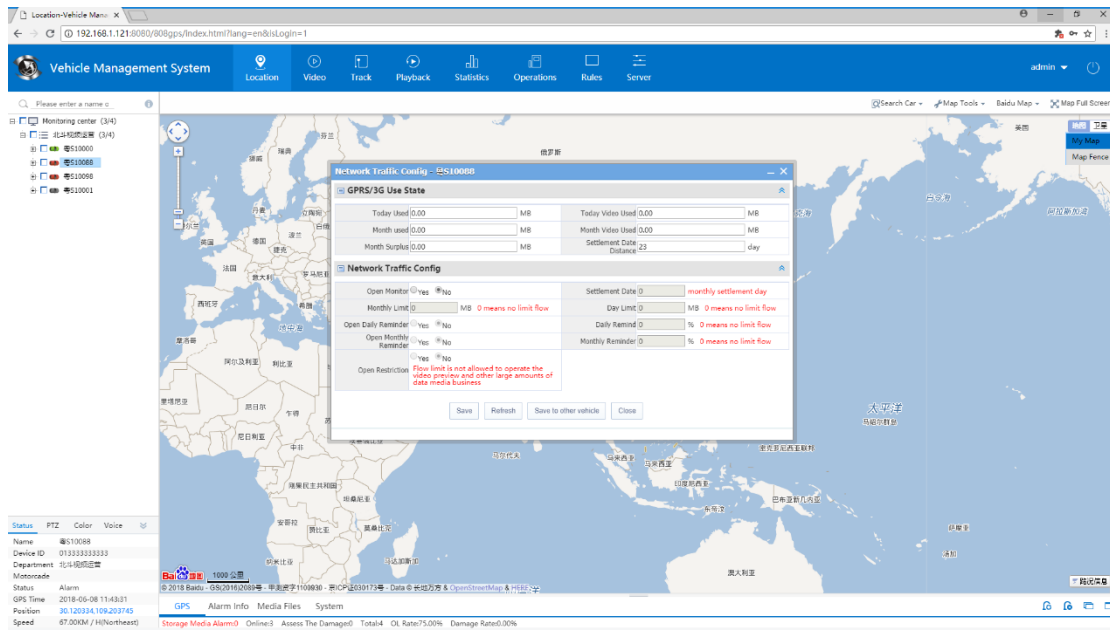

#### 4.15.3.2 Configuration of flow service

If one vehicle has one equipment, this equipment will be configured, and if one vehicle has two equipment, the video equipment will be configured.

If there is no configuration package, the flow limitation will not be allowed to be configured, and there is no configuration limitation, the flow remind will not be allowed to be opened

After the flow limitation is opened, when the serviced flow of the equipment reaches to the limitation, the user will be prohibited to view the video, intercom, monitoring, media downloading and other operations.

Button function:

Save: Save the current configuration information.

Refresh: Refresh the current flow service conditions of the equipment.



Save to other vehicles: The current equipment configuration can be copied to other equipment for saving.

Close: Exit the current page.

#### 4.18.4 Equipment information

For the viewing of equipment information, the equipment in TTX (WKP) agreement only supports this function

This function is equipped with the vehicle list and map tip menu

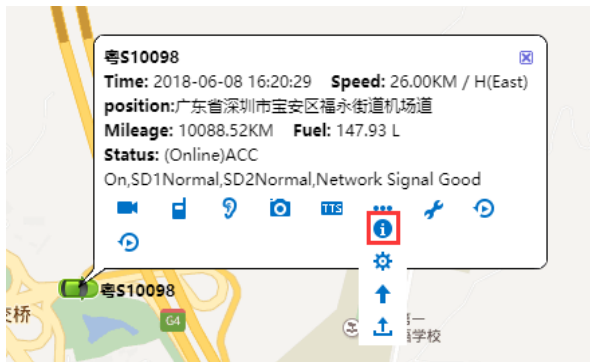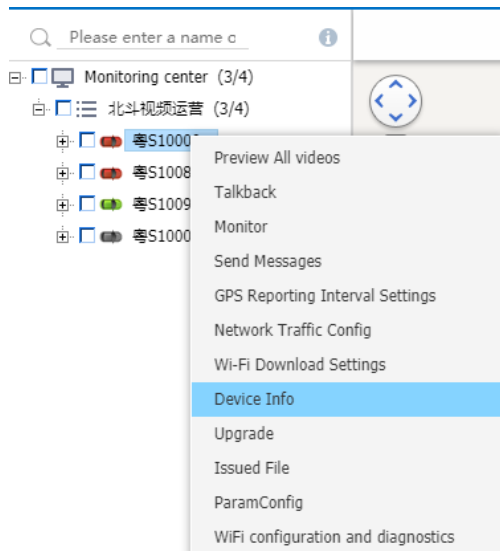

For the equipment tree, right click the equipment information (or use the map tip) for viewing

Device Info
— ×

**Basic Info**

Terminal	粤S10098	Device No.	10098
Version No.		Wlan Module	
Wlan Module Type		Wlan Network Addr	
WIFI Module		WIFI Network Addr	

**Chn Status**

Index	Channel Name	Recording	Video Lost

**Disk Status**

Index	All Capacity(GB)	Residual Capacity(GB)	Disk Serial Num

Refresh
Close

Button function:

Refresh: Refresh the current equipment information.

Exit: Exit the current page.


## 4.19 Common problems and Solutions

1. The login interface still displays V6 version

Just after the server is upgraded to V7 version, the login interface still displays V6 version, causing that WEB cannot be logged in. Why?

Solution: Only clear cache of IE


2、 The interface after logging in the web client incompletely displays, shown in the figure below

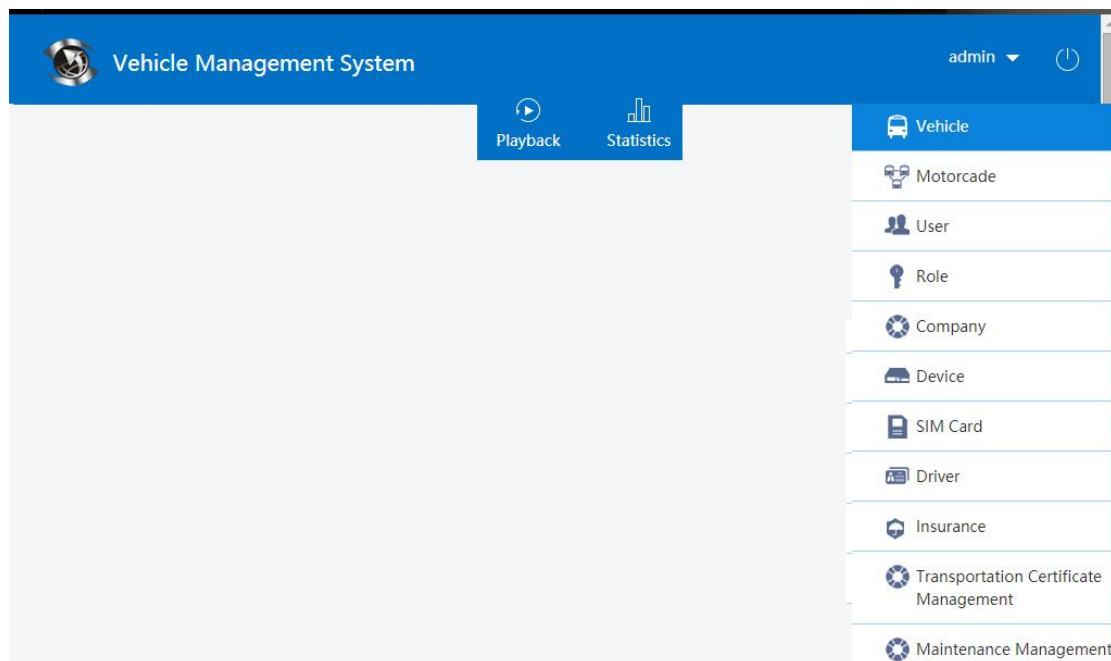

The reasons are that: The reason is that the resolution is too low, therefore, the resolution shall be higher than 1280\*768 as much as possible

3、 Only one video window can be opened, while other windows fail to be loaded. Right?

Solution: Additionally add several UDP ports.

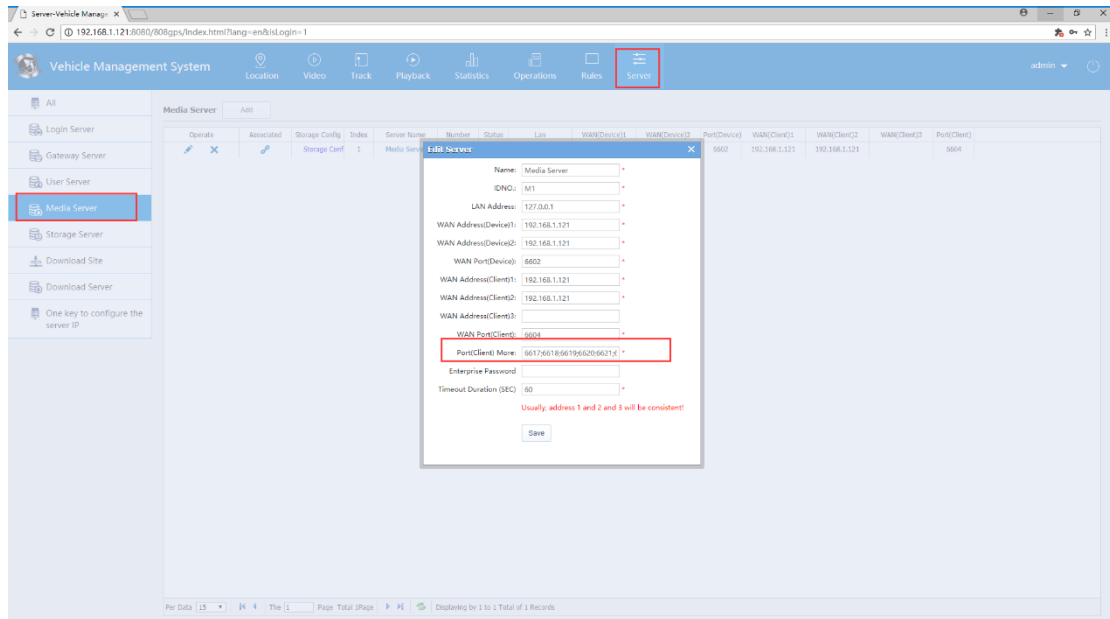

## 五、 Direction for use of PC client

### 5.1 Client login

After the system is successfully installed, the desktop will display the icon, and after the icon is




double clicked, the login interface is shown as follows;



### 5.2 Introduction to client interface

The client main interface is mainly divided into: Six modules, namely, menu and toolbar, equipment list, GPS map positioning, cloud platform control, data sheet, and video region

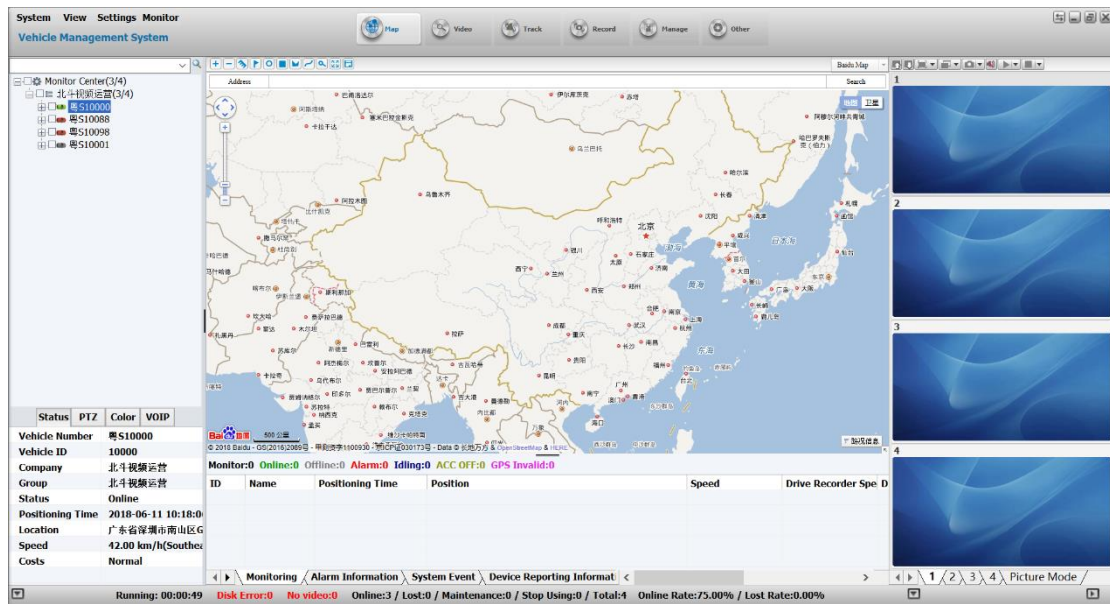

Introduction to various area of the main interface:

**Menu bar:** It is located in the top left corner and includes the system, view and setting menu

**Toolbar:** It is located in the top and as the main control region of system, it is divided into the electronic map, real-time preview, track playback, information management and other applications.

**Map display region:** It is used to view the equipment location and other information on the map

**Terminal list:** Equipment list information

**Polling list:** It is used to switch a set of the customized channel video in unit time

**My map:** It includes the records on point, surface and region marked by the user on the map

**Status:** Select the current basic information of equipment

**Cloud platform:** Operate the cloud platform, such as the rotation of angle and the adjustment of focus, aperture, lighting and wiper

**Colors:** It refers to the colors related to the remote control equipment

(Orderly from top to bottom: brightness, contrast, chroma, saturation, exposure)

**Voice:** It is used to carry out the language intercom, monitoring and broadcasting

**GPS monitoring:** It is used to monitor the real-time GPS positioning information of equipment, driving speed, alarm and status display

**Alarm information:** It displays the alarm contents

**System events:** It records the system events, such as the login, etc.

## 5.3 Electronic map

Real-time monitoring against the equipment in the terminal list on the left can be conducted on the CMSV6 client and geographic location shall be displayed on the map.

### 5.3.1 Electronic map monitoring


1. After selecting the equipment to be monitored in the equipment list, real-time monitoring can be realized by checking and real-time monitoring will be cancelled by removing checking.

2. For the equipment selected to undergo real-time monitoring, detailed information about such equipment will be displayed on the map, including equipment name, current running speed and date, mileage of the same day, total mileage, drive information, location and alarm information; In addition, such functions as video, talkback and monitoring are enabled.

3. Method of switching map type

1) Map switch at the upper right corner of the map exists and there are three choices: Respectively, Baidu Map, Google Map, and MapInfo Map.

2) Click the "setting" -> "system setting" on the menu bar or switch the map for entering.

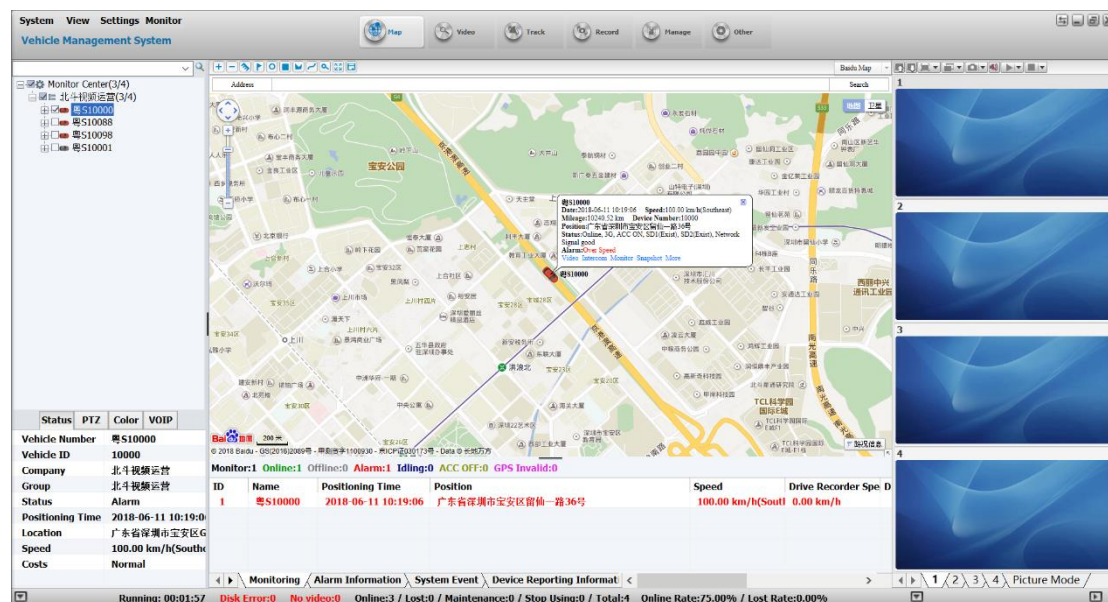
 











**Zooming:** The user can drag the up and down scroll bar on the left of map or click "+" and "-" buttons to zoom in and zoom out the map.

**Map/satellite:** The user can use these two buttons to switch and view the driving status of equipment under the map or satellite mode.

 **Equipment in the center:** After ticking the equipment to be monitored in the equipment monitoring list, this equipment will be displayed in the center.

#### Introduction to button function on the electronic map:

Icon	Function Introduction
	Add the customized point (fixed point)
	Add the circular region

	Add the fence of rectangular region
	Measuring distance
	Add the fence of irregular graph region
	Pull box zoom in
	Pull box to zoom out
	Add route
	Search the historical vehicle information passing through a certain region
	Map full screen display
	Set the current map position to the position by default when the client is opened


### 5.3.2 My map

Add the customized point, rectangle and polygon and add the line, and adopt the same operation. The following operation steps take the "add the rectangle" as an example.


1. Click the "add the rectangle" button and then drag the mouse on the map to draw the rectangle and pop up the "add the rectangle" window
2. Input the region name and select the region color to be displayed, and then select the region type and then input the description.

If the option - "Allow other users to view" is ticked, other users can view the current rectangular region set by the user, otherwise, other users will not view this region, and at this moment, the "Confirm" can be clicked to view the information of region just added in the list of "My map" ->

“Surface” on the left.

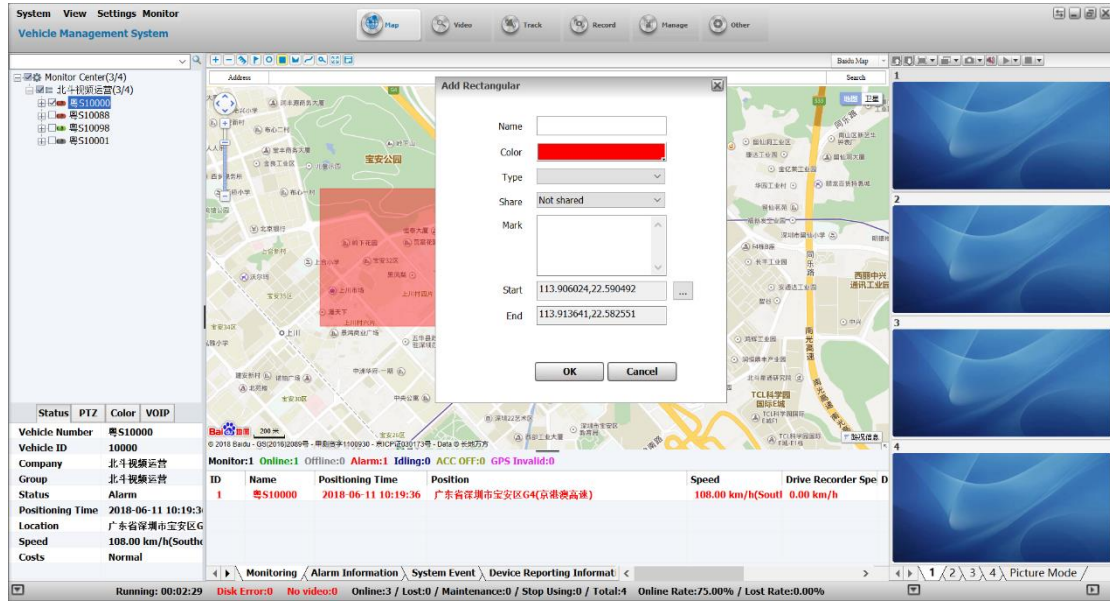


### 3. Remove and delete the electronic fence region

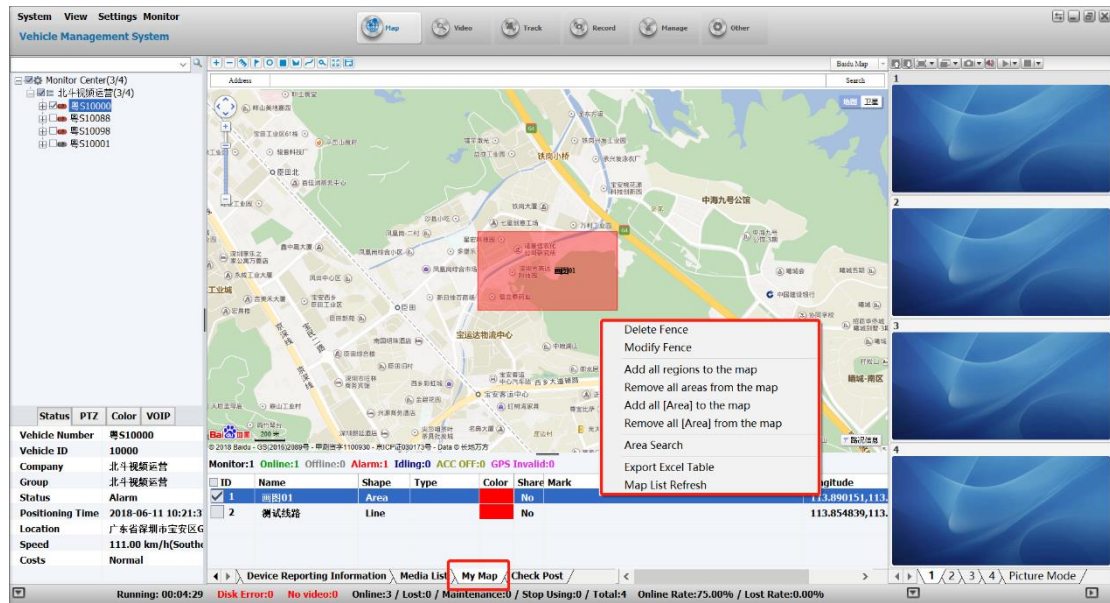

- 1) If the user does not want to display the electronic fence region on the map, it can tick out the corresponding region
- 2) If the user does want to delete the electronic fence region, he can select the corresponding region on the map and click the right key, and then click the "delete region" in the menu

### 5.3.3 Region search

Click the "search" button and select the region and then drag the mouse on the map to draw the rectangle and pop up the "region search" window, as the figure below:

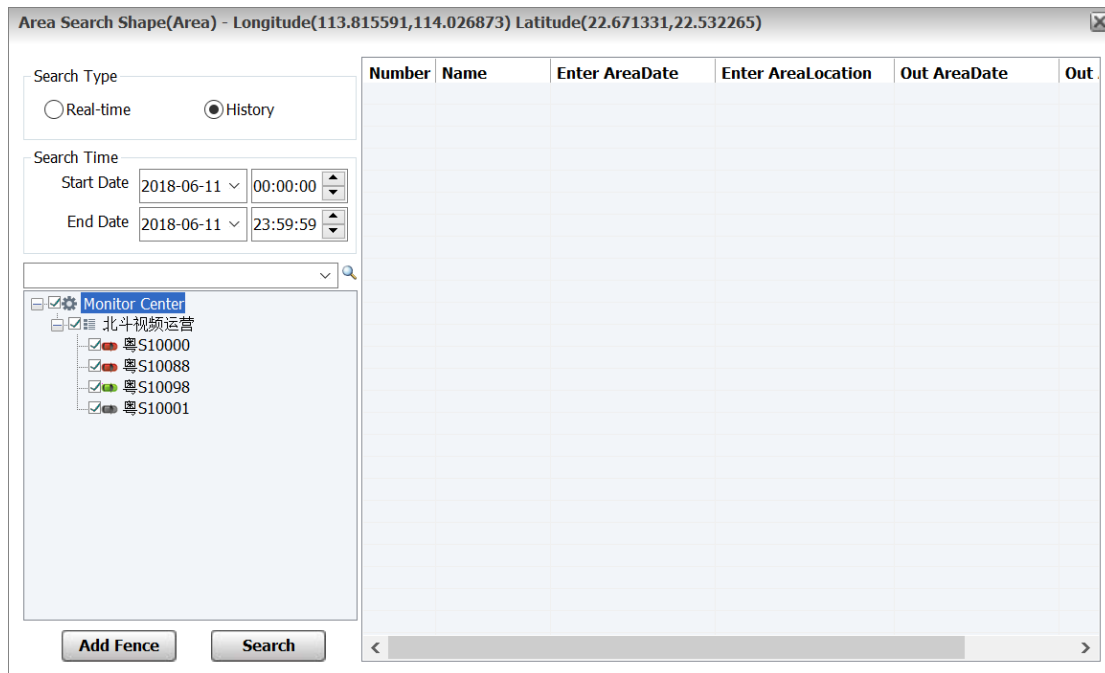

Set up the search conditions and click the "search" button, and if the vehicle selected in the drawn region drives, it will display in the list.

### 5.3.4 Information bar

Display: Definition of vehicle color, GPS monitoring, alarm information, system events, equipment report information, etc. As the figure below

ID	Name	Positioning Time	Position	Speed	Drive Recorder Spe	D
1	粤S10000	2018-06-11 10:22:57	广东省深圳市宝安区G4(京港澳高速)	105.00 km/h(East)	0.00 km/h	
2	粤S10098	2018-06-11 10:22:57	广东省深圳市宝安区G107(机场立交桥)	23.00 km/h(South)	0.00 km/h	

Monitor:2 Online:2 Offline:0 Alarm:1 Idling:0 ACC OFF:0 GPS Invalid:0

Monitoring Alarm Information System Event Device Reporting Informat

## 5.4 Real-time preview

Log in client platform and real-time video preview in the video window can be realized by direct double-click of the equipment in the equipment list. The user can also open the channel video of the designated equipment on the designated video preview window and select a certain channel to drag it to the designated window for previewing (the time of the previewing the video picture and the installed equipment video picture shall be synchronous).

### 5.4.1 Introduction to video form toolbar




Frames of video window mode 1, 4, 6, 8, 9 and 16 are shown in the following figure




The page up and down function of video window is shown in the figure below




Video frame display mode: 1-Display of full screen 2- 4:3 display 3- 16:9 display

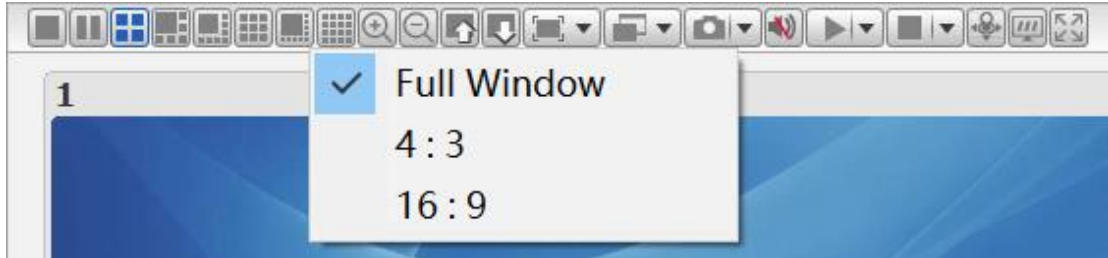


**Full picture display effect:** Display the video on the video window in the manner of full screen

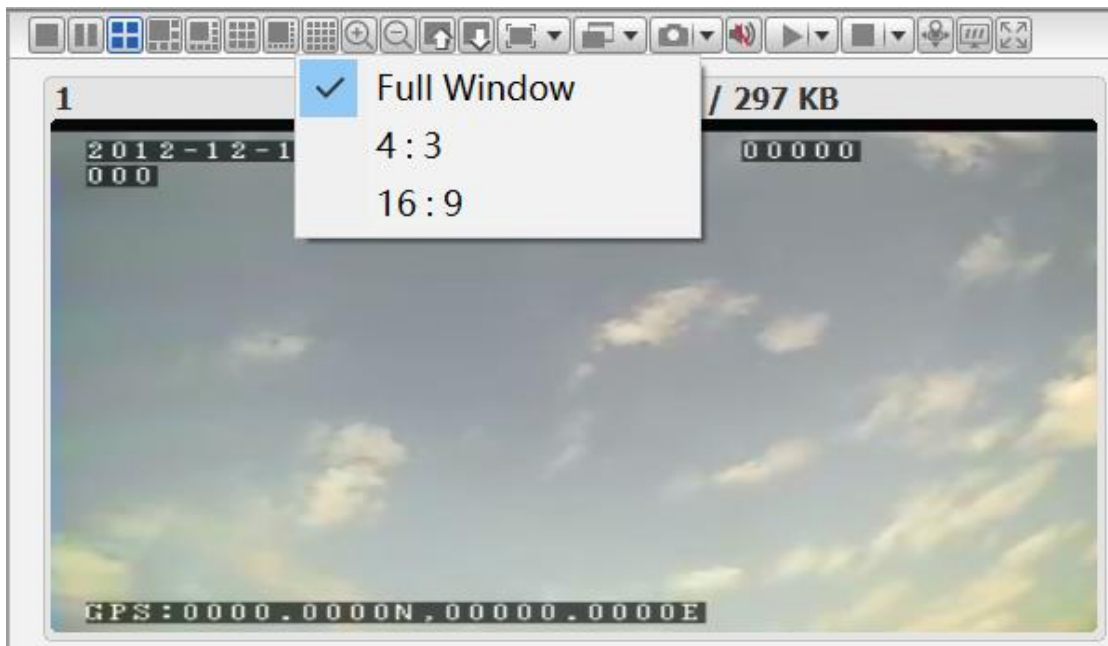


**4:3 display effect:** Video is displayed based on aspect ratio of 4:3

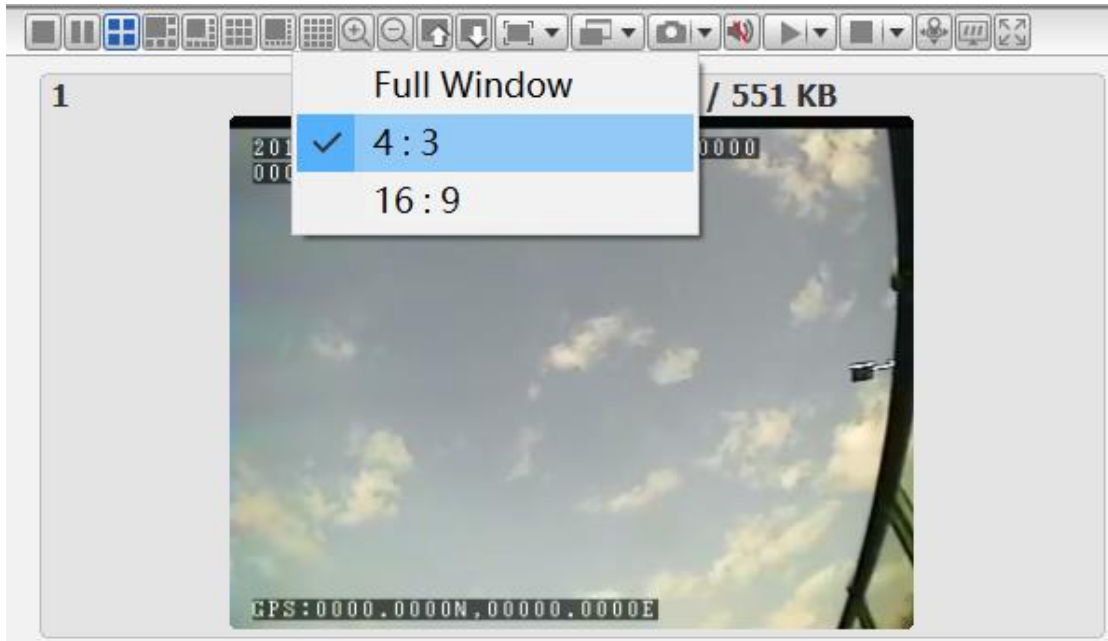

**16:9 display effect:** Video is displayed based on aspect ratio of 16:9

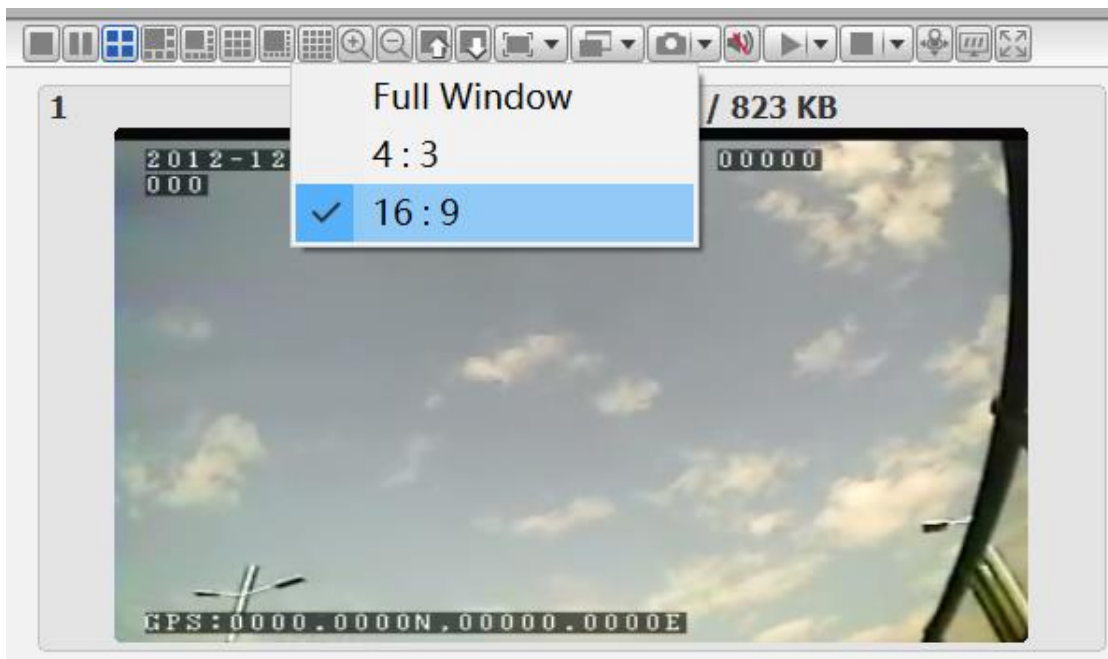


**Selection of video effect:**

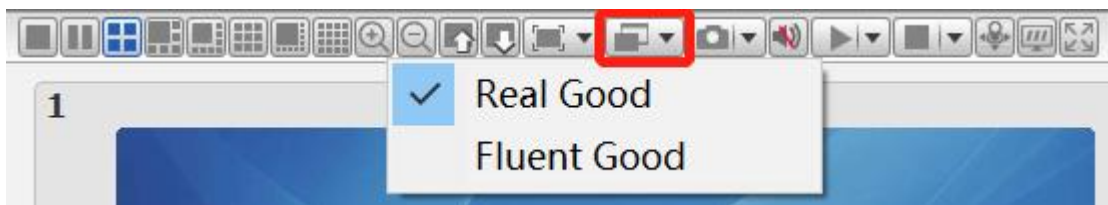

**Good real-time:** Giving priority to ensuring video instantaneity

**Good fluency:** Giving priority to ensuring video fluency

**Snapshot:**

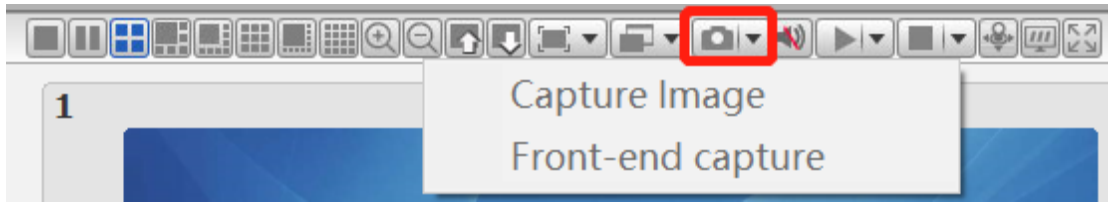

**Snapshotted picture:** Snapshot the picture on the client (first open the video preview)

**Front-end snapshot:** Snapshot the picture on the equipment end (do not need to open the video preview)


Execute the picture snapshot operation on the equipment (the equipment software version is required), and if there is no SD card or hard disk (memory equipment) installed on the equipment, the snapshot will not be successful

**Sound:**

Close and open the sound




**Open the video:**

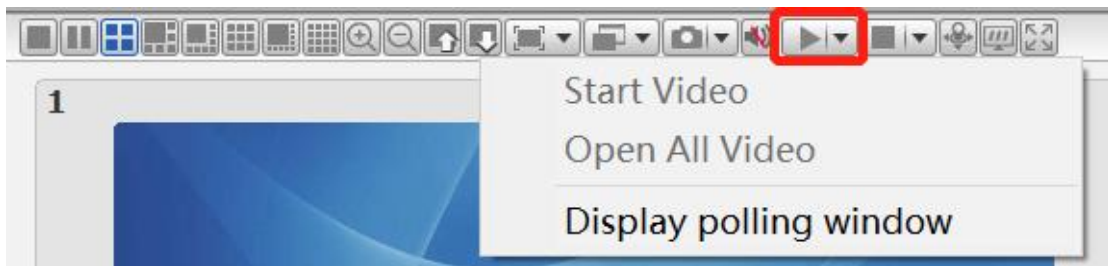

**Start up the video:** Start up the default video on the current focus window (as the last time of playing the video channel on this window)

**Open all videos:** Start up the default video on all windows

**Stopping videos:**

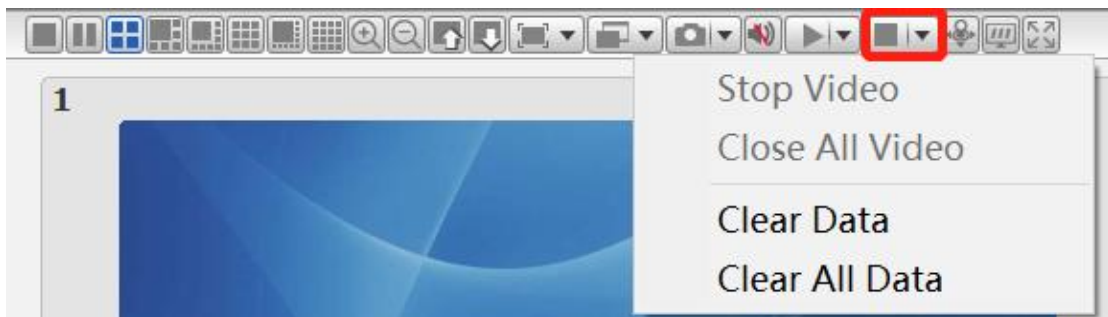

**Stopping videos:** Stop the video on the current focus window

**Stop all videos:** Stop the video on all windows

**Clear data:** Clear the memory video channel information on the current focus window



**Clear all data:** Clear the memory video channel information on all windows

## 5.4.2 Automatic closure of the video

Avoid that the window forgets to be turned off due to the video in the opening status, causing the flow waste, for which the client provides the function configured with the "automatically close the video".

A. First click the "other applications" and then click the "system setting"

B. Click the "system setting" in the "setting" of menu bar to open the "system setting" window, shown in the figure below:

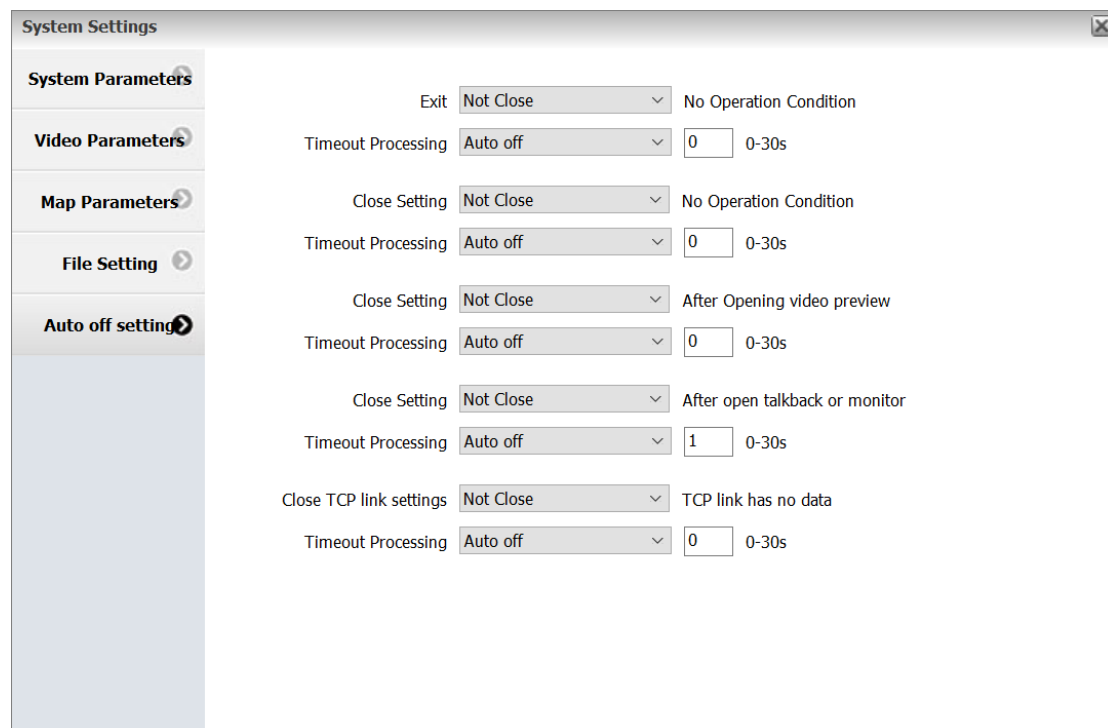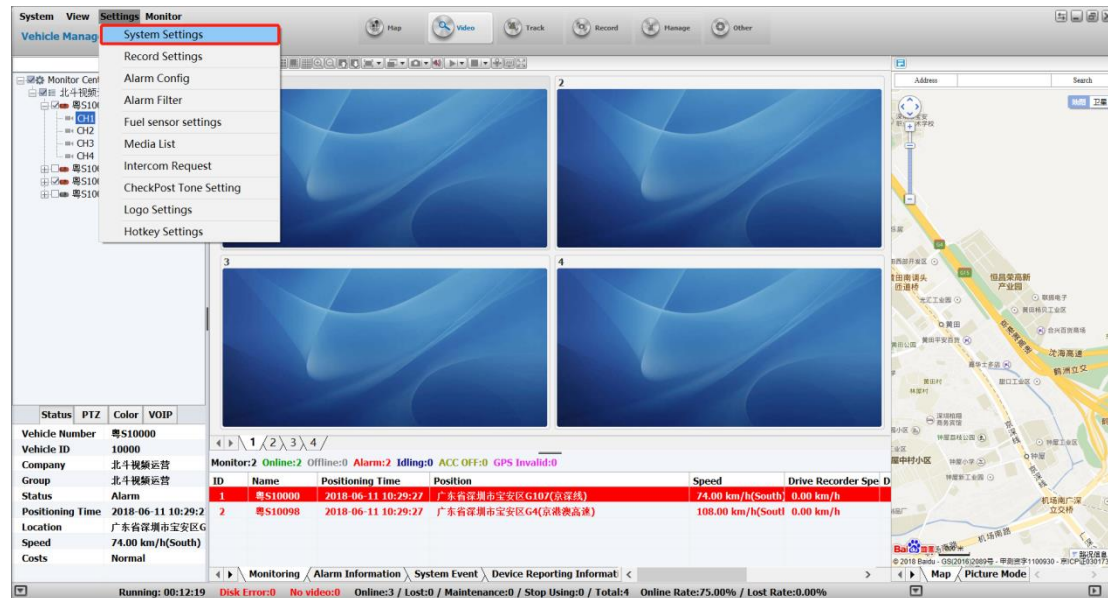

### System parameters

**System language:** Simplified Chinese, English, traditional Chinese, Turkish and Thai language

**Interface style:** by default (gray) and blue.

**Image snapshot:** Set up the save path of the snapshotted picture.

**Damage time:** 72 by default, representing that if the equipment is offline for 72 hours, it shall be deemed to be damaged. For this case, check whether the equipment is damaged.


## Video parameter


**Polling duration:** It refers to the polling interval of each channel playing when the polling video is set up.

**Closing of intercom and monitoring:** Set up the time of automatically closing the intercom and monitoring

**Setting of closing the video:** Set up the time of automatically closing the real-time video preview of client

## 5.4.3 Video Polling

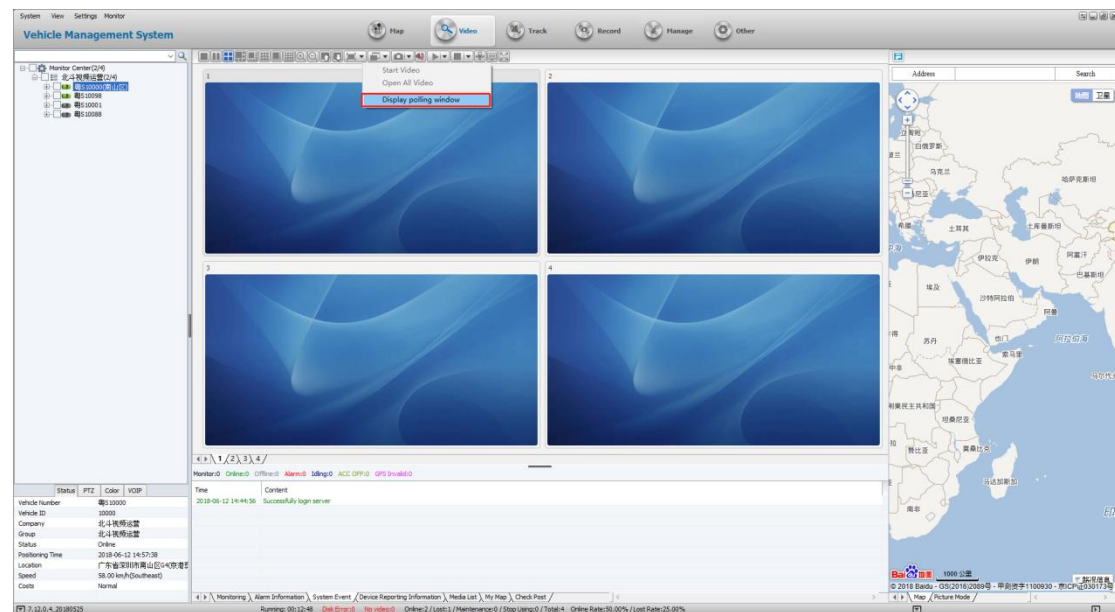


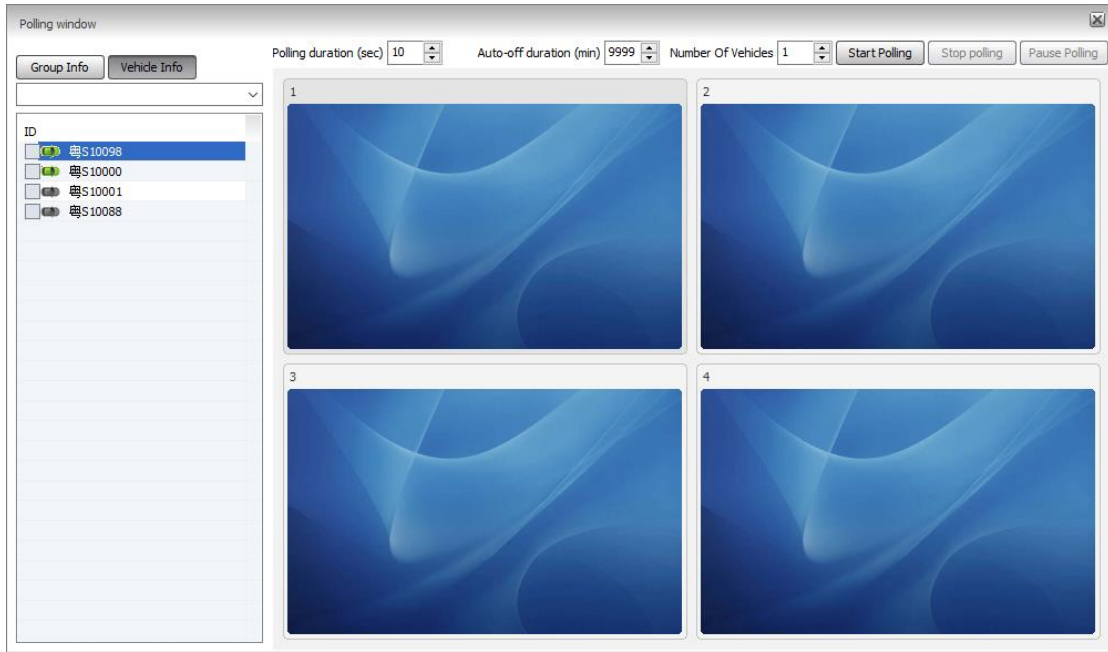

## 5.5 Voice Intercom and Monitoring


The user can carry out monitoring and intercom to manage his equipment on the client side.

The prerequisite is to install talkback equipment on the equipment side and select the peripheral modules on the equipment information option card at the same time.

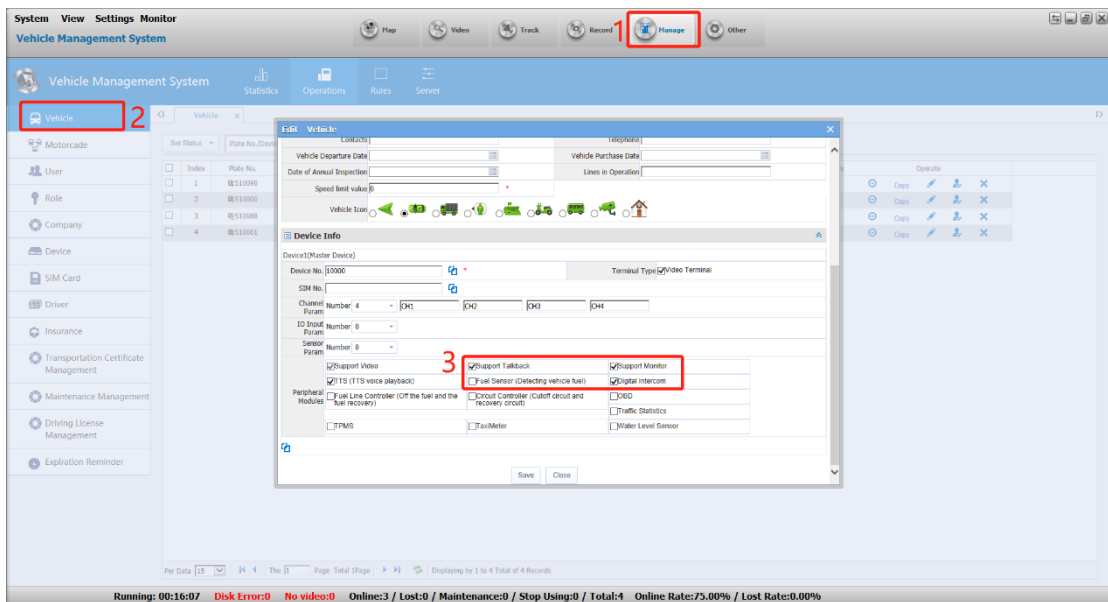


### 5.5.1 Voice Intercom


A. Select the channel of the equipment to be talked back in the terminal list, right-click and select "Start to Talk" from the menu that appears.

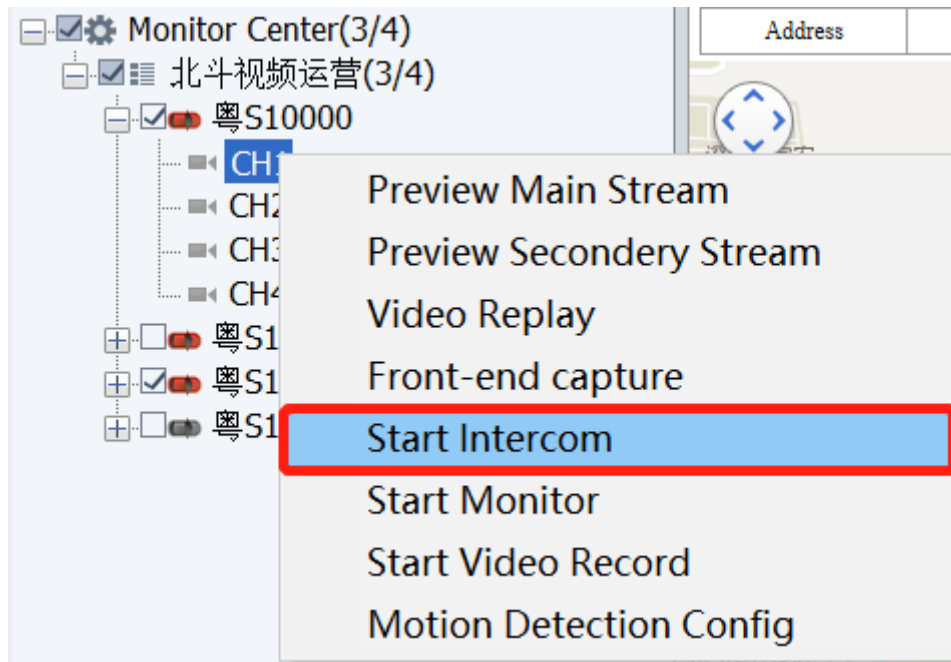


B. Open the real-time video preview of the equipment, or right-click to pop up the menu, which can also select the intercom option.

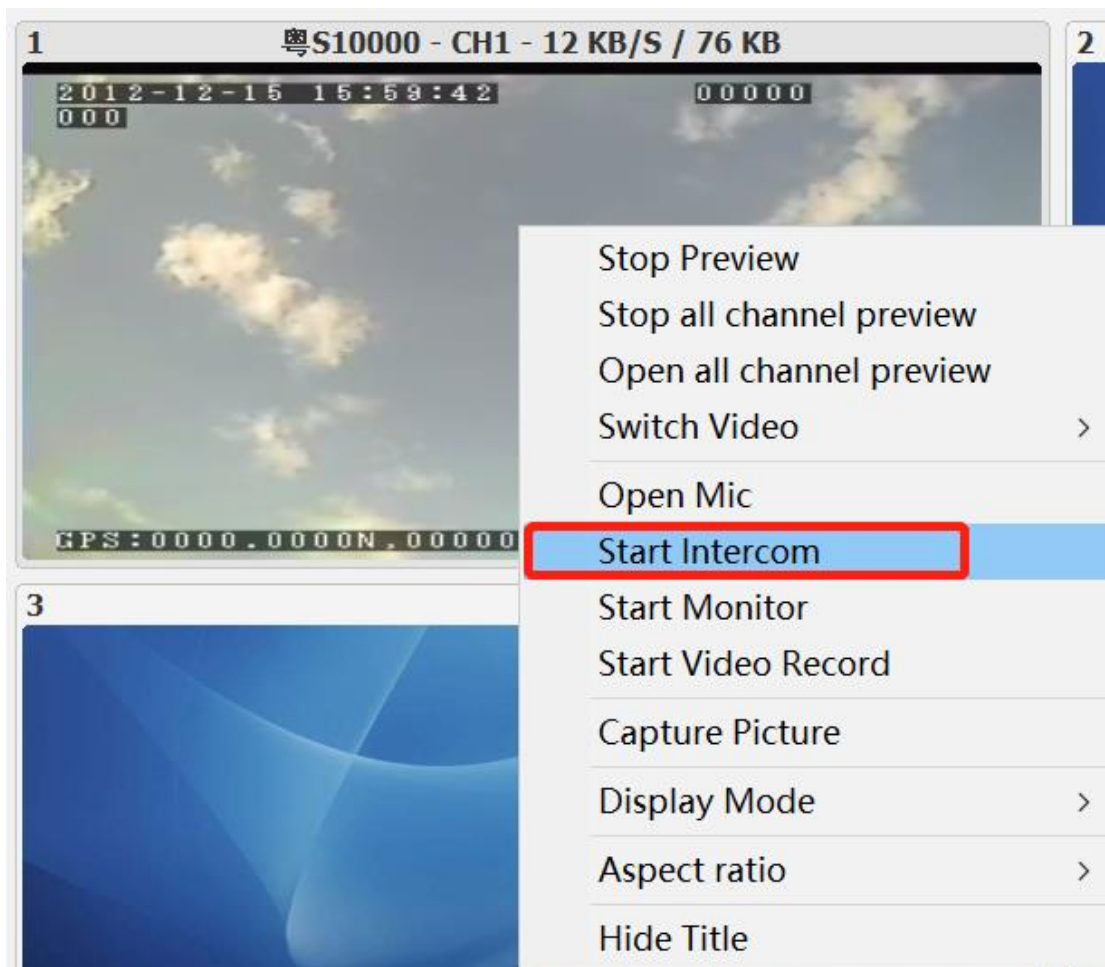

C. Select the intercom function first, then select the equipment

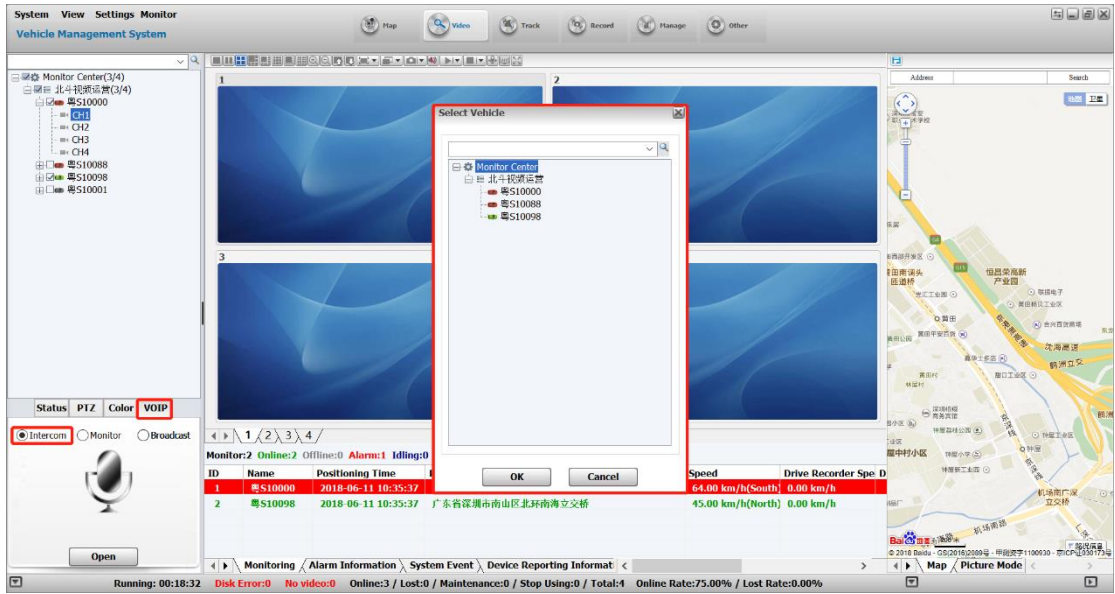


After opening the intercom, the pop-up interface is as shown below:

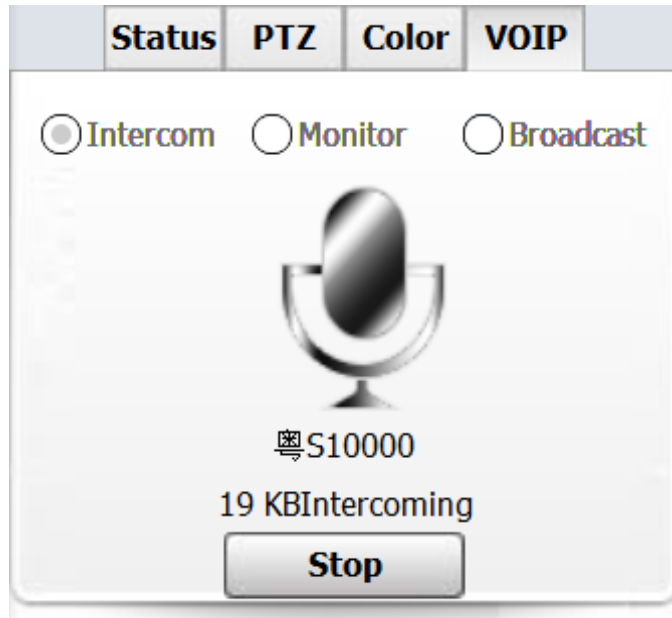


### 5.5.2 Digital Intercom

The prerequisite is to install digital intercom equipment on the equipment side and select the peripheral modules on the equipment information option card at the same time.

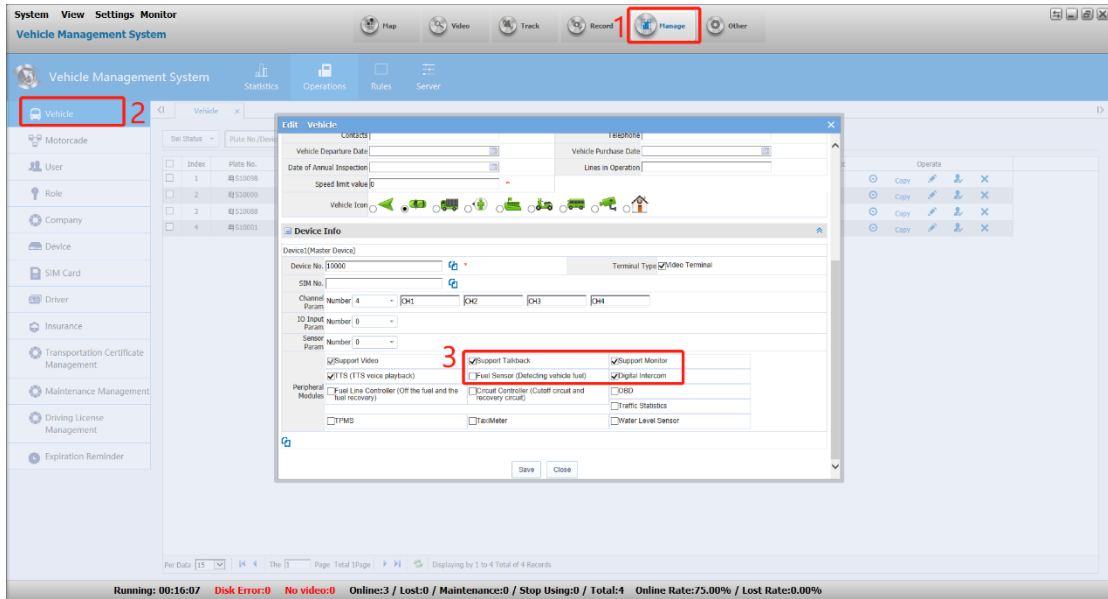

1) Client side digital intercom operation

Select the equipment, right-click and click "Open Intercom" in the menu

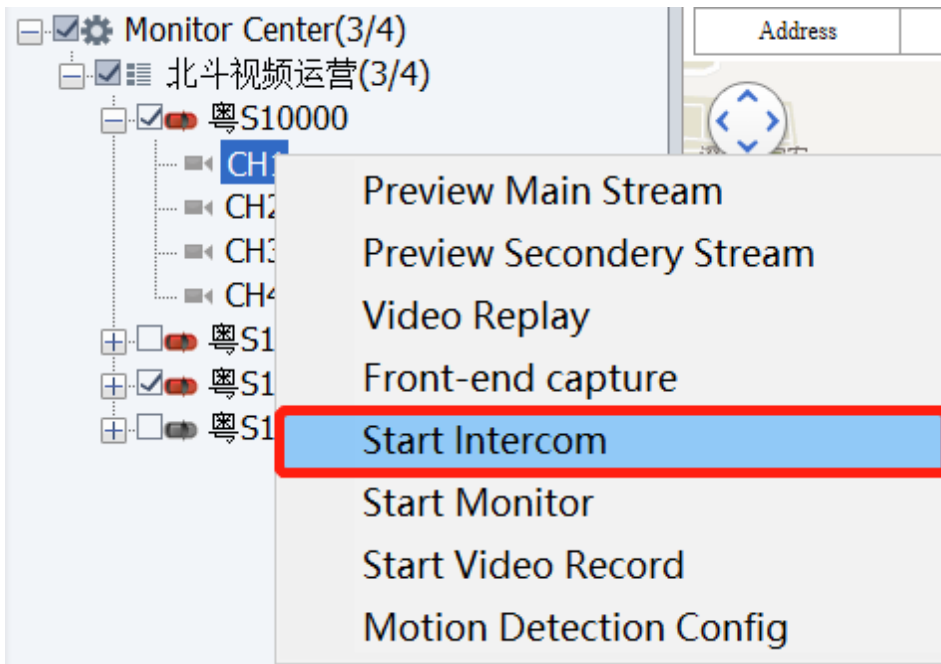

Digital Intercom page

**Intercom** [X]


Load intercom control failure, unable to talk.

COM	COM1
Baud Rate	115200
IP	219.148.36.46
Port	12030
EquipmentID	
Password	
Device Name	
Group	


OK Temporary

### 5.5.3 Monitoring


A. Select the equipment to be monitored in the terminal list, right-click and select "Start to Monitor" from the menu that appears.

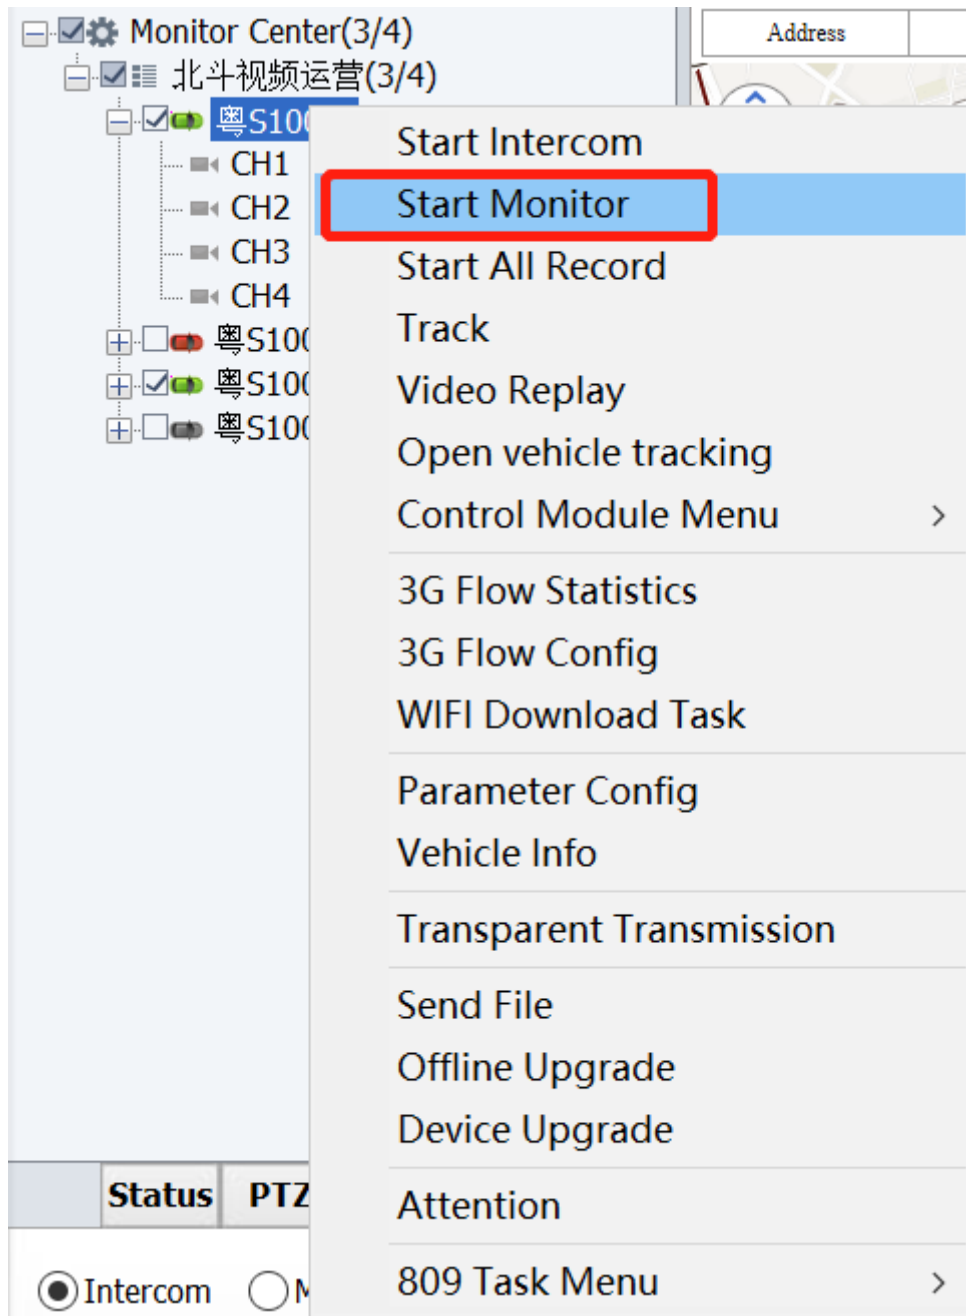


B. Open the real-time video preview of the equipment, or right-click to pop up the menu, which can also select the monitor option.

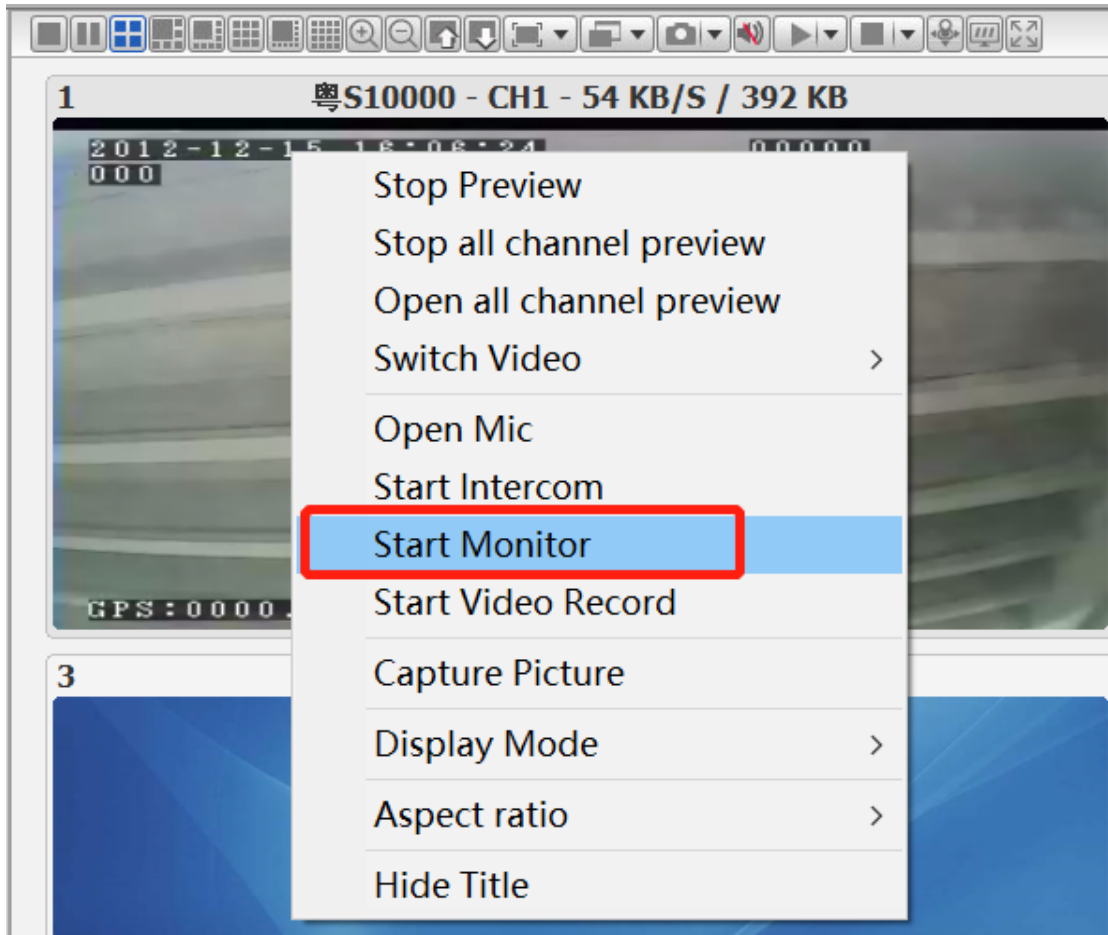

C. Select the monitor function first, then select the equipment

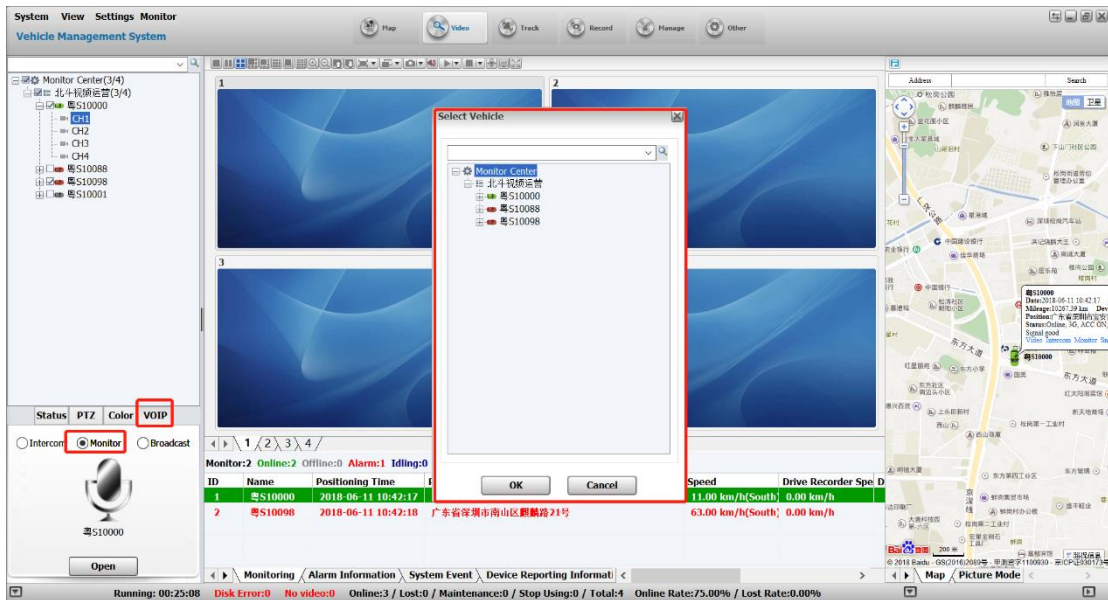


After opening the monitor, the pop-up interface is as shown below:

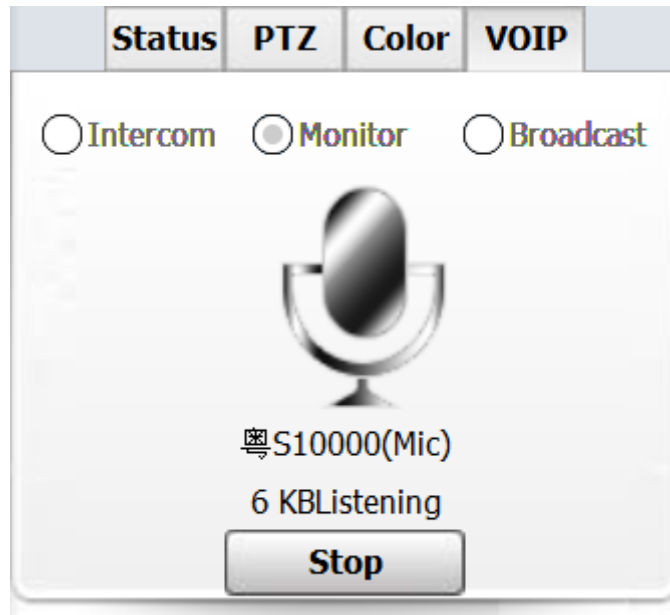


### 5.5.4 Broadcast

1) Select the equipment to be broadcasted.

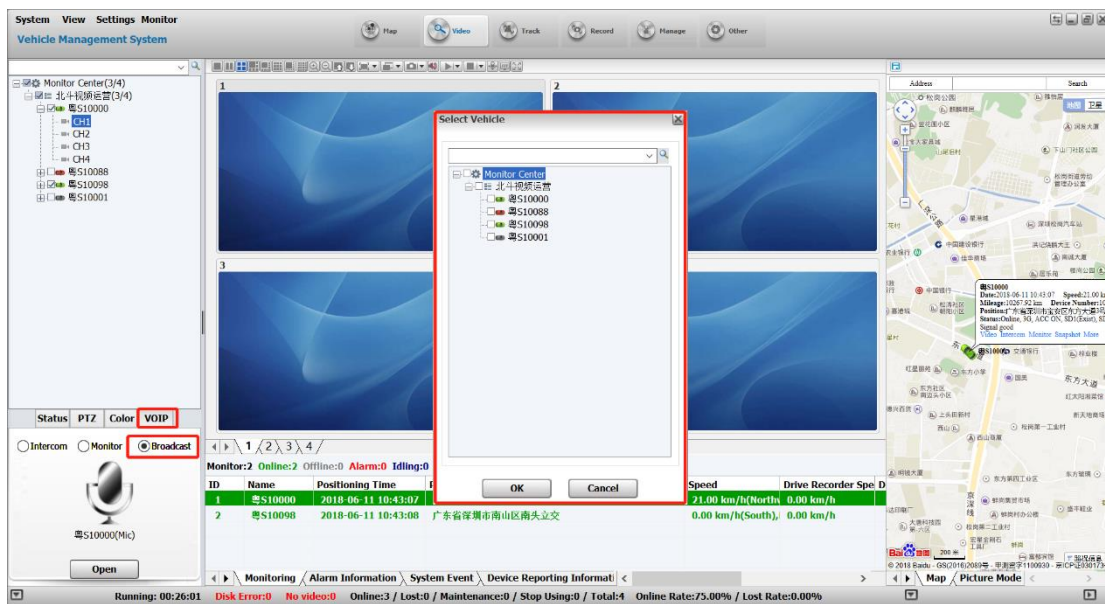

2) After turned on the broadcast, the following figure is displayed

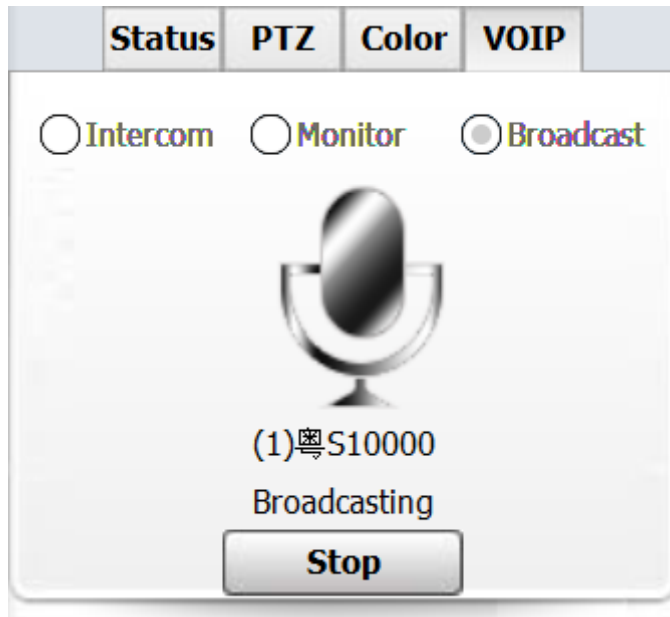

## 5.6 Track Playback

The user can specify the equipment to search for the trajectory according to the specified conditions, and export the related data as required.

The screenshot shows the 'Track' tab in the Vehicle Management System. The search criteria are set to terminal ID 'S10000(10000)'. The date range is from 2018-06-11 00:00:00 to 23:59:59. The map displays the vehicle's path in red. A data table below the map lists track points with columns for Number, Date, Position, and Description.

Number	Date	Position	Description
9 10000	2018-06-11 10:14:16	广东省深圳市南山区北环南路	Speed:34.00 km/h(East),Mileage:0.52/10
10 10000	2018-06-11 10:14:26	广东省深圳市南山区北环南路	Speed:41.00 km/h(Northeast),Mileage:0.73/10
11 10000	2018-06-11 10:14:36	广东省深圳市南山区北环南路立交桥	Speed:39.00 km/h(South),Mileage:0.84/10
12 10000	2018-06-11 10:14:46	广东省深圳市南山区北环南路	Speed:62.00 km/h(South),Mileage:0.98/10
13 10000	2018-06-11 10:14:56	广东省深圳市南山区南海大道	Speed:75.00 km/h(South),Mileage:1.19/10
14 10000	2018-06-11 10:15:06	广东省深圳市南山区南海大道	Speed:70.00 km/h(South),Mileage:1.39/10
15 10000	2018-06-11 10:15:16	广东省深圳市南山区南海大道	Speed:64.00 km/h(South),Mileage:1.58/10
16 10000	2018-06-11 10:15:26	广东省深圳市南山区南海大道	Speed:49.00 km/h(South),Mileage:1.75/10
17 10000	2018-06-11 10:15:36	广东省深圳市南山区南海大道	Speed:30.00 km/h(South),Mileage:1.86/10
18 10000	2018-06-11 10:15:46	广东省深圳市南山区南海大道	Speed:36.00 km/h(East),Mileage:1.95/10
19 10000	2018-06-11 10:15:56	广东省深圳市南山区南海大道	Speed:36.00 km/h(East),Mileage:1.95/10

**Interval:** Upload a GPS data on every selected interval. If it is 0, upload a GPS data for every 10 seconds.

**Stop interval:**

0: Search for all parking gps points and show them

None 0: In case of continuous gps parking spot, only the last gps parking point data is uploaded to the platform.

**Distance:** Total mileage of the current vehicle on the day

**Display:**

**Time:** If checked, the time on the right side of the map will show the time of each GPS point of the vehicle (every selected interval represents a GPS point)


 



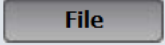 
**Speed:** If checked, the driving speed on the right side of the map will show the time of each GPS point of the vehicle (every selected interval represents a GPS point)

**Speed:** Control the speed of track playback

**Location:**

c) Line: Changing from white lines to blue lines, representing the download progress of the trajectory data

d) Drag the button: Progress of trajectory playback

Icon	Function Introduction
	Open or pause the track playback
	Terminate the track playback
	Delete gps tracks searched
	Export searched gps tracks to Excel
	Add the searched trajectory as a line
	Searched track history record as a list

After clicking the "File" button

File Name	Download Time	Size
粤S10000 2018-06-11 00-00-00~2018-06-11 23-59-59.gps	2018-06-11 10:44:31	18 KB
粤S10088 2018-06-06 00-00-00~2018-06-06 23-59-59.gps	2018-06-06 15:01:41	12 KB
粤S10098 2018-06-05 00-00-00~2018-06-05 23-59-59.gps	2018-06-05 10:42:29	27 KB
粤S10098 2018-06-07 00-00-00~2018-06-07 23-59-59.gps	2018-06-07 15:53:13	52 KB

Show All File

## 5.7 Video Search and Playback

### 5.7.1 Video Search

Click on the "Video replay" at the top of the client, the interface is as follows

The screenshot shows the 'Vehicle Management System' interface. On the left, there are search filters for 'select device' (By Device/Company), 'Search Time' (Date, Start/End Time), 'Video Files Location', and 'Video Type'. The main area features a video player with a blue background and a map of China. Below the player is a table of search results.

Date	Time	Duration	Type	Vehicle Device	Channel	Location	Size(MB)	Information	File
2010-06-11	08:37:24 - 09:07:22	00:29:58	General	粤S10000	CH2	Vehicle Device	22.136MB		C:/D
2010-06-11	09:07:24 - 09:09:06	00:01:42	General	粤S10000	CH1	Vehicle Device	1.262MB		C:/D
2010-06-11	09:12:19 - 09:14:26	00:02:07	Alarm	粤S10000	CH3	Vehicle Device	1.493MB		C:/D

At the bottom of the interface, there is a status bar showing: Running: 00:30:34, Disk Error: 0, No video: 0, Online: 3 / Lost: 0 / Maintenance: 0 / Stop Using: 0 / Total: 4, Online Rate: 75.00% / Lost Rate: 0.00%

## Position

**Terminal equipment:** Search for video file in SD card or hard disk

**Local disk:** Search for manual recordings to the local computer and video file that have been downloaded locally

**Storage server:** The equipment is configured with a storage plan to search for video files recorded on the storage server

**Download server:** Search for video file on the download server

## File type

**Video recording:** Video files

**Image:** Snapped pictures on the storage server

## Video type

When searching for videos, there are three kinds of video search conditions: alarm video, regular video and all videos.

### 5.7.2 Video replay


After specifying the search condition, there is a list of searching file below, as shown below:

The screenshot shows the 'Vehicle Management System' interface. On the left, there are search filters: 'select device' (By Device, S10000), 'Search Time' (Date: 2018-06-11, Start time: 00:00:00, End Time: 23:59:59), 'Video Files Location' (Vehicle Device), and 'Video Type' (General, Alarm, All). A 'Time limit' dialog box is open, showing 'Start time: 09:07:24 (>=09:07:24)' and 'End Time: 09:09:06 (= <09:09:06)'. Below the filters is a playback control bar with a progress bar from 00:00:00 to 00:00:00. At the bottom, a table lists search results:





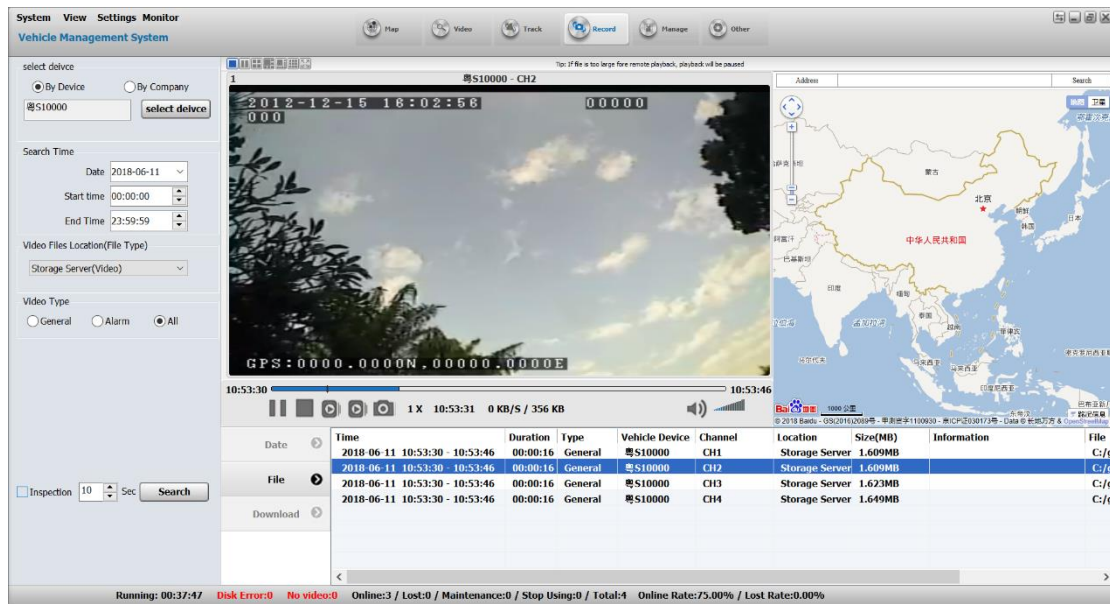

Date	Time	Duration	Type	Vehicle Device	Channel	Location	Size(MB)	Information	File
2010-06-11	08:37:24 - 09:07:22	00:29:58	General	S10000	CH2	Vehicle Device	22.136MB		C:/D
2010-06-11	09:07:24 - 09:09:06	00:01:42	General	S10000	CH1	Vehicle Device	1.262MB		C:/D
2010-06-11	09:12:19 - 09:14:26	00:02:07	Alarm	S10000	CH3	Vehicle Device	1.493MB		C:/D

At the bottom of the interface, there is a status bar: 'Running: 00:31:45 Disk Error:0 No video:0 Online:3 / Lost:0 / Maintenance:0 / Stop Using:0 / Total:4 Online Rate:75.00% / Lost Rate:0.00%'.


Select a channel file, right-click, pop-up menu, click "Video replay", as shown below




### Icon function introduction:

Icon	Function Introduction
	Pause the Play
	Play
	Stop
	I-frame playback or stop
	Snapshotted picture
	Voice control

## 5.7.3 Video download

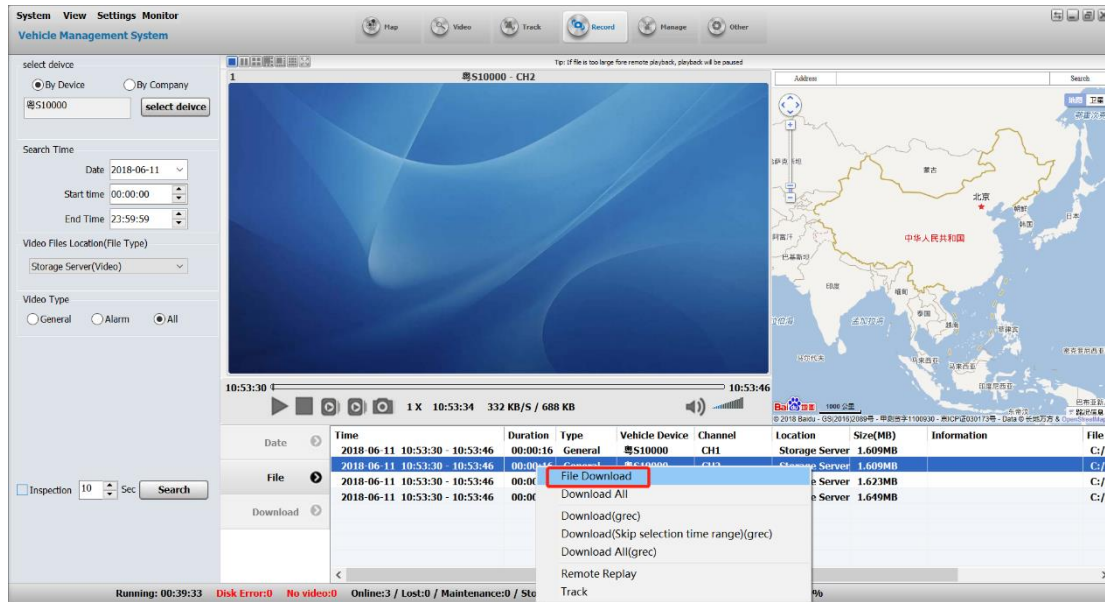


1. Select files of one channel, right-click, pop-up menu, click "Local Download" (can press ctrl key or ctrl + shift combination key for multiple selection)

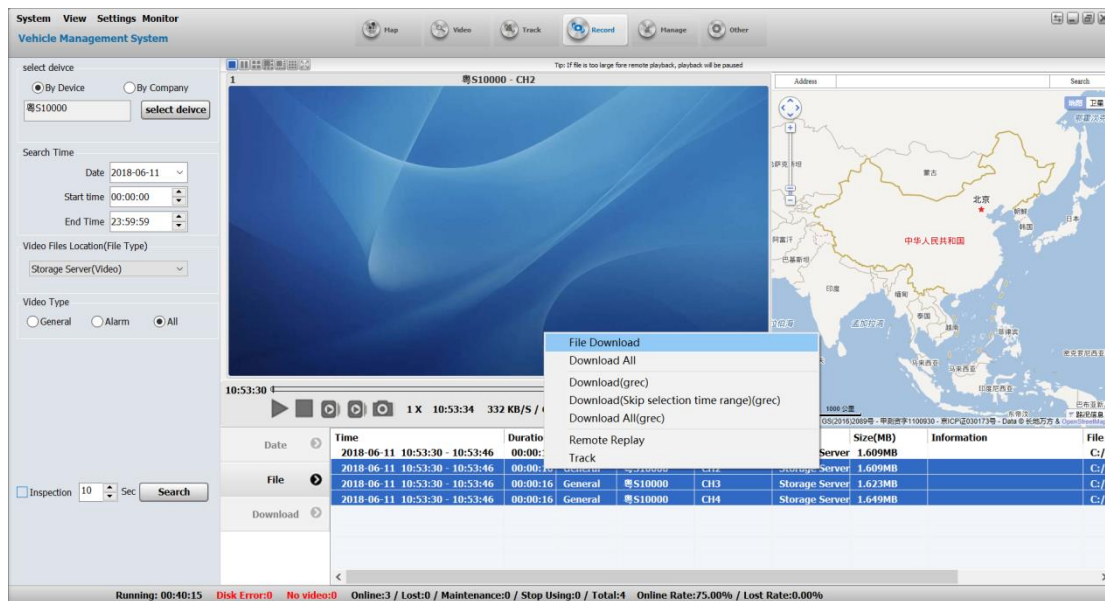

2. Download other operations


Select the file being downloaded, right-click, the menu is as shown below:

Pause, delete the download, and download path settings

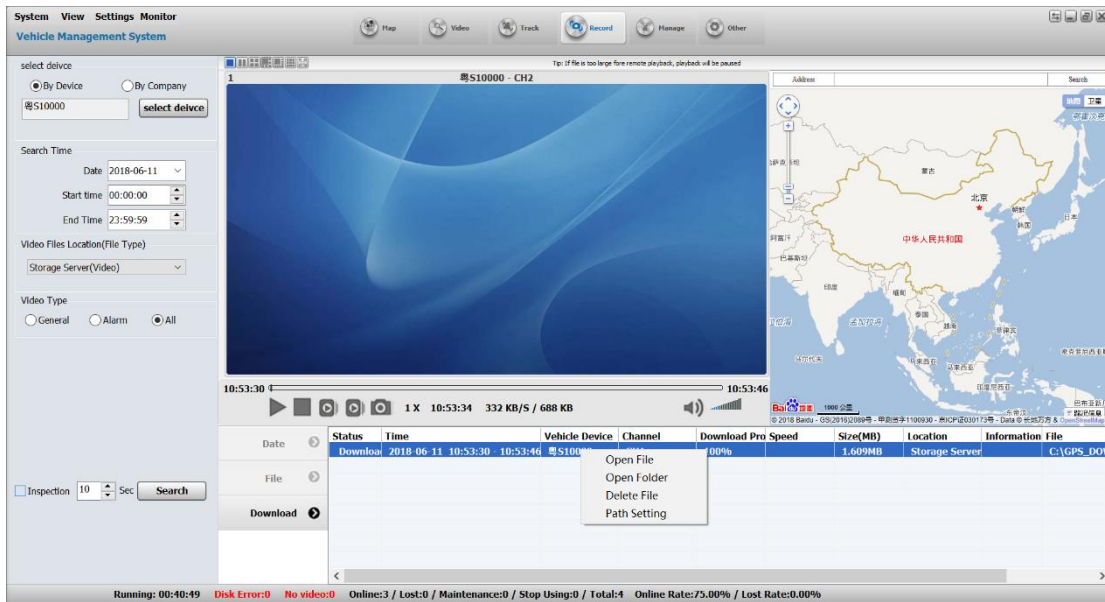


Note: When the file is being packaged, it cannot be downloaded, but can be played remotely. The download can only download already packed video file.

Download successfully

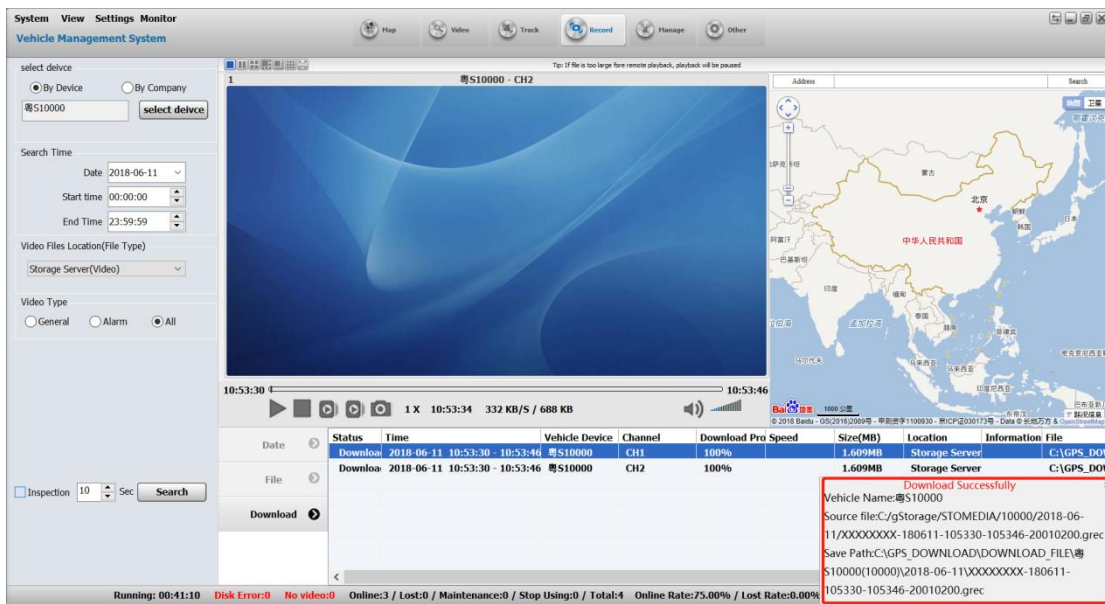

Downloading failed

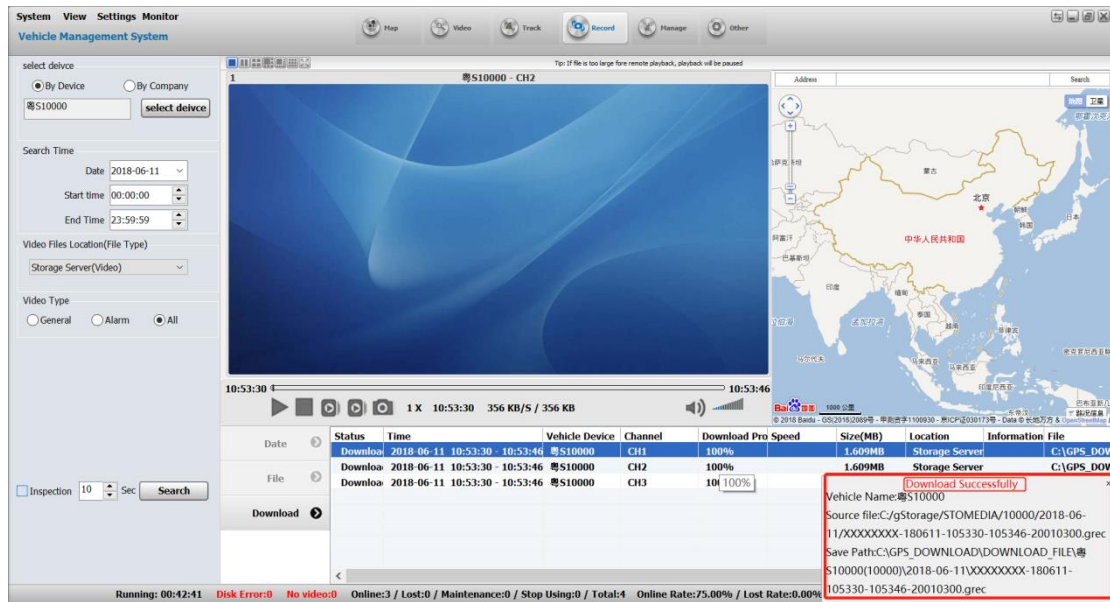


When the downloading of file is too large or the network speed is too slow, the file download progress will be affected. Even if the download fails, the video file can be played without being completely downloaded (the play length is the length of the downloaded video).

If the user does not log out of the client, click Continue Download in the context menu of the download list to continue downloading the video.

## 5.8 Issuance of literal information

### 5.8.1 Opening of TTS phonetic function by vehicle information management

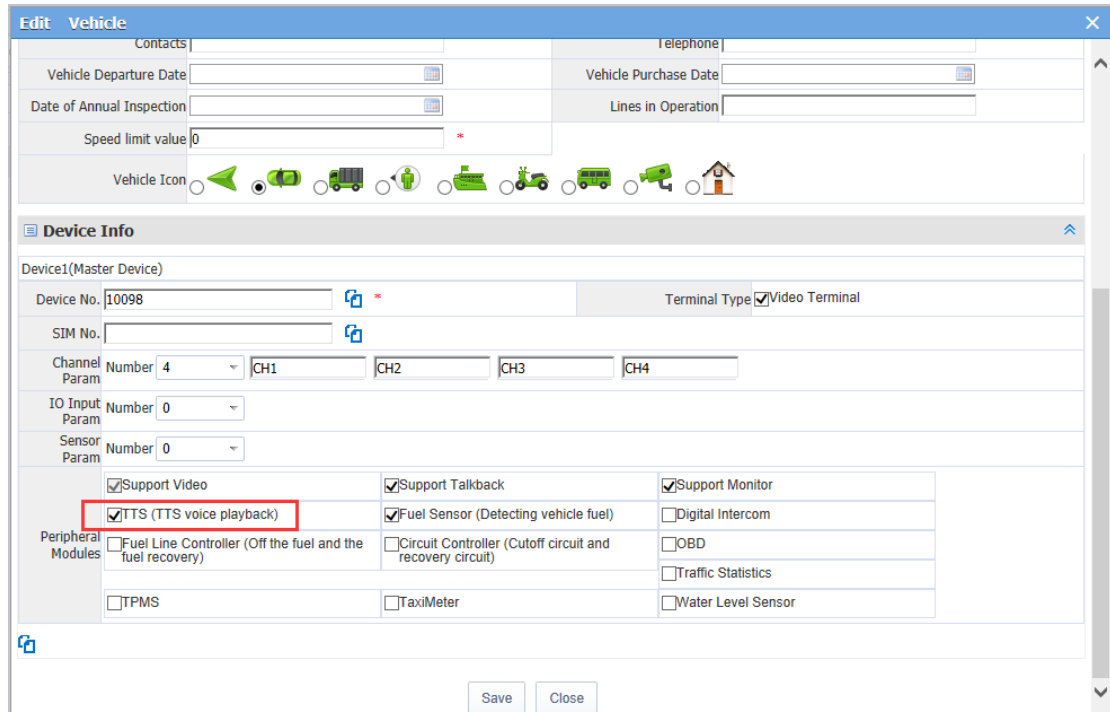


### 5.8.2 Operation of issuance function of client file

- Send a file to a single equipment

Select an equipment, right-click, and click "send literal information" in the menu.


<b>System</b>	Start Intercom
<b>Vehicle I</b>	Start Monitor
	Start All Record
	Track
	Video Replay
	Open vehicle tracking
	Control Module Menu >
	Vehicle roll call
	Locale >
	Parameter Control >
	<b>TTS Text</b>
	Text Information
	3G Flow Statistics
	3G Flow Config
	Event Setting
	Questions Issued
	Information on demand menu settings
	Information services
	Callback
	Set phone book
	Vehicle Control
<b>Statu</b>	Query terminal properties
<b>Vehicle N</b>	Driving record data acquisition
<b>Vehicle II</b>	Driving record data upload >
<b>Company</b>	Set position tracking
<b>Group</b>	Multimedia Settings >
<b>Status</b>	Parameter Config
<b>Positionir</b>	parameter configuration (common)
<b>Location</b>	Downlink transmission data
<b>Speed</b>	Device Upgrade
<b>Costs</b>	Attention
	809 Task Menu >

Send TTS voice page as shown below

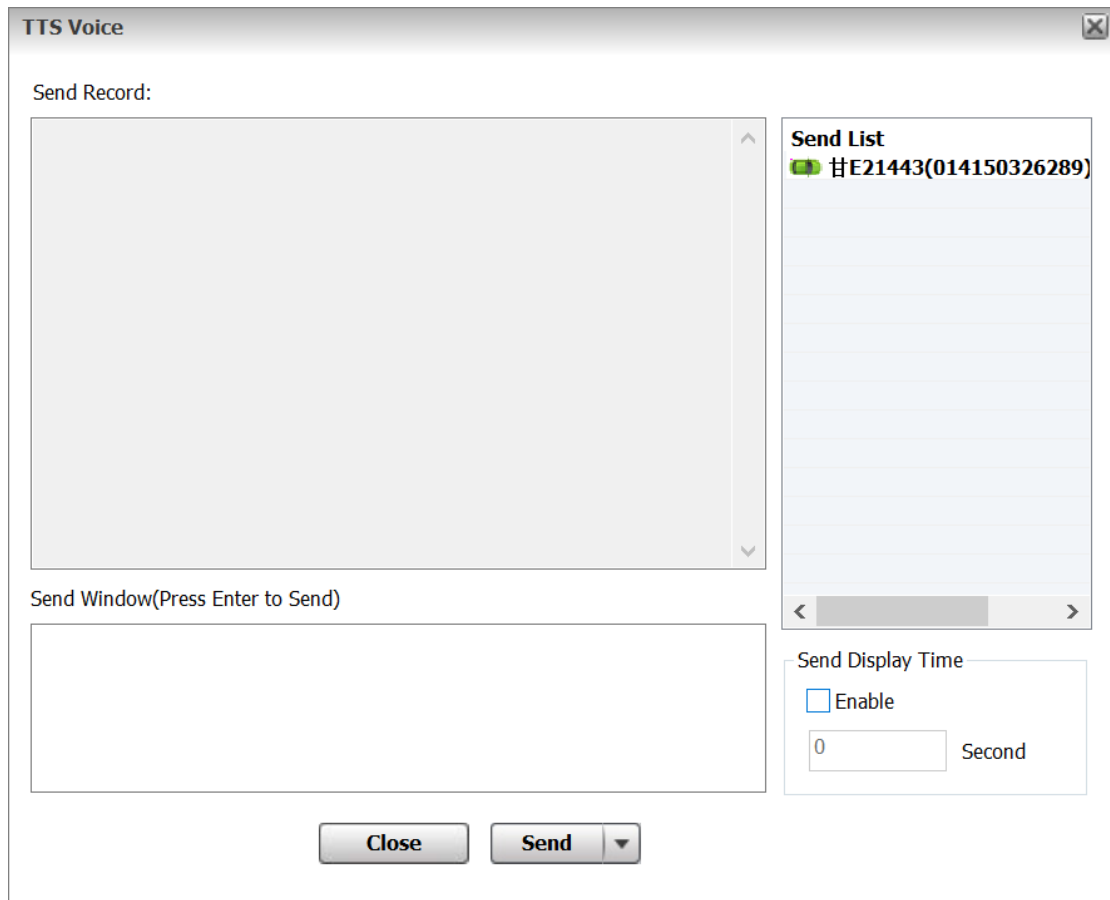


- Multiple equipment send files at the same time

Select the group or select "Monitor Center", right-click, open "send literal information" in the menu,

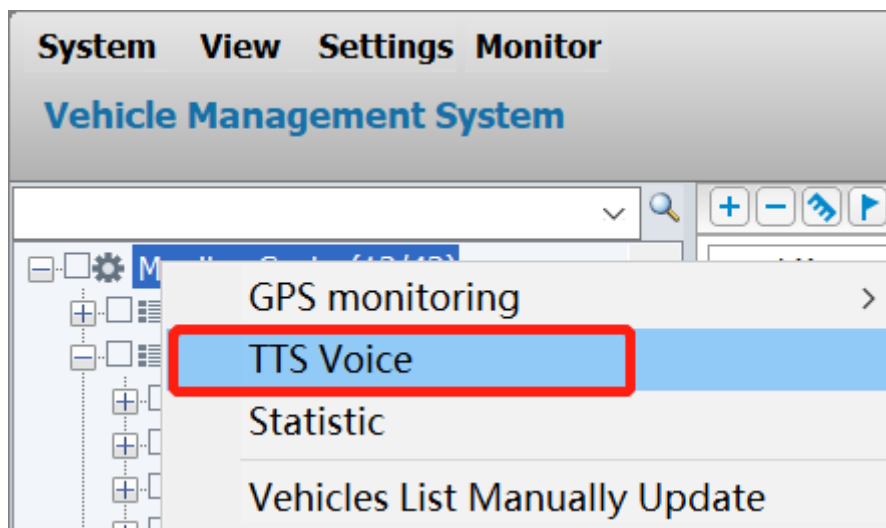


Send the literal information page as shown below

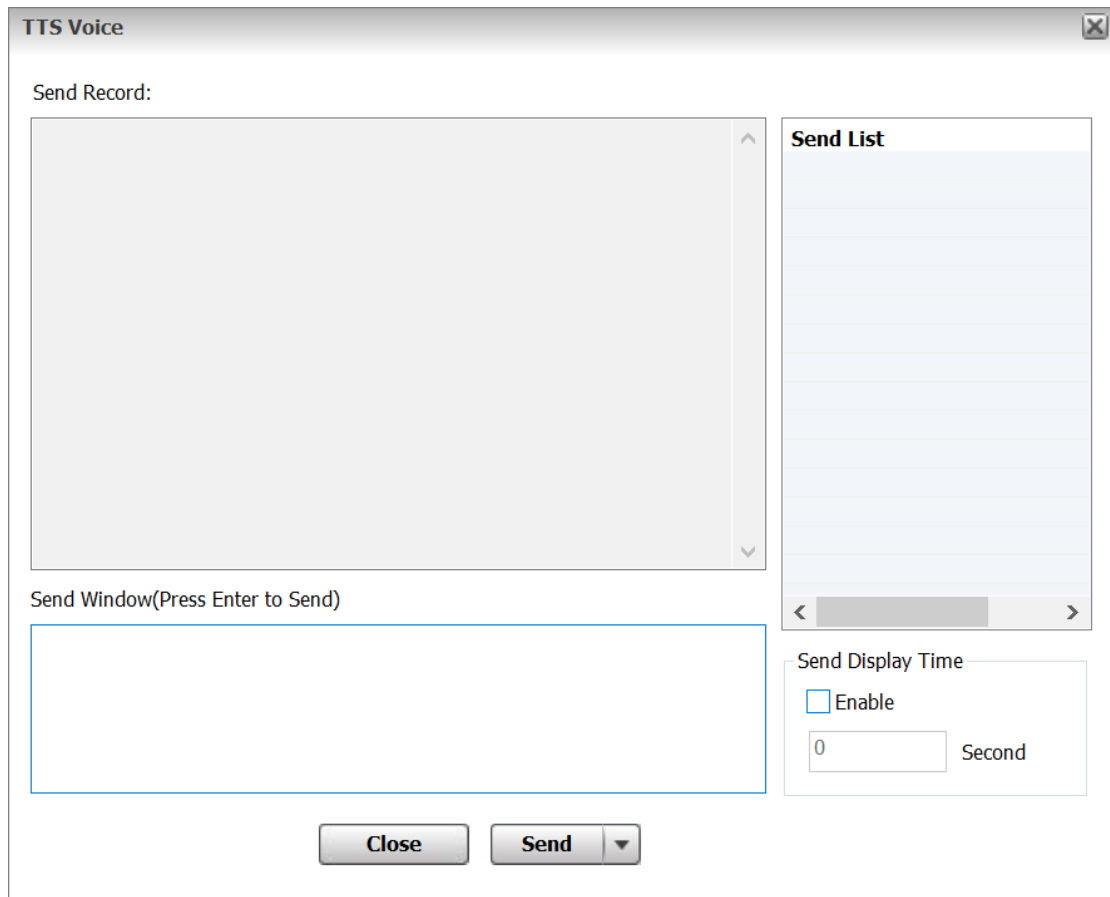

### 5.8.3 Query of detail report about issued information in the statement


For the issued short information, the time and contents can be also inquired in the statement

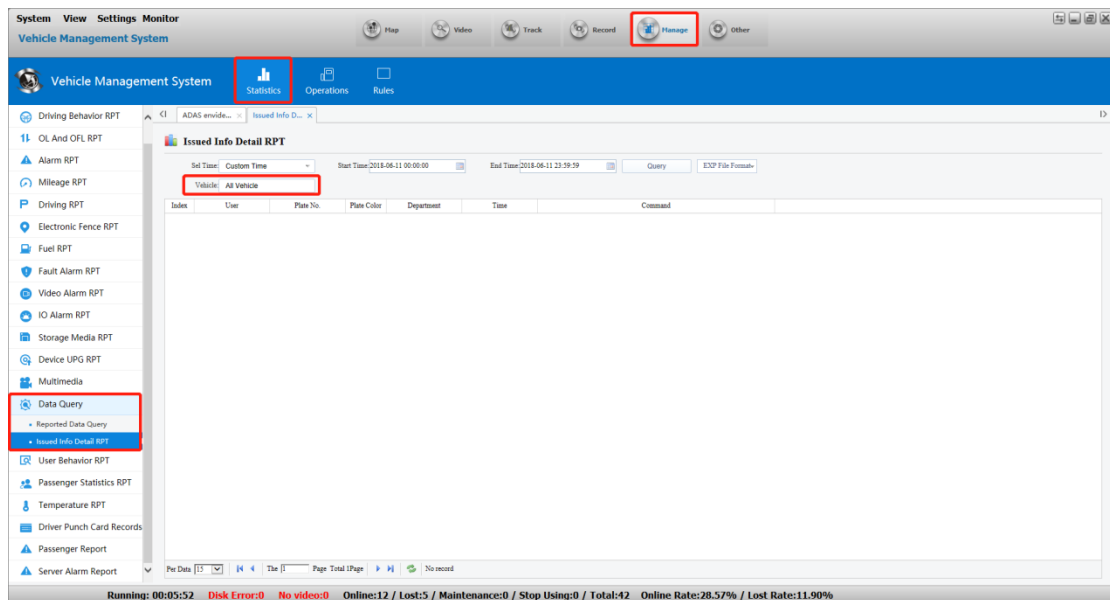


## 5.9 Monitoring platform 809 function

### 5.9.1 Viewing connection status of monitoring platform

Start 809 Business in System Settings Selection

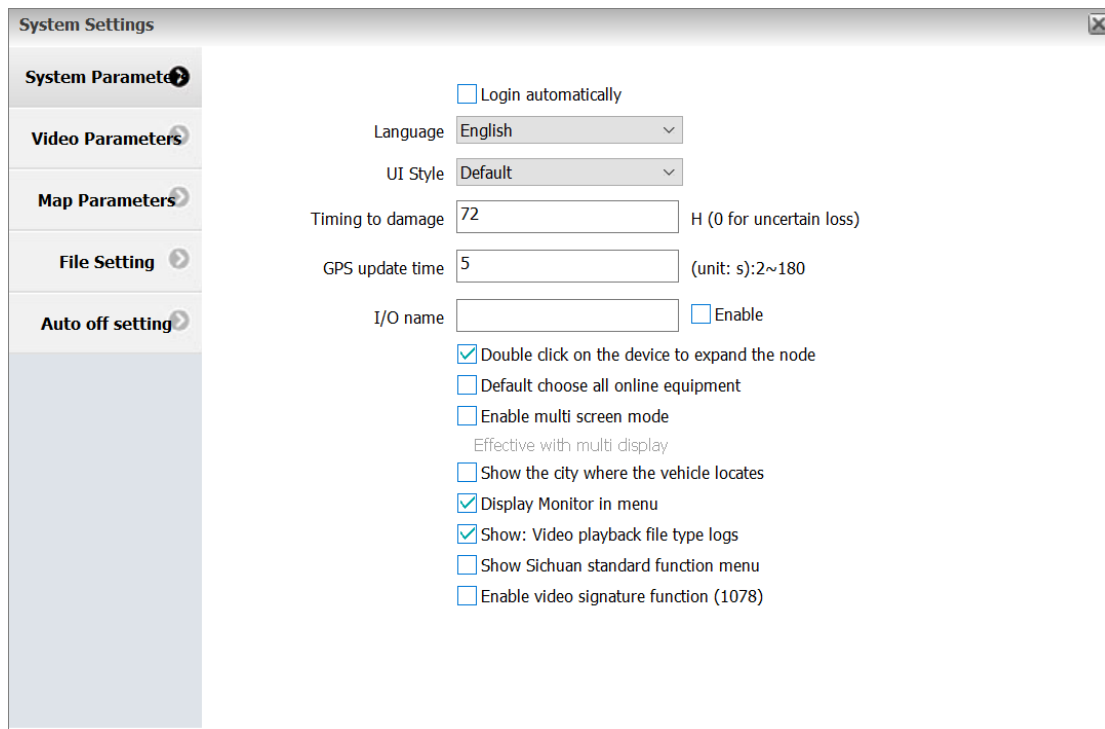

Check the connection status, log off the supervision platform, login supervision platform

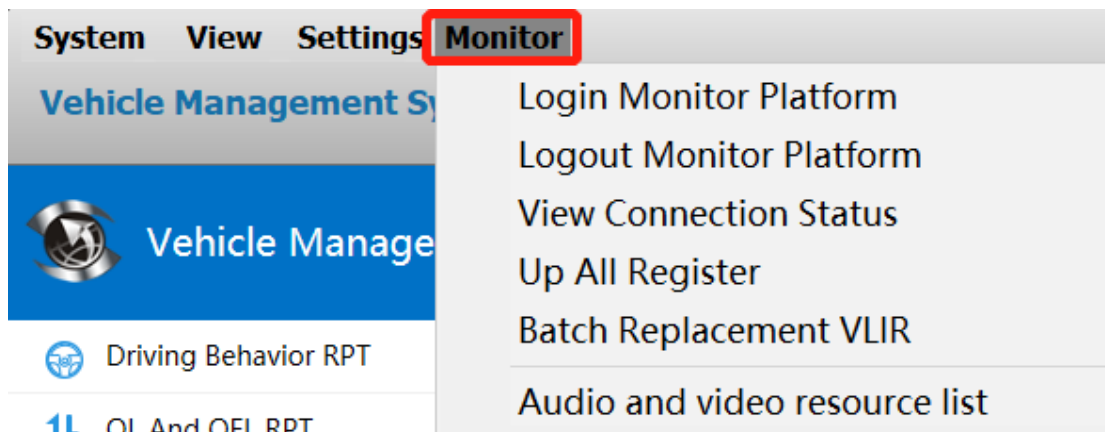

## 5.9.2 Request to the monitoring platform

The screenshot displays a software interface for vehicle monitoring. On the left is a sidebar menu with categories like 'System', 'Vehicle', 'Stat', and 'Location'. The main area shows a detailed menu with various options such as 'Start Intercom', 'Track', 'Video Replay', and '809 Task Menu'. On the right, there is a map of the Middle East region with labels for countries like Kazakhstan, Turkmenistan, Iran, Afghanistan, Pakistan, India, Oman, and Maldives. Below the map, there is a status bar showing 'Offline:0 Alarm:0 Idling:0 ACC' and a 'Content' section with the message 'Successfully login server'. A red box highlights the '809 Task Menu' option in the main menu, and another red box highlights a sub-menu containing 'Up Single Register', 'Replacement VDIR', 'Application EVLIR', 'Replacement VLIR', 'Cancel EVLIR', and 'Alarm Handle Report'.


System	Start Intercom	
Vehicle	Start Monitor	
	Start All Record	
	Track	
	Video Replay	
	Open vehicle tracking	
	Control Module Menu	>
	Vehicle roll call	>
	Locale	>
	Parameter Control	>
	TTS Text	
	Text Information	
	3G Flow Statistics	
	3G Flow Config	
	Event Setting	
	Questions Issued	
	Information on demand menu settings	
	Information services	
	Callback	
	Set phone book	
	Vehicle Control	
Stat	Query terminal properties	
Vehicle I	Driving record data acquisition	
Vehicle ]	Driving record data upload	>
Compan	Set position tracking	
Group	Multimedia Settings	>
Status	Parameter Config	
Position	parameter configuration (common)	
Location	Downlink transmission data	
Speed	Device Upgrade	
Costs	Attention	
	809 Task Menu	>
	Up Single Register	
	Replacement VDIR	
	Application EVLIR	
	Replacement VLIR	
	Cancel EVLIR	
	Alarm Handle Report	

## **5.10 Function setting**

### **5.10.1 Parameter configuration: Remote modification of the equipment parameters**

Right-click vehicle, as shown below

<b>System</b>	Start Intercom
<b>Vehicle</b>	Start Monitor
	Start All Record
	Track
	Video Replay
	Open vehicle tracking
	Control Module Menu >
	Vehicle roll call
	Locale >
	Parameter Control >
	TTS Text
	Text Information
	3G Flow Statistics
	3G Flow Config
	Event Setting
	Questions Issued
	Information on demand menu settings
	Information services
	Callback
	Set phone book
	Vehicle Control
	Query terminal properties
<b>Stat</b>	Driving record data acquisition
<b>Vehicle M</b>	Driving record data upload >
<b>Vehicle I</b>	Set position tracking
<b>Company</b>	Multimedia Settings >
<b>Group</b>	<b>Parameter Config</b>
<b>Status</b>	parameter configuration (common)
<b>Positioni</b>	Downlink transmission data
<b>Location</b>	Device Upgrade
<b>Speed</b>	Attention
<b>Costs</b>	809 Task Menu >

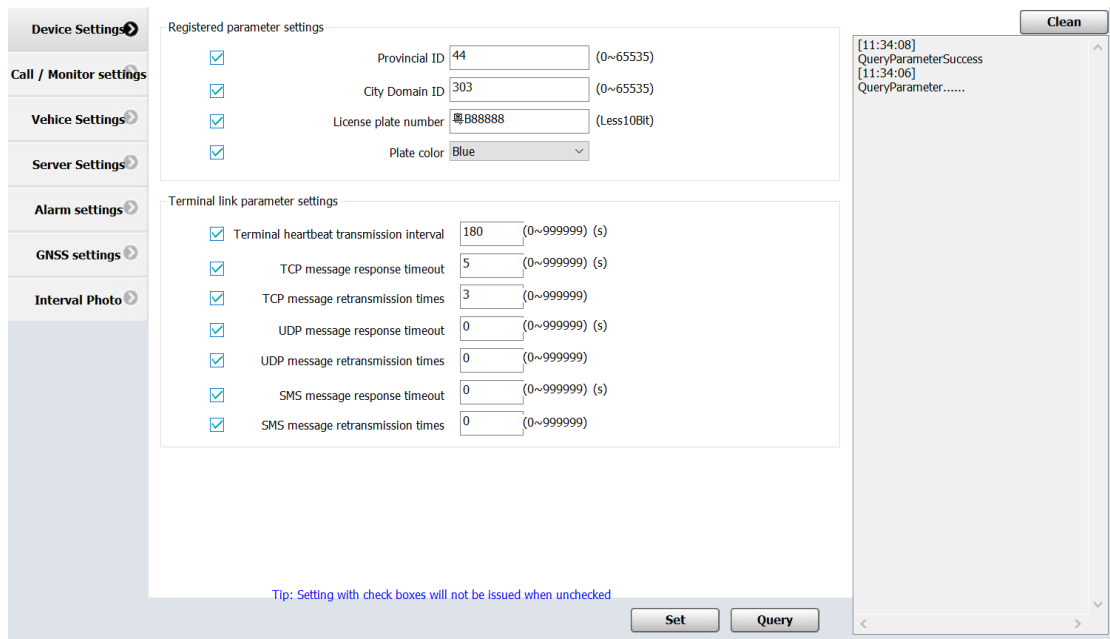


### 5.10.2 Event setting

According to the equipment selected by the platform, all events can be deleted, modified, deleted specific events, adding events, and the number of events that can be operated by the equipment increased, that is they can operate multiple events used the implement.

Operation:

1. Right-click on equipment > Event Settings

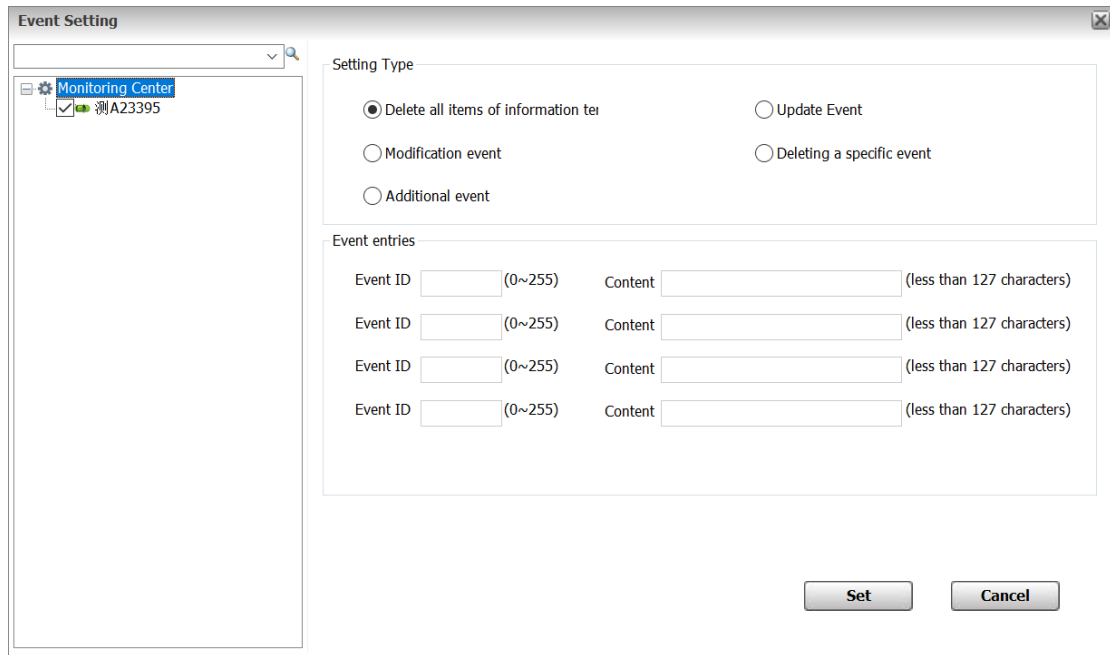

Follow the instructions to fill in the relevant information -> click the settings button

### 5.10.3 Issuance of questions

The platform issues the questions that would be questioned to the terminal, and the issued questions can own the following attributes. Urgency, terminal TTS broadcast, advertising screen display; the terminal receives the issued question and returns the answer as a list. The platform then displays the answer in the list to the corresponding window.

Operation:

1. Right click equipment - > question

The screenshot shows a window titled "Questions Issued". On the left, there is a search bar and a tree view containing "Monitoring Center" and a sub-item "测A23395" which is checked. The main area is divided into three sections: "Flag" with three checkboxes for "Emergency", "Terminal TTS broadcast reading", and "Advertising screen display"; "Problem" with five text input fields labeled "Problem", "Answ1", "Answ2", "Answ3", and "Answ4", each with a "(less than 127 characters)" label; and "Question answering" with a "Correct answer" text input field. At the bottom right, there are "Set" and "Cancel" buttons.

Follow the instructions to fill in the relevant information -> click the settings button

### 5.10.4 Information on demand menu settings

According to the equipment selected by the platform, all information items of the terminal can be deleted, modified, updated, added operations the menu, and the total number of information items that can be operated multiple items of information by the equipment together.

Operation:

1. Right click equipment - > information on demand menu settings

**Information on demand menu settings**

Setting Type

Delete all items of information terminal       Additional event  
 Update Event       Modification event

Text message

ID1  (0~255)      Content1  (less than 127 characters)

ID2  (0~255)      Content2  (less than 127 characters)

ID3  (0~255)      Content3  (less than 127 characters)

ID4  (0~255)      Content4  (less than 127 characters)

Follow the instructions to fill in the relevant information -> click the settings button

### Information services

Operation:

1. Right click equipment - > information services

**Information services**

Information Type  (0~255)

Content

(less than 127 characters)


Follow the instructions to fill in the relevant information -> click the settings button

### 5.10.5 Callback

According to the equipment selected by the platform, telephone callback can be performed on the designated equipment.

Operation:

1. Right click equipment - >telephone callback

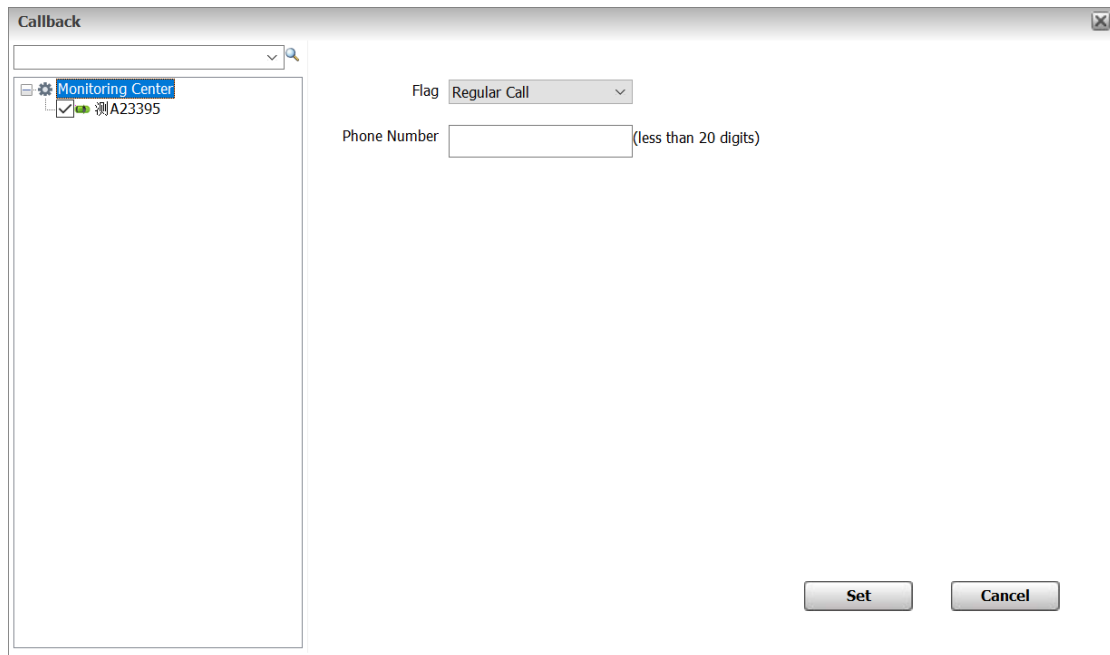


Follow the instructions to fill in the relevant information -> click the settings button

### 5.10.6 Setting of the telephone book

According to the equipment selected by the platform, specify the type of the phone book set, including the deletion of all stored contacts on the terminal. Updating the telephone book (delete all the contacts existed in the terminal, and add message contacts); Adding phone book, modify phone book (with contacts as index); and could set one or more contact calls Incomings, outgoings, incoming/outgoing records.

Operation:

1. Right click equipment - >setting phone book

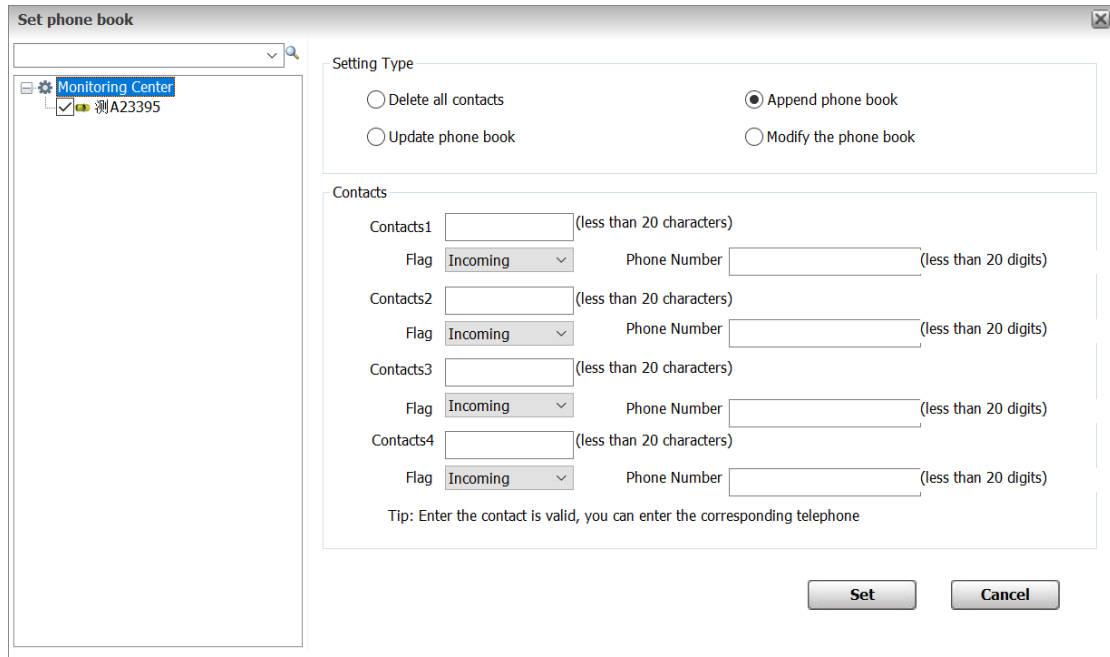


Follow the instructions to fill in the relevant information -> click the settings button

### 5.10.7 Driving record data collection

According to the equipment selected by the platform, specify the type of travel record to be queried, perform the query operation, and then display the data returned by the terminal to the corresponding window.

Operation:

Right-click on Equipment->Drive Record Data Collection

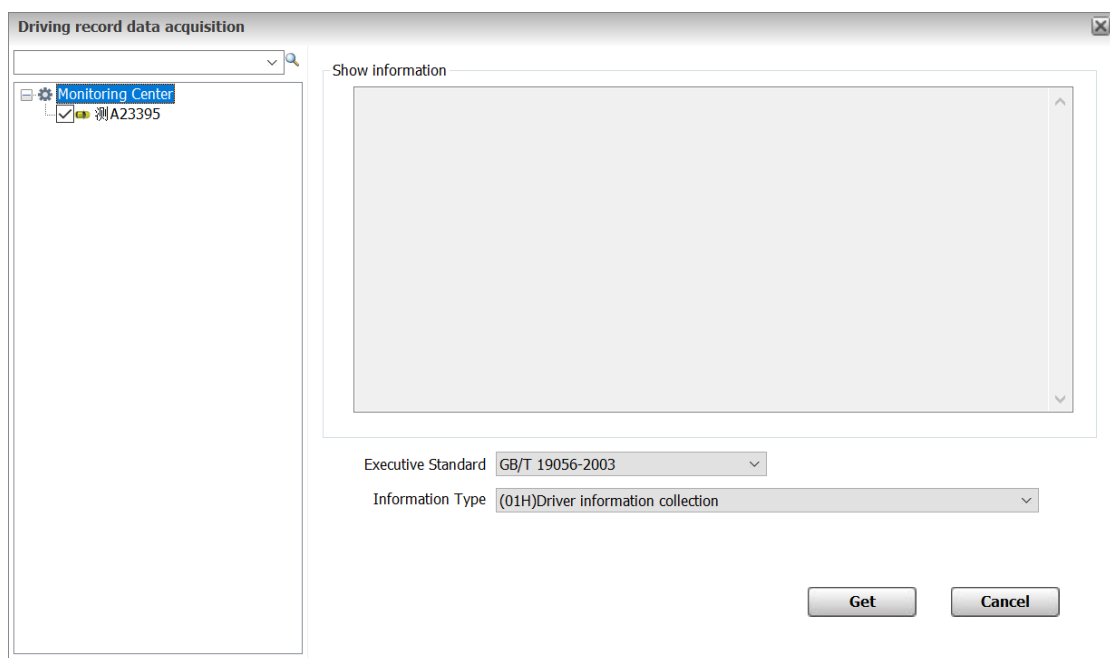

Follow the instructions to fill in the relevant information -> click the obtaining button

### 5.10.8 Driving record data upload

According to the equipment selected by the platform, the driver information/vehicle information/characteristic coefficient/recorder time is specified and then sent to the terminal

Operation:

Set driver information

Right-click on the equipment about upload record data of drive -> set driver information

Setting(Standard: GB/T 19056 2003)

设置驾驶员代码、驾驶证号码

Driver Code 0 (0~16777215)

Driver's license number (less than 18 bytes)

Set Get

Set the vehicle VIN number, license plate number, license plate classification

Vehicle VIN number (less than 17 bytes)

Plate number (less than 12 bytes)

Category (less than 12 bytes)

Set Get

Set recorder real-time

GMT clock 2018-06-11 13:46:17

Set

设置车辆特征系数


Characteristic coefficient of the vehicle 0 (0~16777215)

Set Get

2. Follow the instructions to fill in the relevant information -> click the settings button

### 5.10.9 Setting of vehicle information

1. Right-click on the equipment about upload record data of drive -> set vehicle information

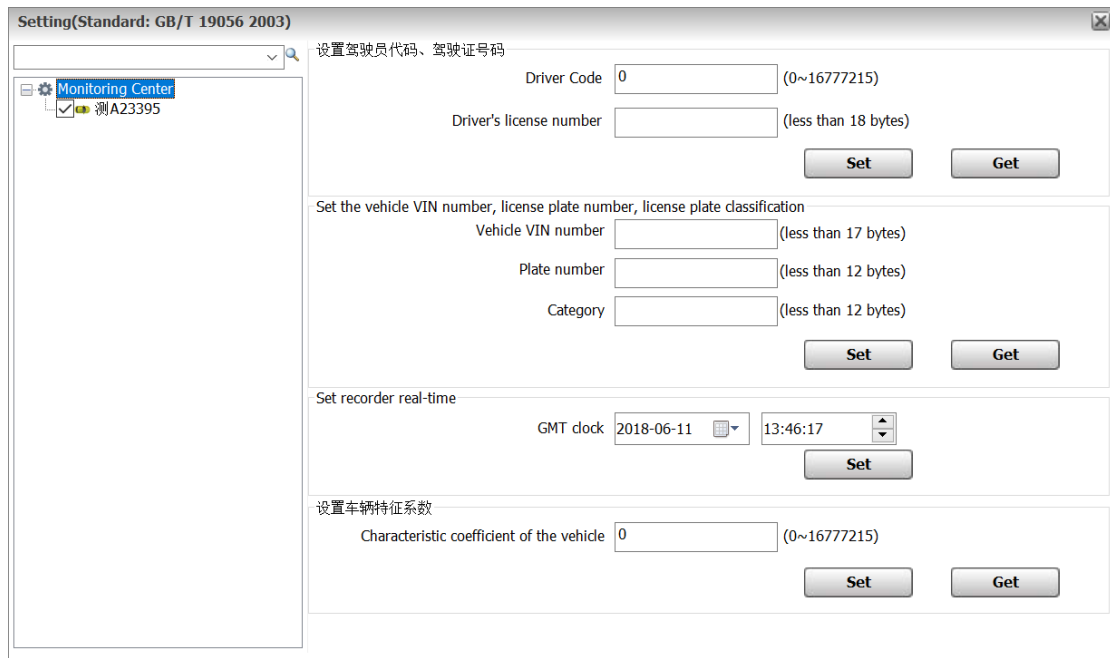

Follow the instructions to fill in the relevant information -> click the settings button



### 5.10.10 Setting of the recorder time

1. Right-click on the equipment -> upload record data of drive -> set recorder time
2. Follow the instructions to fill in the relevant information -> click the settings button

### 5.10.11 Setting of characteristic coefficient

1. Right-click on the equipment -> upload record data of drive -> set character coefficient

Follow the instructions to fill in the relevant information -> click the settings button

### 5.10.12 Setting of position trailing

The real-time location and status information of a bicycle or multiple vehicles is displayed on the electronic map by timing method.

1. Right click equipment - > location tracking settings


Click the Setting button

### 5.10.13 Driving record data collection

According to the equipment selected by the platform, specify the type of travel record to be queried, perform the query operation, and then display the data returned by the terminal to the corresponding window.

Operation:

Right-click on Equipment->Drive Record Data Collection

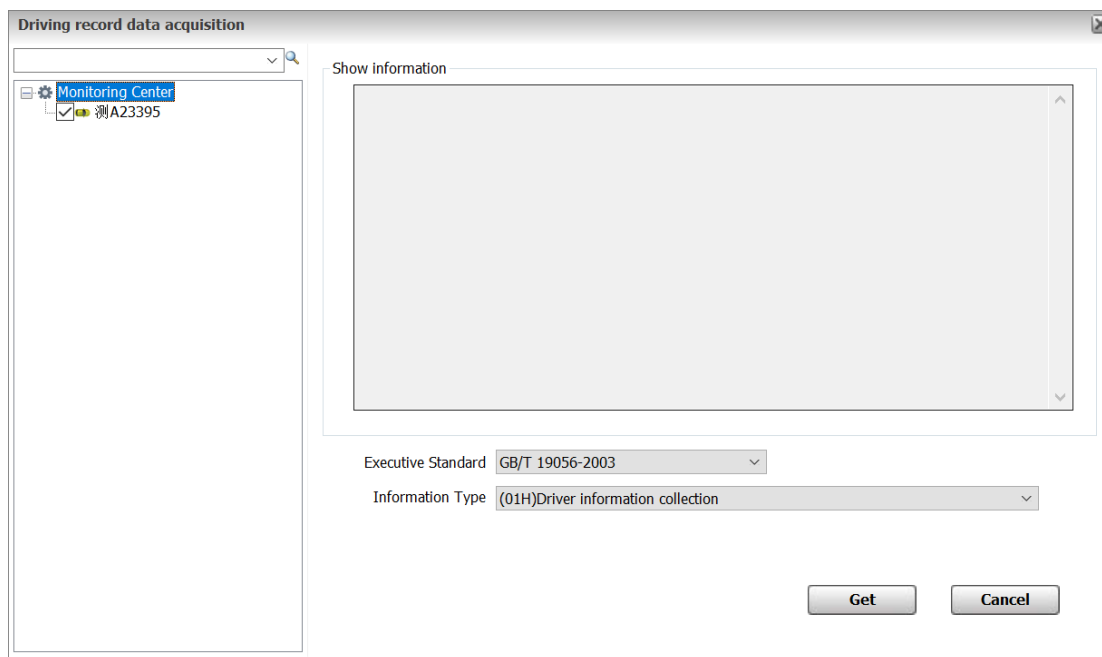

Follow the instructions to fill in the relevant information -> click the obtaining button


### 5.10.14 Driving record data upload

According to the equipment selected by the platform, the driver information/vehicle information/characteristic coefficient/recorder time is specified and then sent to the terminal

Operation:

Set driver information

Right-click on the equipment about upload record data of drive -> set driver information

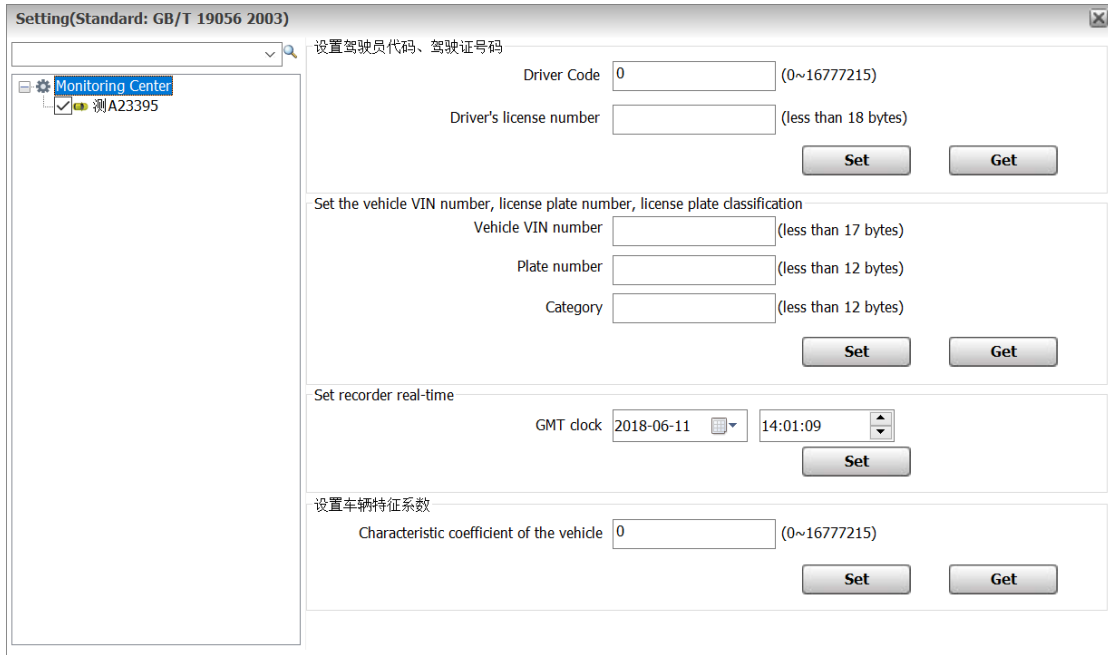


2. Follow the instructions to fill in the relevant information -> click the settings button


## 5.11 Alarm

### 5.11.1 Check the alarm information

Once the equipment has an alarm, the client "alarm information" column will display the alarm list, as shown below.

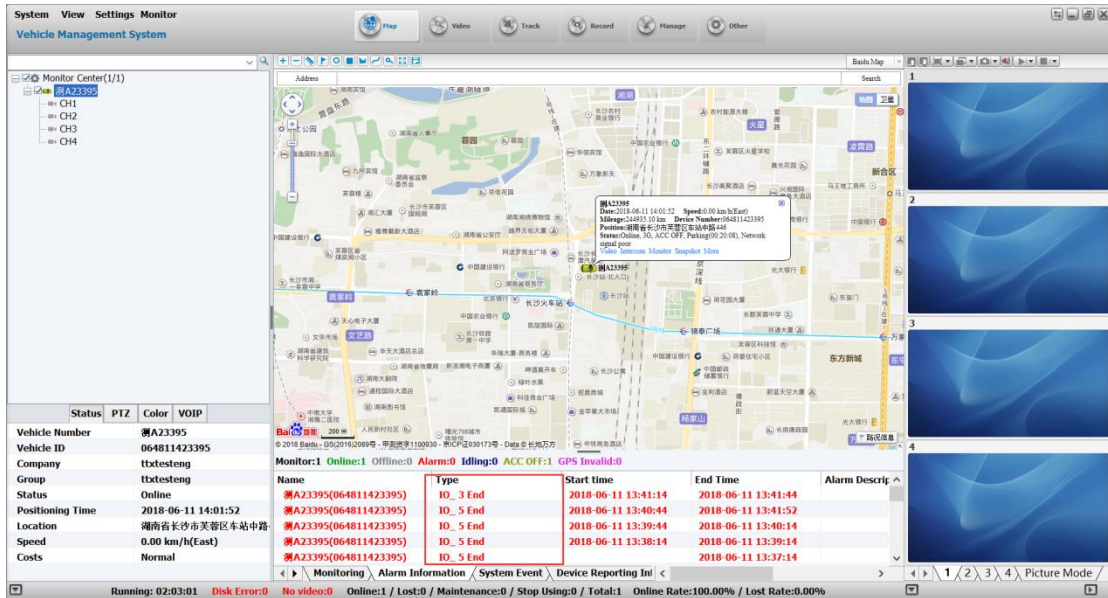


### 5.11.2 Query of the web alarm statement

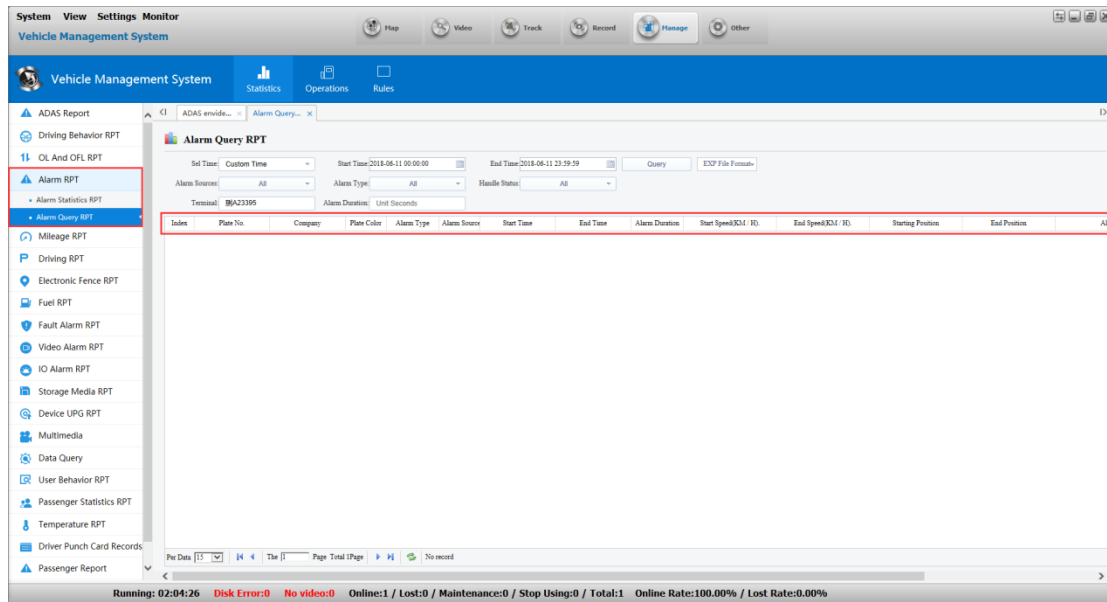


### 5.11.3 Shielding alarm information

If the alarm in the mask list is checked, there will be no such alarm in the "Alarm Information" column of the client side.

- A. First click on "other applications" and then click on the "alarm shield configuration".
- B. In the menu bar "setting", click "alarm shield configuration" and open the "alarm shield configuration" window, as shown in the figure.

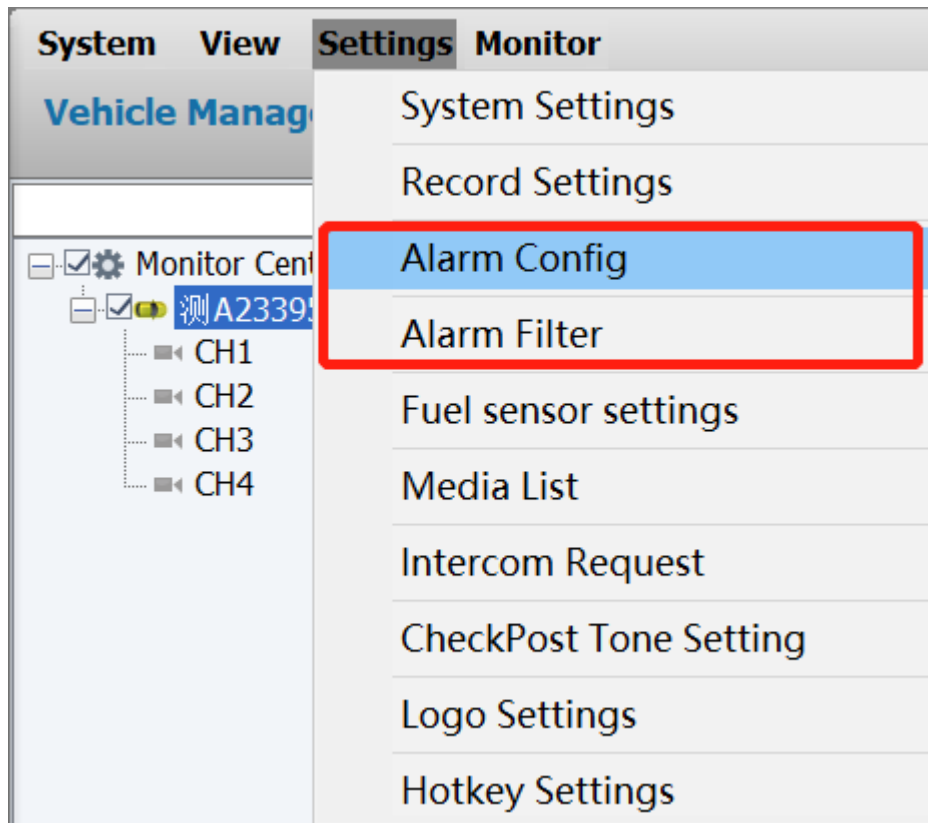


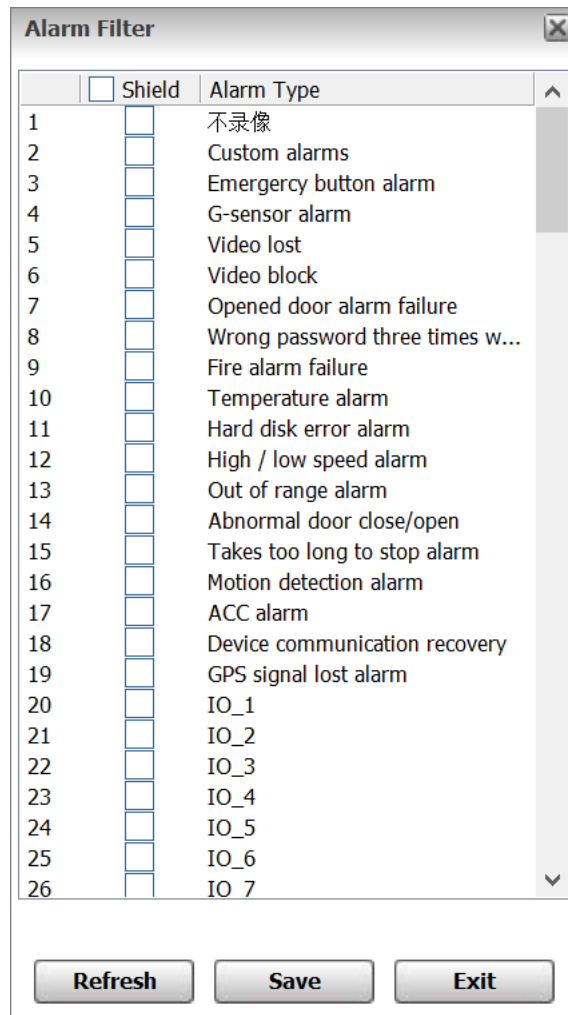


You can check it directly for the conditions that don't need the alarm

#### 5.11.4 Action with alarm of the client side

When the user can specify one or more types of alarms to be generated through action with alarm function of the configuration equipment on the client, the PC client can pop up a video window that generates an alarm, an electronic map lock function and other settings.

- A. First click the "other applications" and then click the "action with alarm setting"
- B. Click the "action with alarm" in the "setting" of menu bar to open the "action with alarm" window, shown in the figure below:

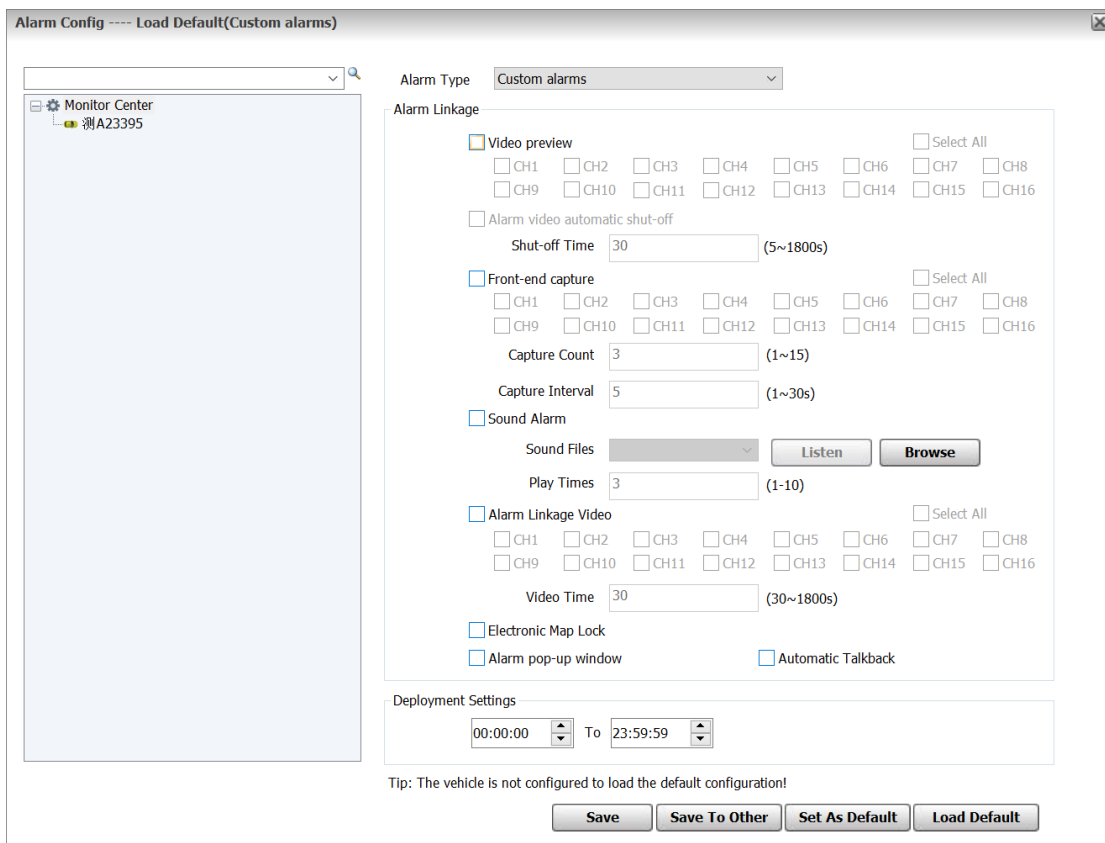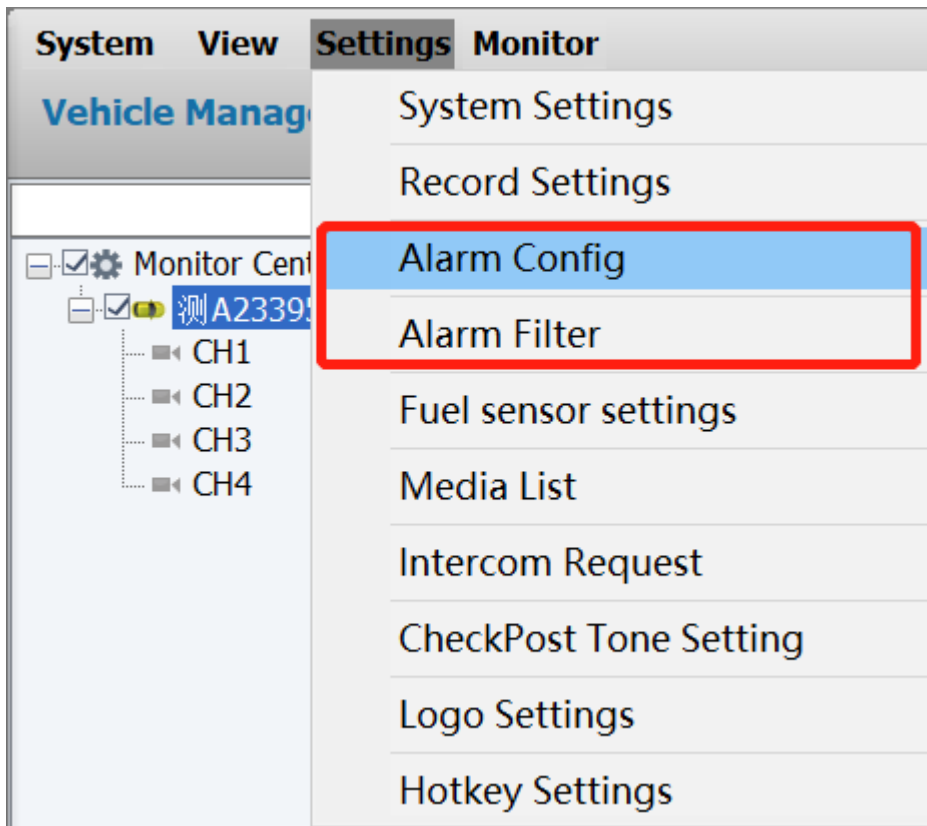

When the setting window of the action with alarm is opened by default, the function of the left panel is not editable. Only when the equipment is selected, the right panel can be editable. Here you can set the action with alarm for each type of alarm for each equipment.

**Type of alarm:** Select the type of alarm associated with the equipment alarm (The corresponding action can be performed only when the device alarm type is the same as the alarm type set here).

**Video preview:** When an alarm is generated, a video of the channel of the equipment will be popped (the current version of the code stream type supports only the subcode stream).

**Front-end snapshot:** When the alarm is generated, the picture of the channel and this equipment will be snapshot at the front end.

**Audible alarm:** Set the sounds and the number of action with alarm sounds.

**Rules of play:** If a warning sound is being played, a new alarm needs to be played at the same time, then stop the former and broad the new one.

**Action with alarm Video:** After action with alarm is generated, the alarm video will be recorded on the local computer.

**Electronic map locking:** When the associated equipment is linked, the monitored equipment will be centrally displayed on the map.

**Deployment setting:** The action with alarm of this equipment within this time period will be valid after it is enabled.

**Save:** Save the currently configured linkage alarm for this equipment.


**Save to multiple equipment:** Save the current linkage alarm configuration to multiple equipment.

**Set as the default configuration:** The configuration of the current linkage alarm of the equipment is set as the default configuration, and equipment without linkage alarm are configured to load the default configuration.

**Load the default configuration:** The current equipment is loading the default configuration.

## 5.11.5 Action with alarm of the server

### 5.11.5.1 Configure Email and SMS on the Server Side 1) Configure Email

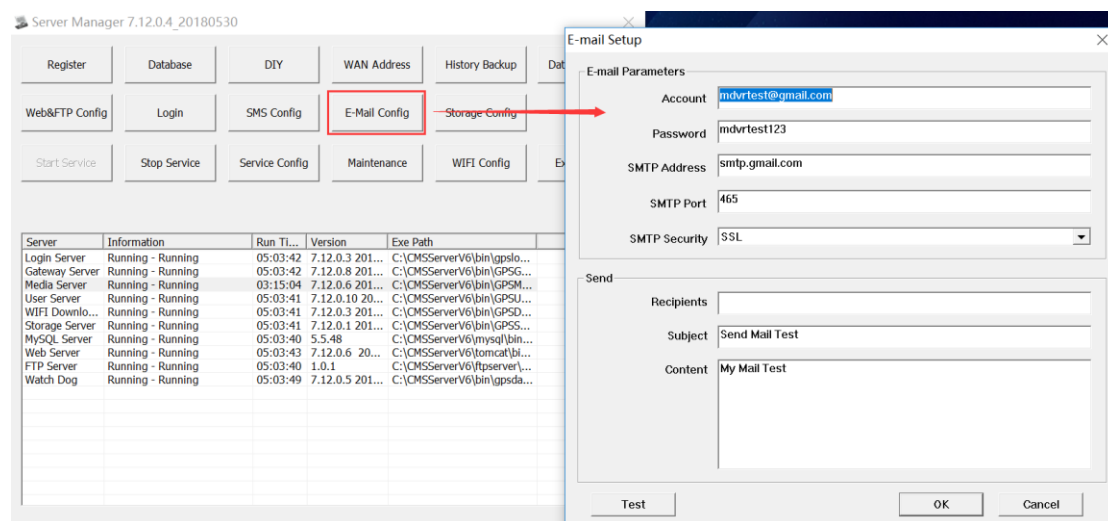


**E-mail configuration:**

The account and password are the email account and password used to send the email.

Note:

For overseas customers, the default email address cannot be used. It is necessary to fill email and email password applied in the local, and then restart the gateway server. The Hong Kong server also needs to replace the email.

## 2) Configure SMS Configuration

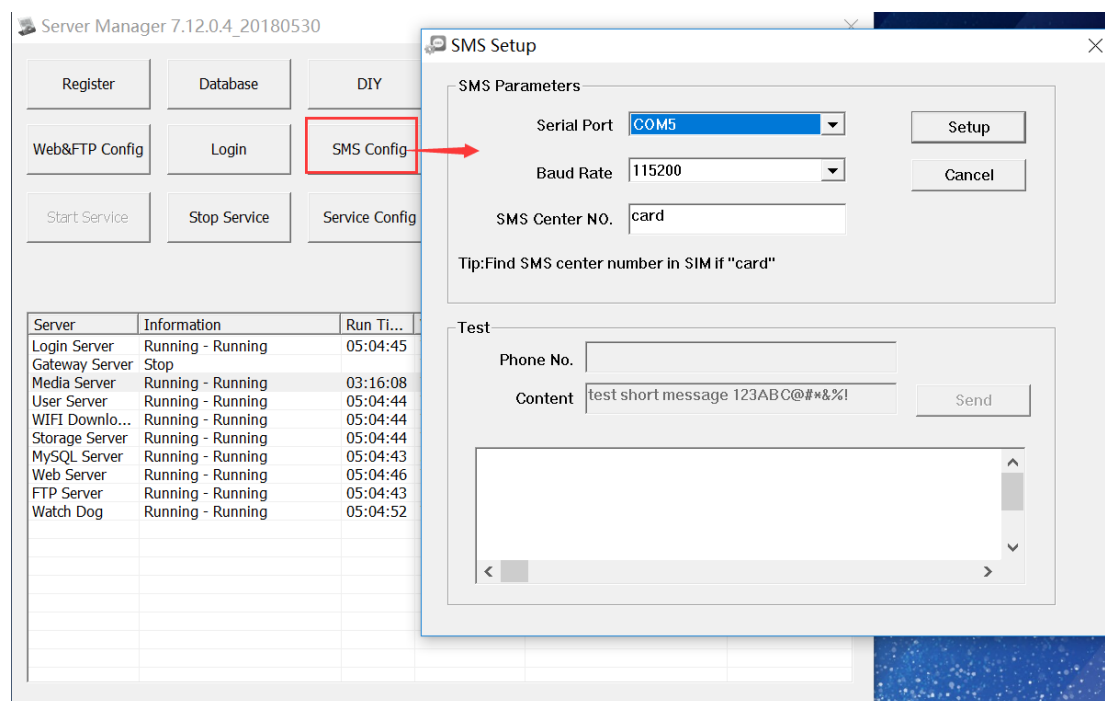


When sending SMS, you need to connect an SMS modem to the server, and install a serial port driver. Then, when configuring this, select the corresponding serial port number and click "Configuration". If an SMS modem is not connected externally, text messages cannot be sent.


### 5.11.5.2 Rule management of configuration action with alarm

When the specified equipment occurs with the specified alarm, the server will automatically send SMS and email notifications to the configured mobile phone number and mailbox.

#### 1. Configuration rule

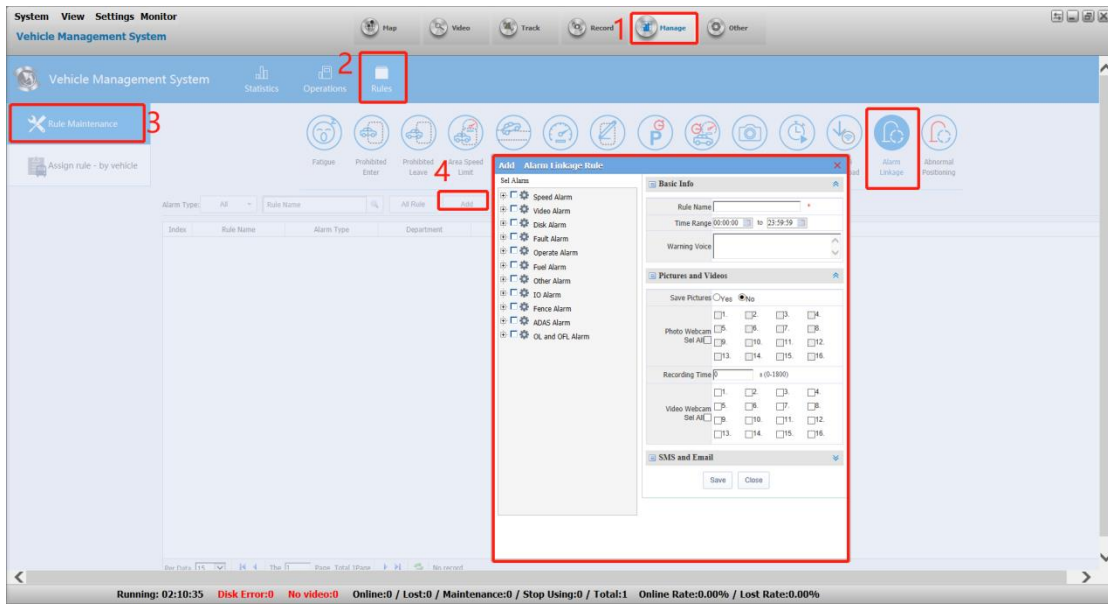

## 2. Distribution rule

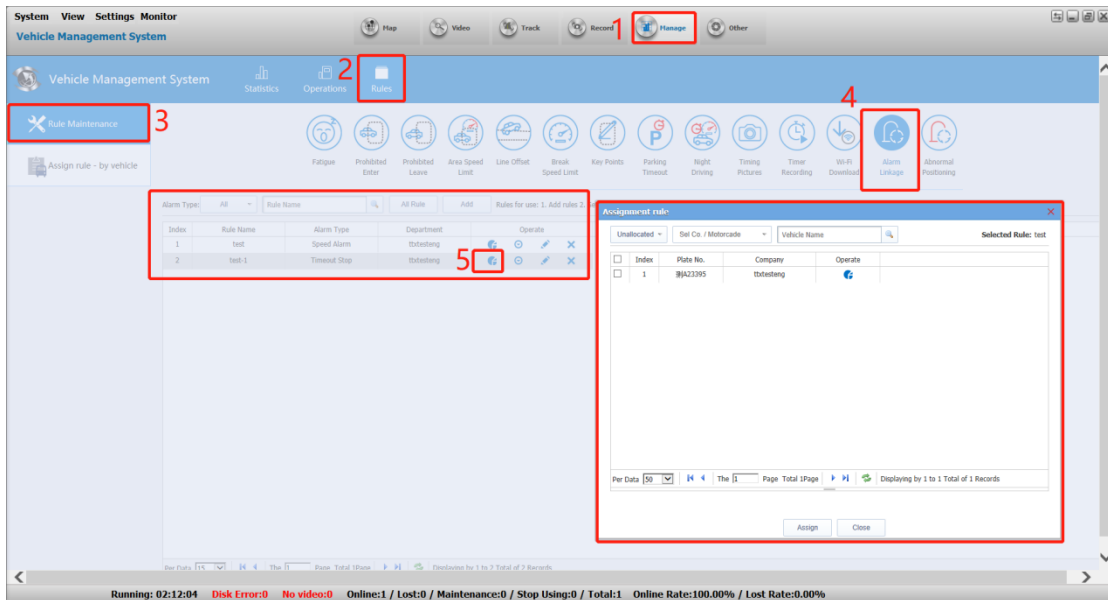

## 5.12 Remote upgrade of equipment

### 5.12.1 Upgrade of single equipment

a. Log in to the client, open the equipment list, select the equipment to be upgraded, right-click, and select "Equipment Upgrade" from the menu that appears, as shown in the figure below.

System V  
Vehicle M

Monit  
C  
C  
C  
C

Vehicle Nu  
Vehicle ID  
Company  
Group  
Status  
Positioning  
Location  
Speed  
Costs

- Start Intercom
- Start Monitor
- Start All Record
- Track
- Video Replay
- Open vehicle tracking

---

- Vehicle roll call
- Locale >
- Parameter Control >

---

- TTS Text
- Text Information

---

- 3G Flow Statistics
- 3G Flow Config

---

- Event Setting
- Questions Issued
- Information on demand menu settings
- Information services

---

- Callback
- Set phone book
- Vehicle Control
- Query terminal properties

---

- Driving record data acquisition
- Driving record data upload >
- Set position tracking
- Multimedia Settings >

---

- Parameter Config
- parameter configuration (common)
- Downlink transmission data
- Device Upgrade**
- Attention

---

- 809 Task Menu >




System V  
Vehicle M

Monit  
C  
C  
C  
C

Vehicle Nu  
Vehicle ID  
Company  
Group  
Status  
Positioning  
Location  
Speed  
Costs

- Start Intercom
- Start Monitor
- Start All Record
- Track
- Video Replay
- Open vehicle tracking
- Vehicle roll call
- Locale >
- Parameter Control >
- TTS Text
- Text Information
- 3G Flow Statistics
- 3G Flow Config
- Event Setting
- Questions Issued
- Information on demand menu settings
- Information services
- Callback
- Set phone book
- Vehicle Control
- Query terminal properties
- Driving record data acquisition
- Driving record data upload >
- Set position tracking
- Multimedia Settings >
- Parameter Config
- parameter configuration (common)
- Downlink transmission data
- Device Upgrade**
- Attention
- 809 Task Menu >



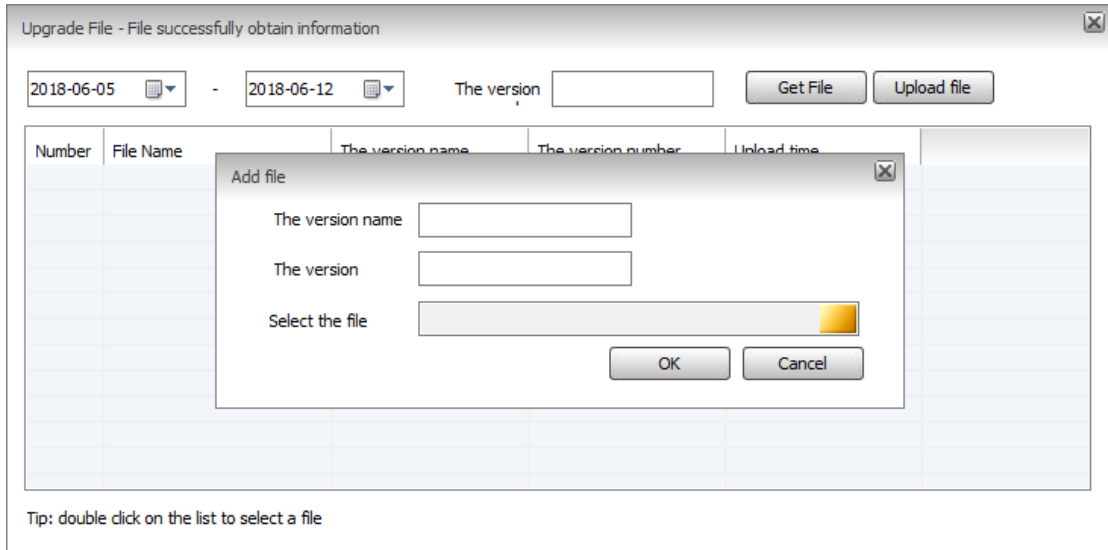


Upload the upgrade file to the server. The equipment will download the upgrade files automatically when it is online.

## 5.13 Fuel cut and power outage


### 5.13.1 Opening the function of fuel cut and power outage by web

Login into the information management, select the equipment that needs to cut off the oil and power from the operation management vehicle information. The specific operation is as the figure below. Check up the line of cutting off the oil and power, and then restart the client.

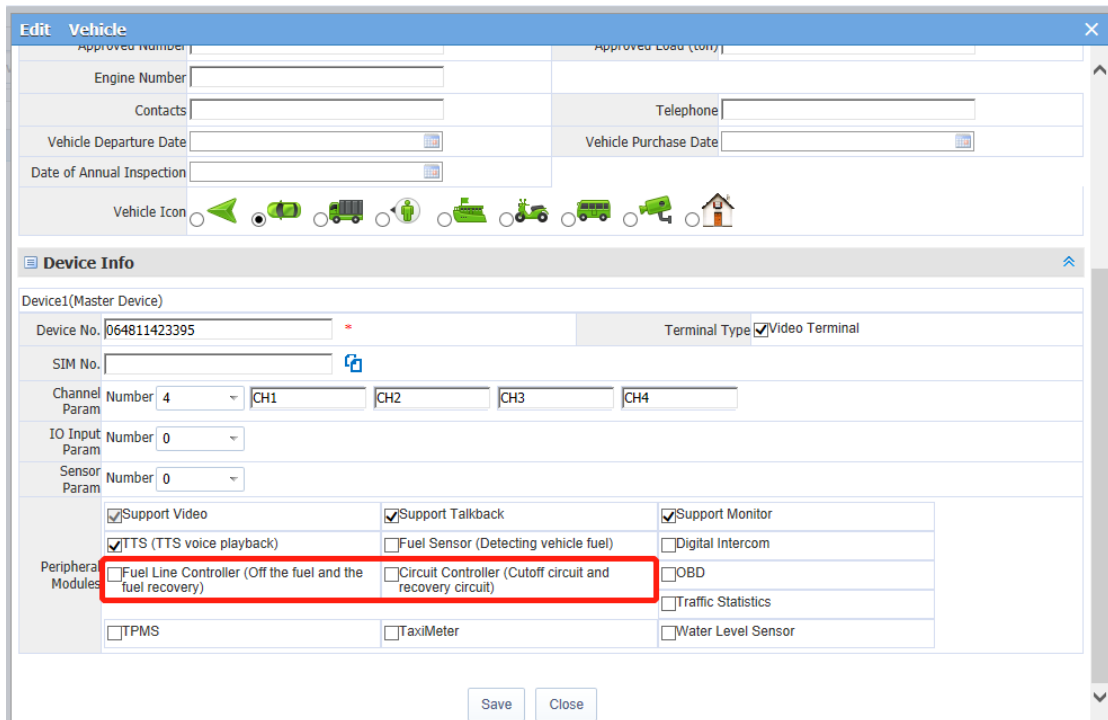

### 5.13.2 Operation of fuel cut and power outage by client

Select the equipment that needs to cut off oil and power outage, then click the right button to display the figure below

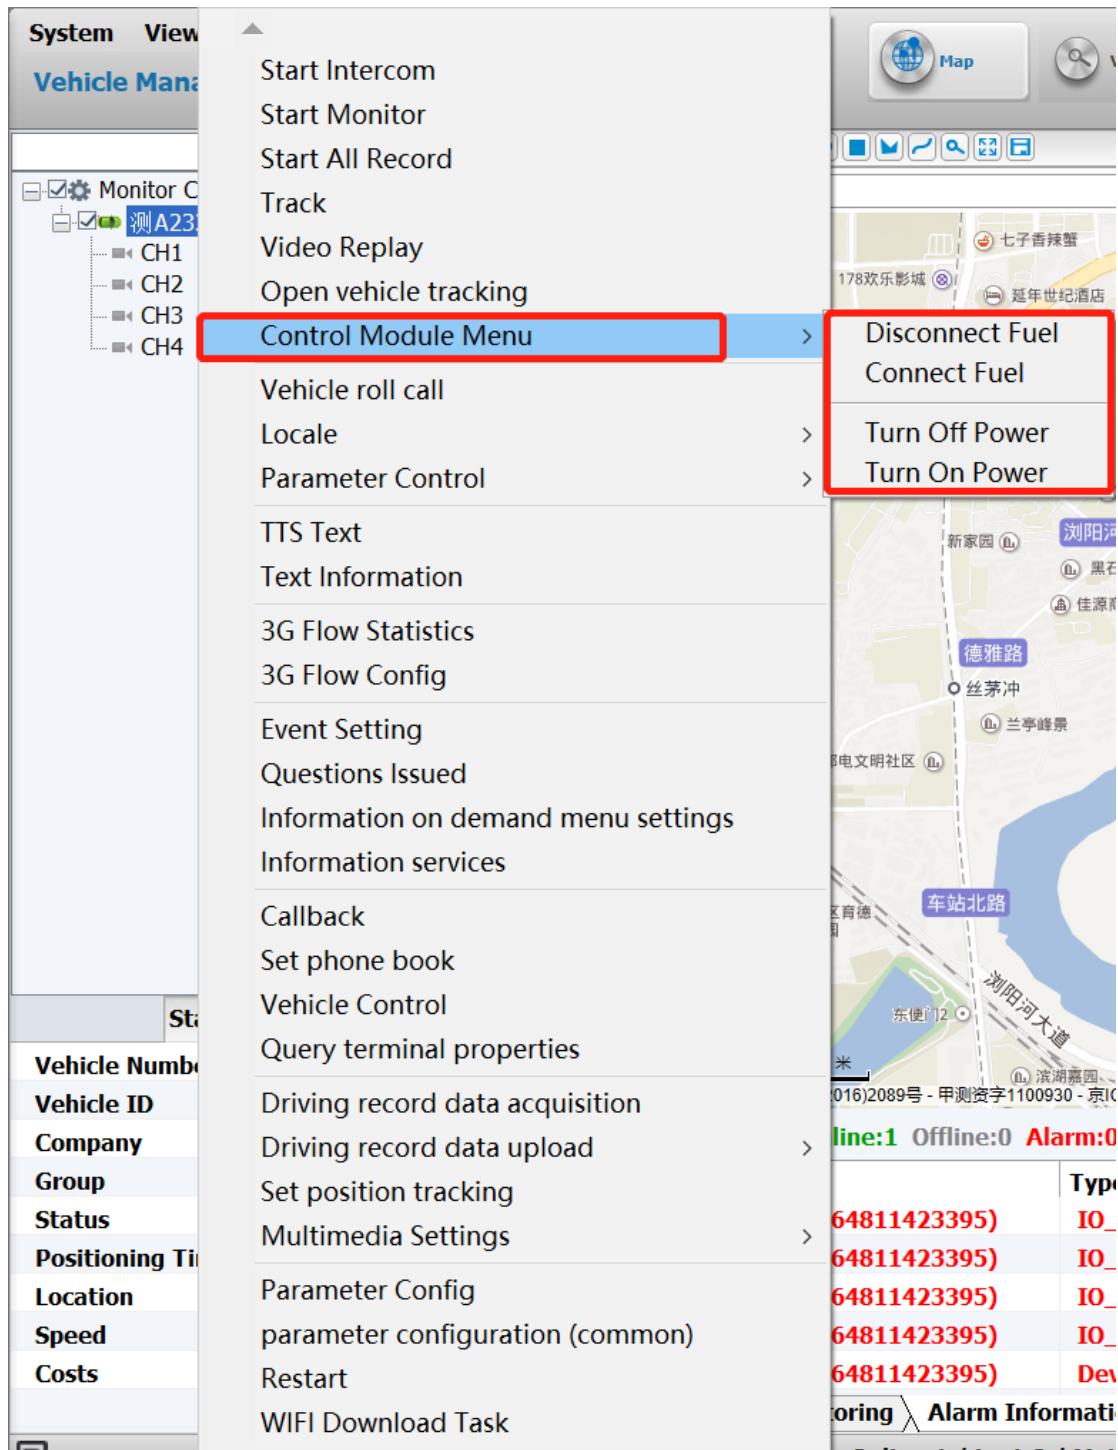

In operating the right button menu, displaying "cut off the oil", "restore the oil", "turn off the power", "turn on the power", then corresponding form will pop up. E.g., after clicking the "cut off the oil", following figure will come out

The screenshot shows a dialog box titled "Disconnect Fuel-测A23395(064811423395)". It contains a "Password" label, a text input field, and "(Login PWD)" text. Below the input field are "OK" and "Cancel" buttons.

Note: The password is for the client to log in. If the operation is successful or not, you can see the hint in the lower right-hand corner of PC.

## 5.14 Oil mass detection

This function is only available for clients who have docked with oil mass sensor

### 5.14.1 Configuration of oil mass

With the oil mass sensor function, the equipment can carry out the configuration of oil mass parameters and tick the peripheral module in the vehicle information.

The screenshot shows a software interface for editing vehicle information. The window title is "Edit Vehicle". It contains several input fields for vehicle details such as "Approved Number", "Engine Number", "Contacts", "Vehicle Departure Date", "Date of Annual Inspection", "Approved Cost (ton)", "Telephone", and "Vehicle Purchase Date". Below these fields is a "Vehicle Icon" selection area with various vehicle icons. The "Device Info" section includes fields for "Device No." (064811423395), "Terminal Type" (checked "Video Terminal"), "SIM No.", "Channel Param" (Number 4, CH1-CH4), "IO Input Param" (Number 0), and "Sensor Param" (Number 0). The "Peripheral Modules" section contains a grid of checkboxes for various features: "Support Video", "Support Talkback", "Support Monitor", "TTS (TTS voice playback)", "Fuel Sensor (Detecting vehicle fuel)", "Digital Intercom", "Fuel Line Controller (Off the fuel and the fuel recovery)", "Circuit Controller (Cutoff circuit and recovery circuit)", "OBD", "Traffic Statistics", "TPMS", "TaxiMeter", and "Water Level Sensor". The "Fuel Sensor (Detecting vehicle fuel)" checkbox is highlighted with a red box. "Save" and "Close" buttons are at the bottom.

Configuration operation of oil mass: Setting > oil mass sensor setting > select the amount of oil added to the vehicle corresponds to the resistance value> set alarm threshold




Alarm threshold setting: When the oil mass suddenly changes and is more than or less than the set threshold, the alarm will sound. At the same time, the alarm information will be also recorded in the statement.

Alarm Thresholds  Litre


Get device parameters successfully!

### 5.14.2 Statement of oil mass


Summary on oil mass, dynamic statement on oil mass, obvious abnormality statement on oil mass

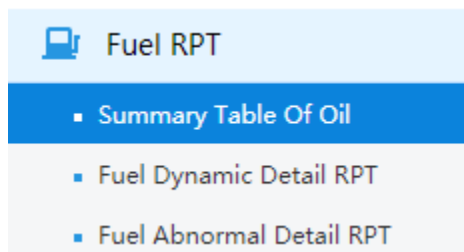


1. Summary on oil mass: Record the oil mass of vehicle upon startup and shutdown within a certain time, as well as the driven mileage and total oil consumption.

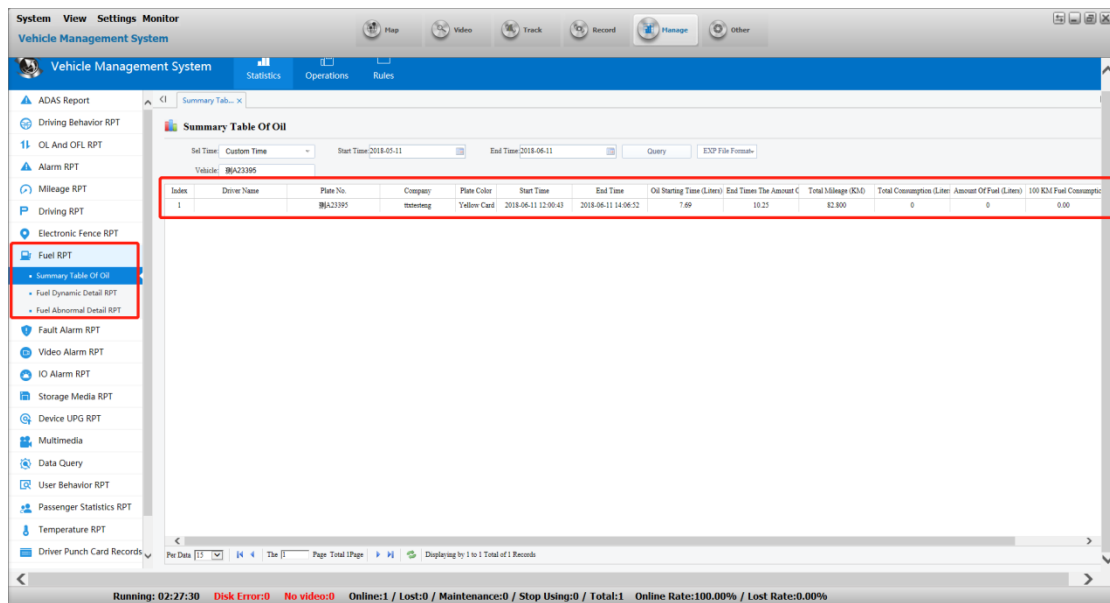

2. Dynamic statement on oil mass: Upload the value of oil mass along with the GPS in an isochronous real-time manner.

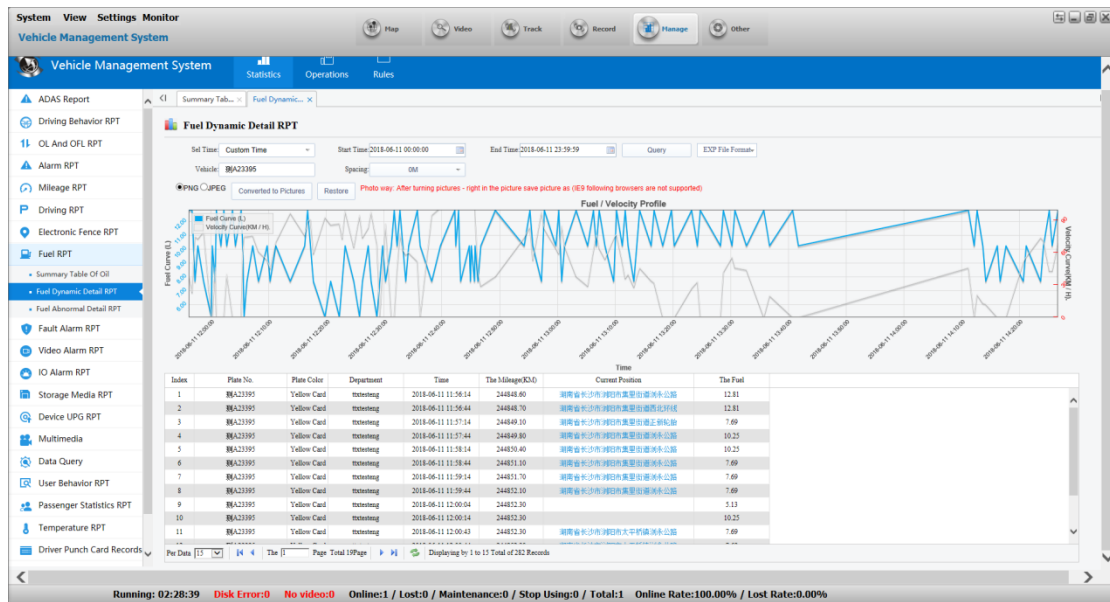


3. Obvious abnormality statement on oil mass: Once the alarm sounds, the record can be made in the statement. (The above value refers to the set alarm threshold)

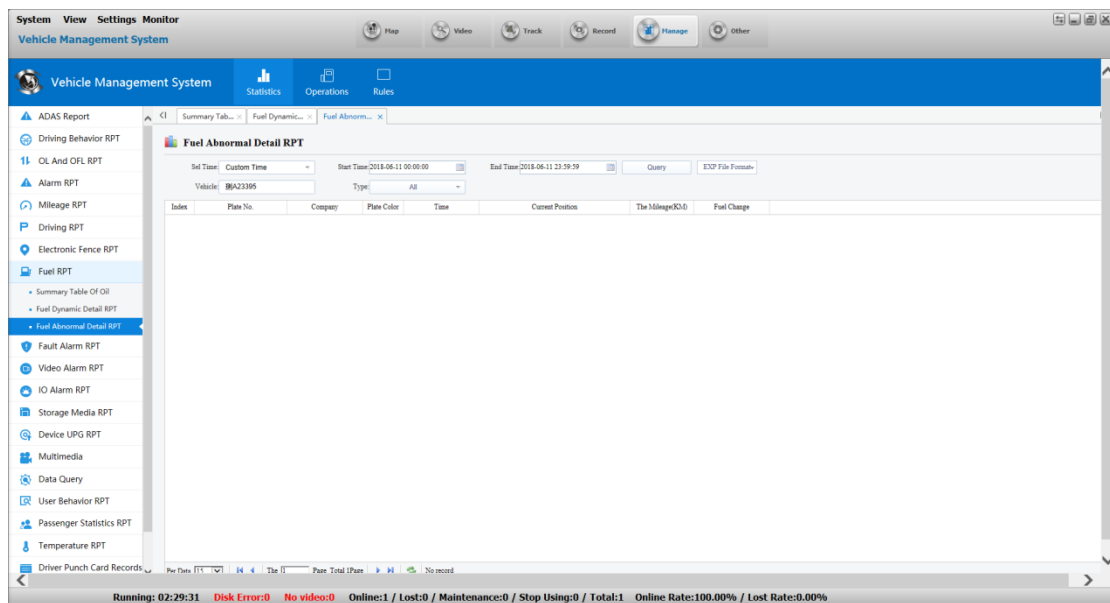

### Statistics time and oil mass change:

If the oil mass change exceeds the setting value of "oil mass change" in designated "statistics time", then the client will have oil mass alarm displayed.

### 5.14.3 Oil mass curve of client track

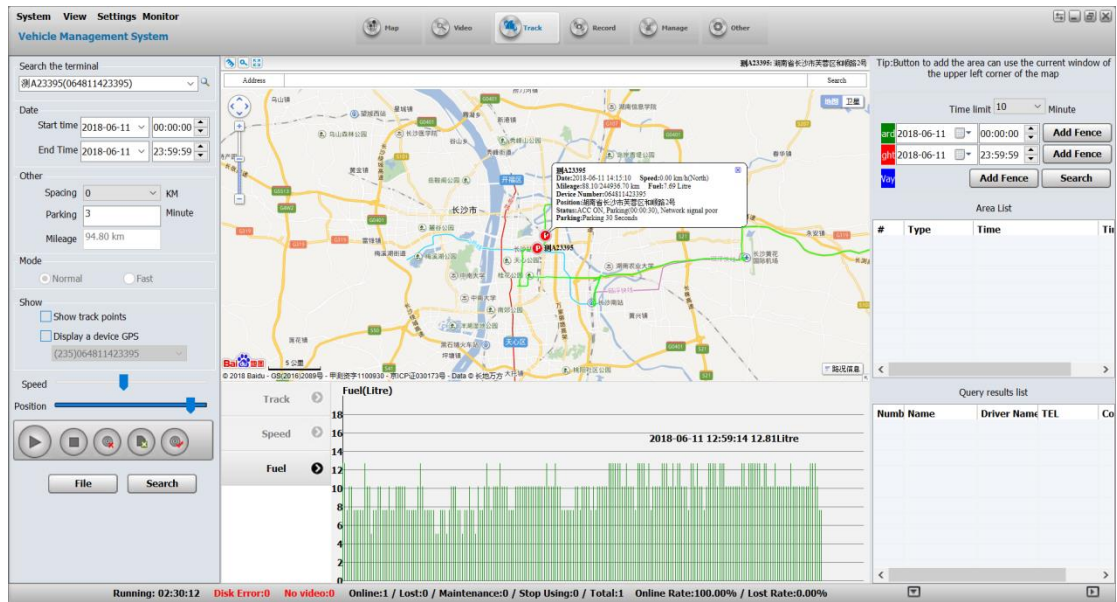


### 5.15 Cloud platform control



The focus video can be controlled through this control interface. For example, the equipment "Y GW1589" channel 2 is connected to the cloud platform. Then watches the channel 2 video of the equipment "Y GW1589" on the video window, the video window is in the selected status. At this time, operation cloud platform can control the channel.

**Automatic cruise:** Click the azimuth pointing arrow in the icon, to set the cloud platform to turn in the specified direction (This function requires the support of the equipment and the cloud

platform);



**Focal length:** Click the icon to zoom in or out the focal length of the video;





**Aperture:** Click the icon to zoom in or out aperture size of the video;

**Focus:** Click the icon to adjust focus size of the video through backwards or forward.



**Lighting:** Click the icon to turn on or turn off the lights of the video.



**Wiper:** Click the icon to turn on or turn off the lights of the wiper.



**Call / setting / delete:** These operations are for preset point, with up to 64 points in the interface.

**Preset point setting rules:**

1. Set every preset point on different automatic cruise lines separately, then call each of the preset points respectively to confirm whether the settings are done.
2. Find automatic cruise instructions in the brochure of the cloud platform

Generally, the automatic cruise instruction of cloud platform is 98 or 95. Of course, each manufacturer produces different instructions of the cloud platform. When the instructions are found, you can operate it.

## 5.16 Network flow statistics

### 5.16.1 Configuration of network flow

Select an equipment, press the right button, click “configuration of network flow”, and display the configuration of network flow interface as shown in the figure

3G Flow Config - 测A23395(064811423395)

Data Plan Counter

Today 0.00 MB

Remaining 0.00 MB

Remaining 19 Day

Total Used 0.00 MB

3G Flow Config

Data Counter: Close

Bill Date 0 Th

Monthly Data Plan 0 MB

Daily Limit 0 MB

Flow Limit Alert

Open

Daily Limit 0 %

Open

Month flow remind 0 %

Obtain device 3G information successfully!

Save Refresh Exit


Firstly, you need open traffic monitoring, and then conduct relevant parameters configuration.

### 5.16.2 Network flow statistics

- Check traffic statistics of each equipment.


Select an equipment, press the right button, click “statistics of network flow”, and display the statistics of network flow interface as shown in the figure



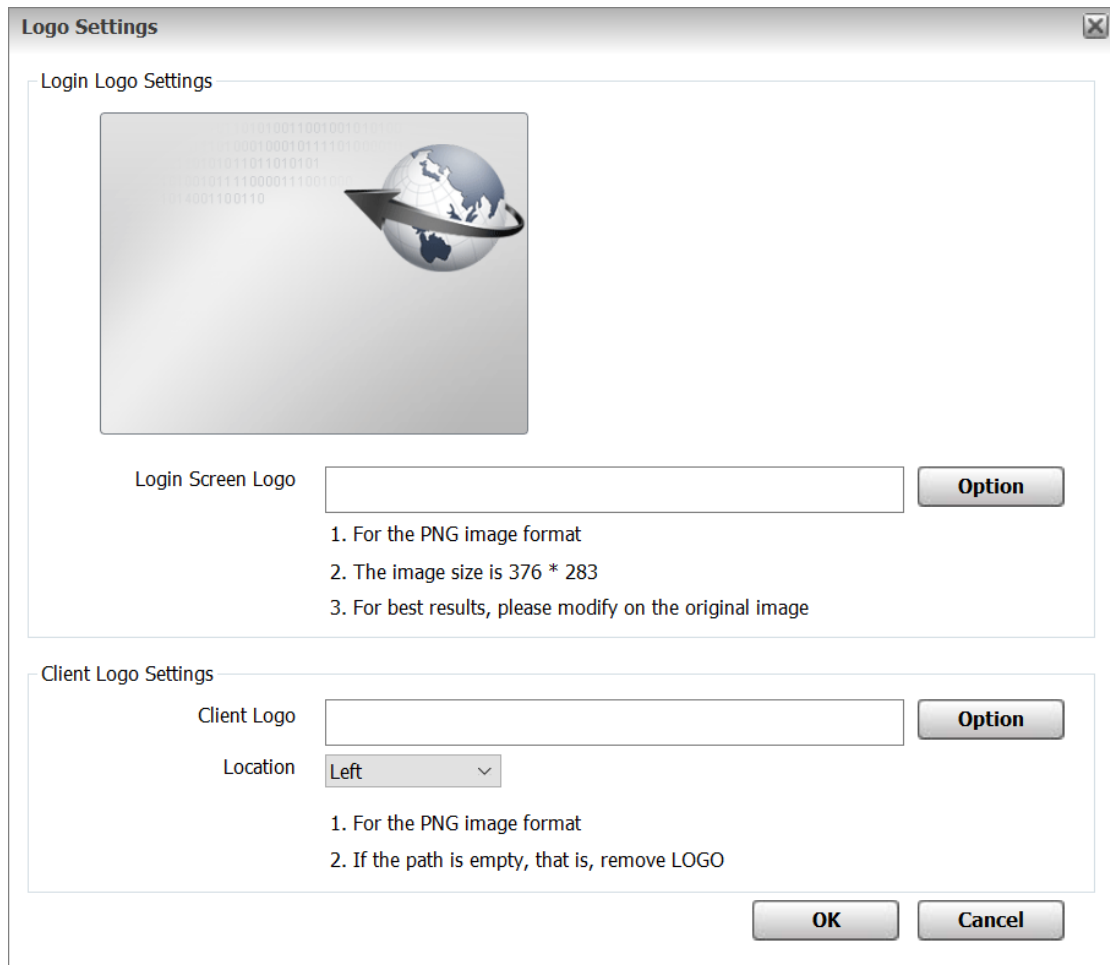


## 5.18 System setting

### 5.18.1 The city where the vehicle is displayed

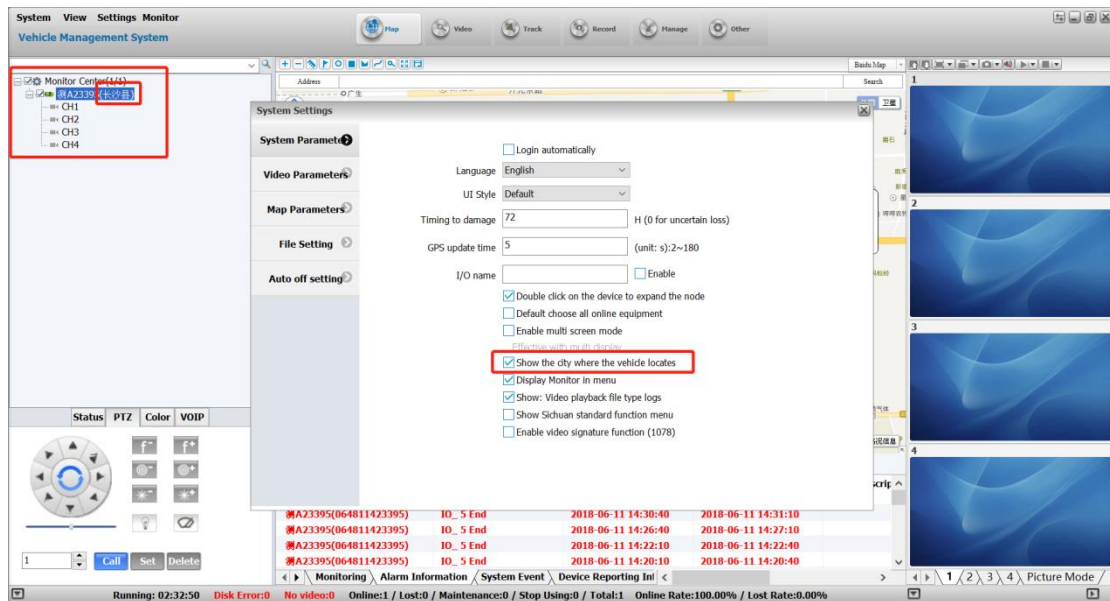

## 5.18.2 Update time of system GSP

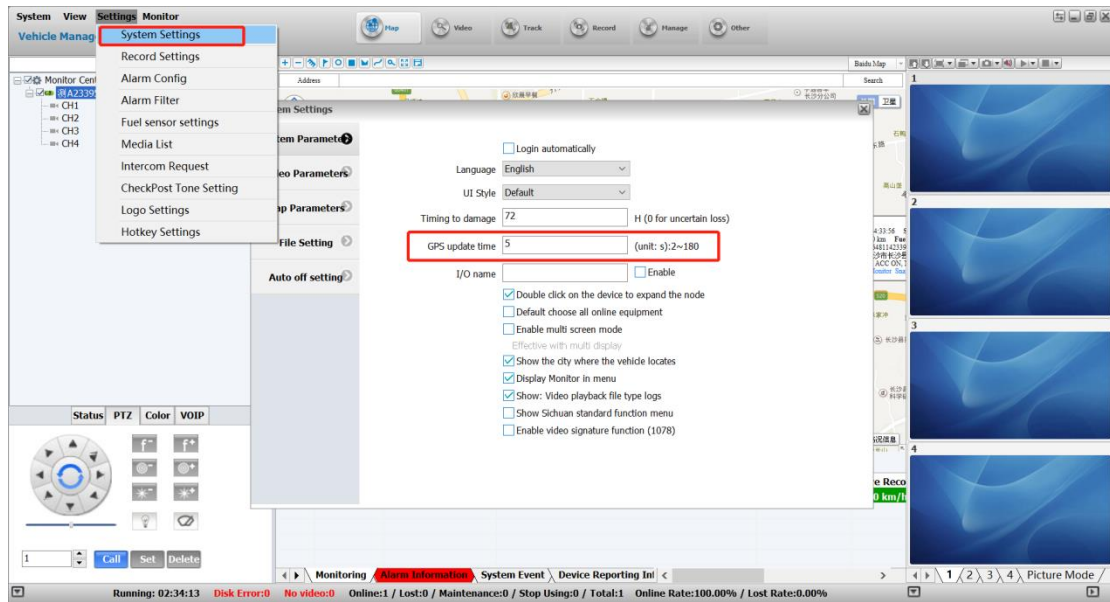


## 5.19 Electronic fence

### 5.19.1 Regional configuration by client


(See operation in Chapter 5.3.2)

### 5.19.2 Configuration of electronic fence alarm.

Information management > Rule management > Entry prohibition rules, exit prohibition rules, regional speed limits, configuration of electronic fence alarm.

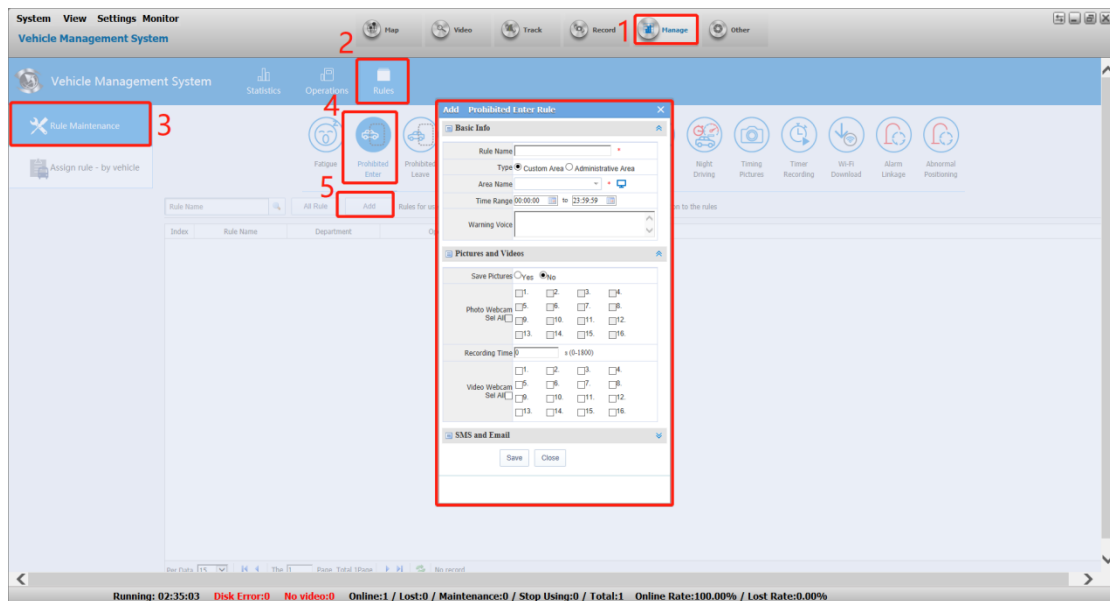


The region name can be drawn a region on the map with the reference to Section 5.18.2, or it can be drawn under the management of rules management, as the figure below

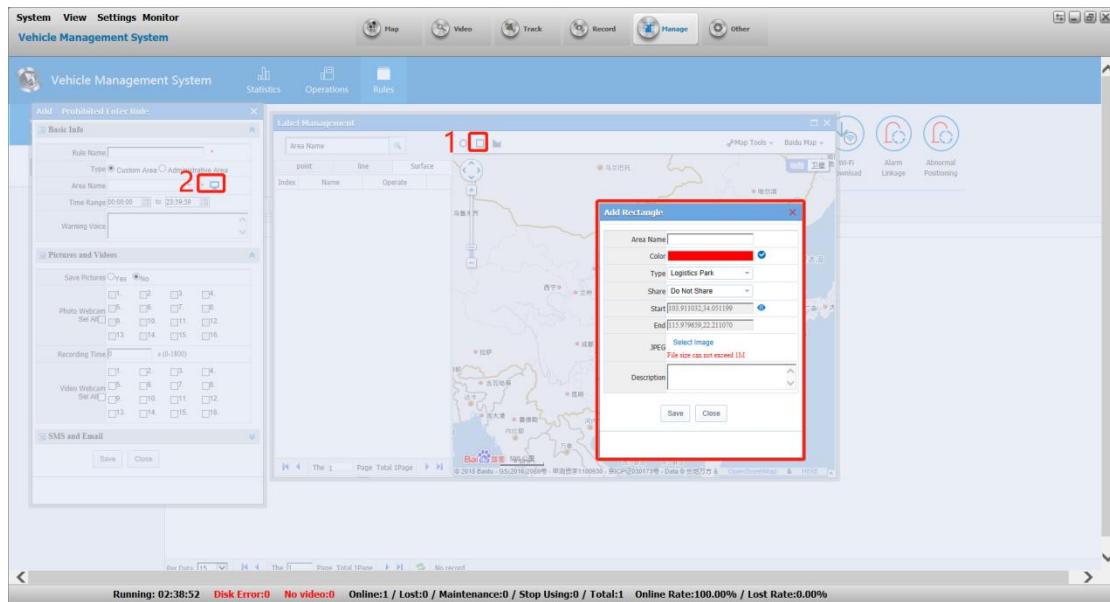

### 5.19.3 Distribution rules

The vehicles of entry prohibition are distributed below the rules

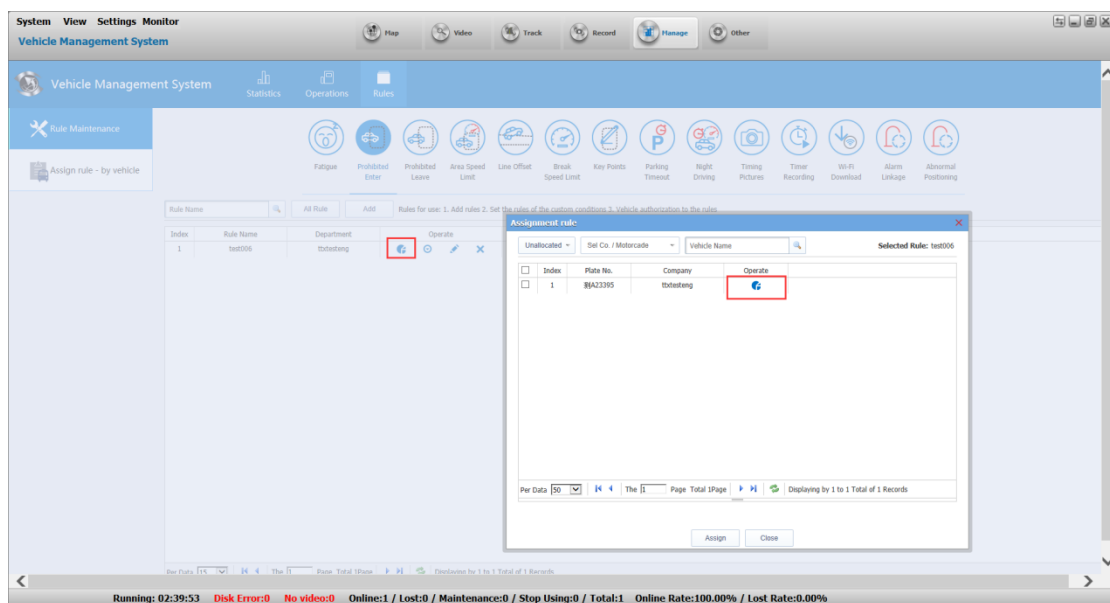


After the completion of configuration, when the vehicle generates an alarm, the client will have the corresponding alarm information displayed.

If the TTS voice prompt is configured for over speed or low speed, the TTS voice will be sent to the equipment automatically after the alarm

### 5.19.4 Statement of electronic fence

Click "information management", and then click the "statistics report", to open the electronic fence report, and check the report according to conditions

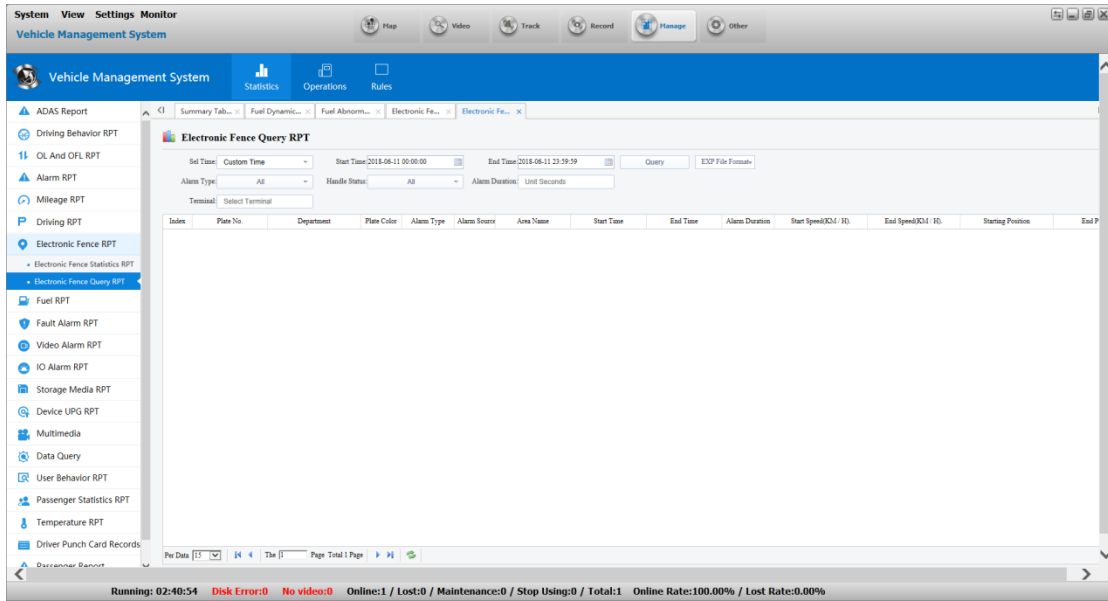


## 5.20 Line offset rule and segmented speed limit rule

### 5.20.1 Drawing the line


The lines drawn on the electronic map or tracks that the vehicle has passed on playback tracks are taken as the line and draw the lines again in accordance with the management stated in 5.17.2

It is recommended to use the playback for selecting line, the operation is as follows:

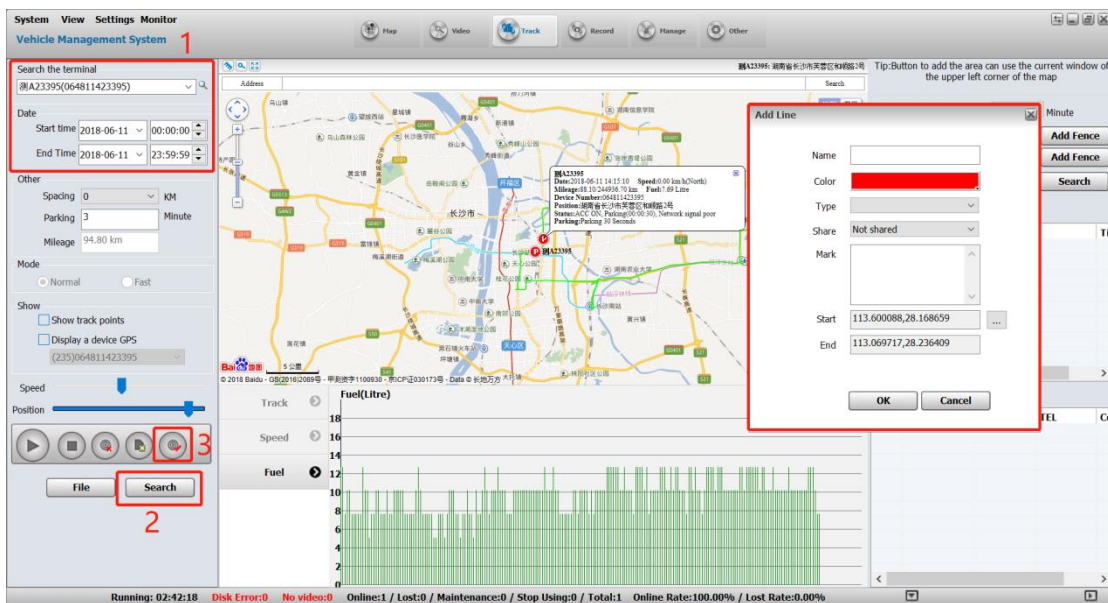


### 5.20.2 Configuration of electronic fence alarm on the line

Information management > Rule management > Line deviation, segmented speed limit, configuration of electronic fence alarm.

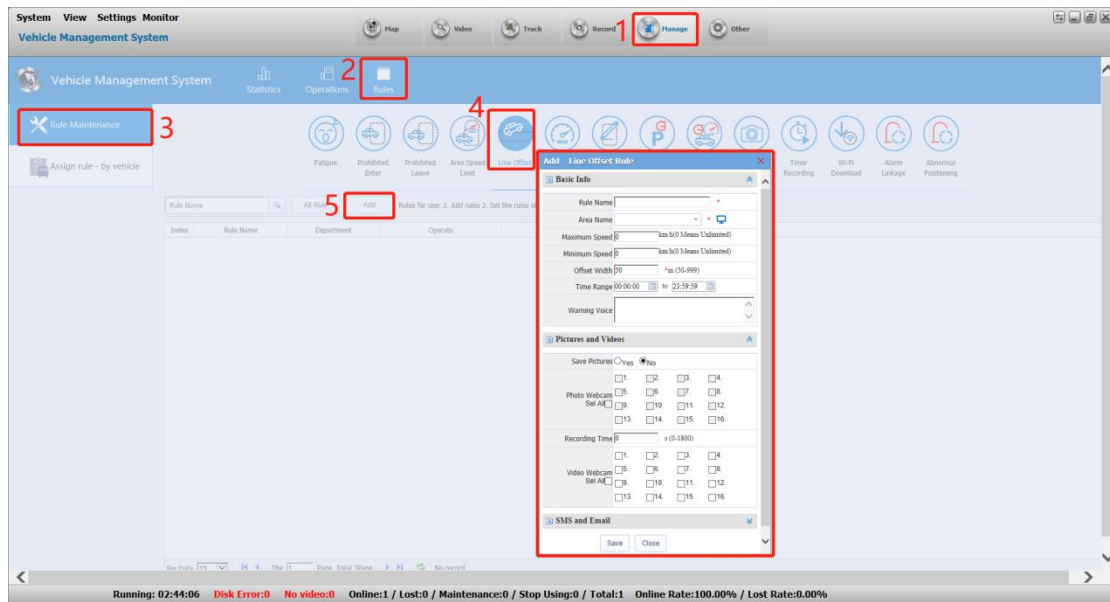

### 5.20.3 Distribution rule


The vehicles of entry prohibition are distributed below the rules

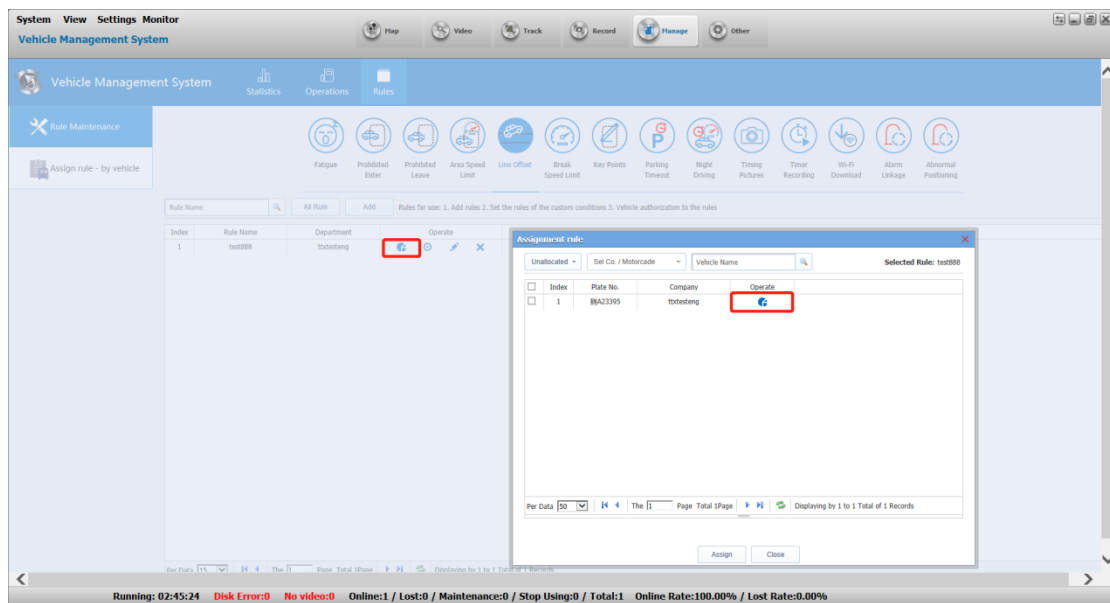

After the completion of configuration, when the vehicle generates an alarm, the client will have the corresponding alarm information displayed. If the TTS voice prompt is configured for over speed or low speed, the TTS voice will be sent to the equipment automatically after the alarm

### 5.20.4 Statement of electronic fence

**Click "information management", and then click the "statistics report", to open the electronic fence report, and check the report according to conditions**

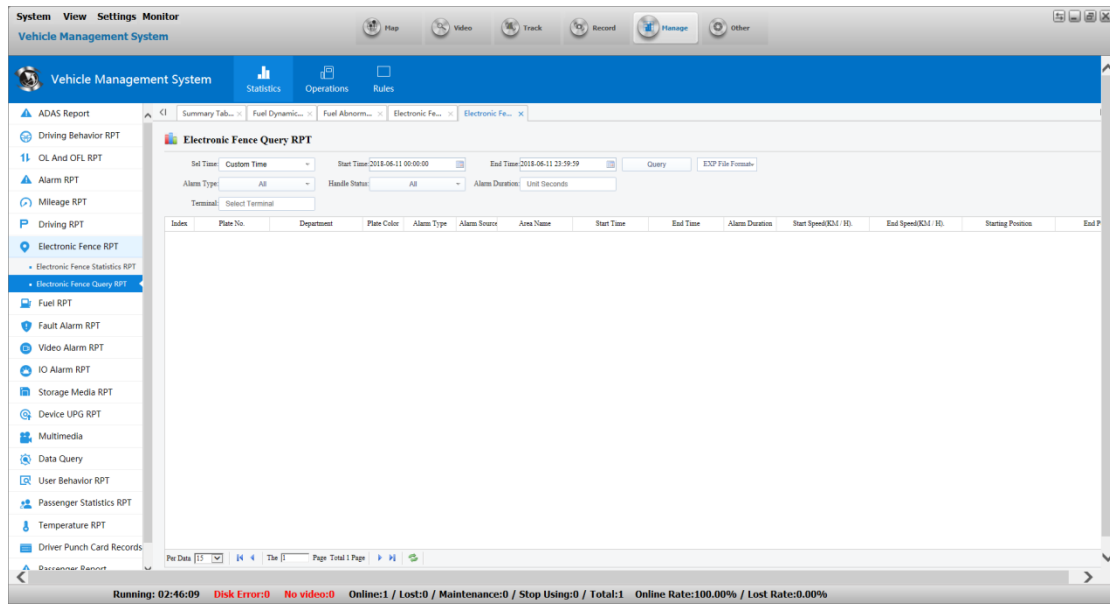


## 5.21 Common problems and solution

**Problem 1:** After the equipment is reported, the user can see the equipment online, but cannot see the video of the equipment


### Solution

1. Confirm the normal work of the streaming media server in the CMSV6 system
2. If the streaming media is normal operation, check whether the port (6602) used in the streaming media server has done port mapping

Detection method: Enter "cmd" command in operation, and click the "confirm" button.

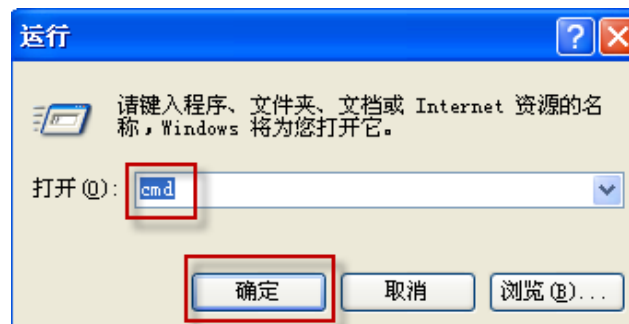

After operation, the operation interface displayed is as below

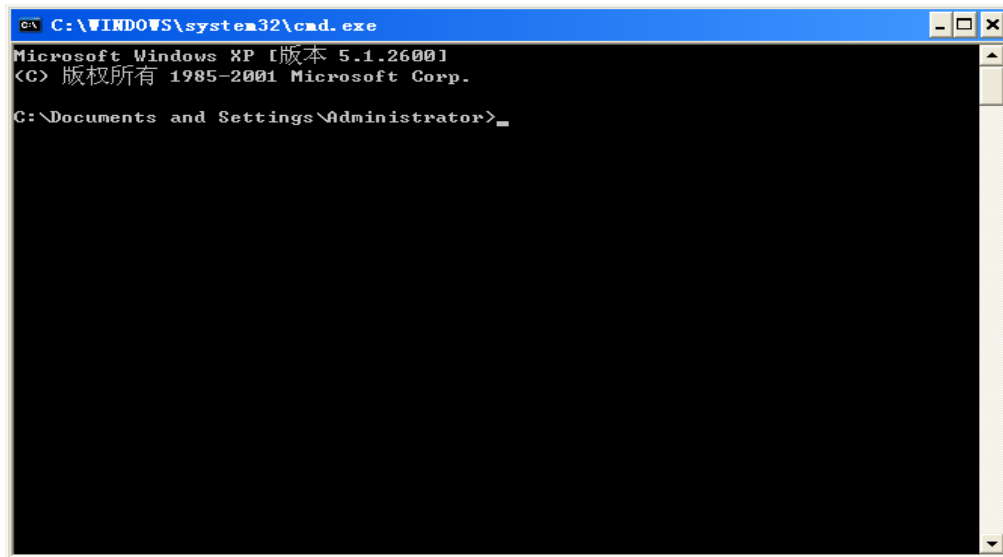

At this time, enter "telnet 183.16.188.23 6602". 183.16.188.23 is the public network IP used to install the CMS server, and 6602 is the port number.

If the port is opened, the interface appears as shown in Figure 1 below. If the port is not opened, the interface appears as shown in Figure 2 below.

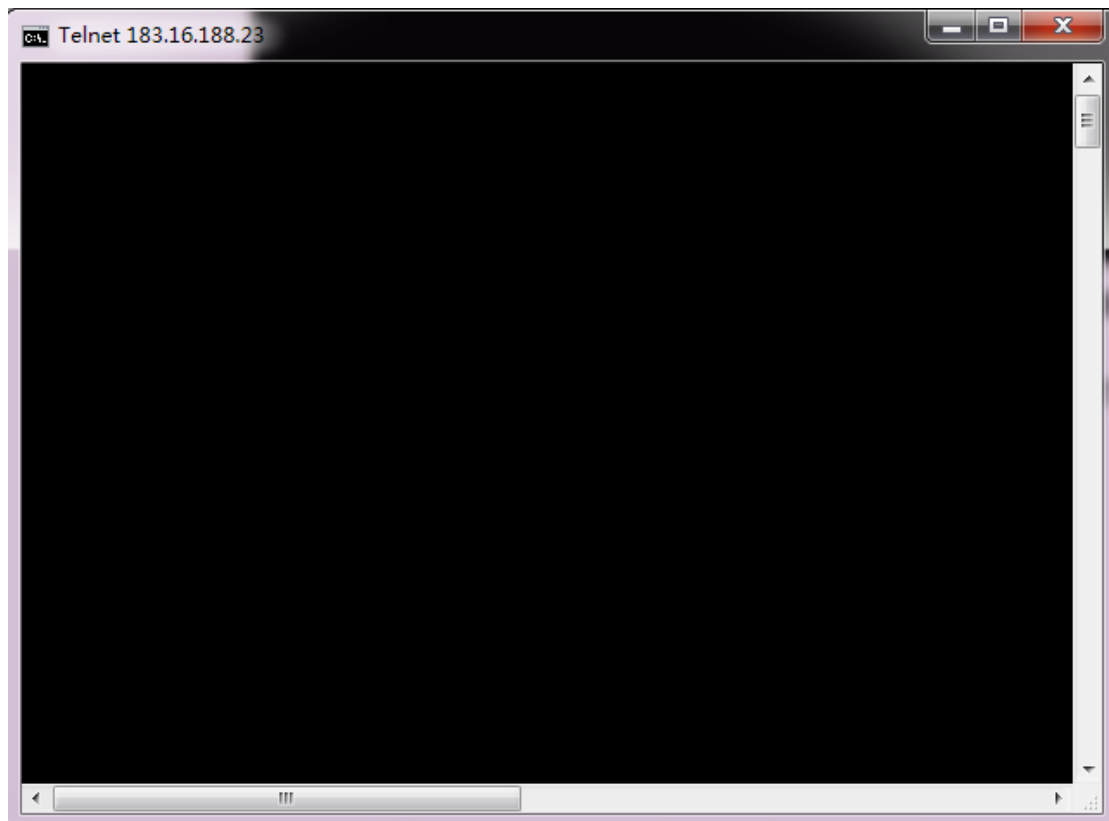


Figure 1 Port mapping has been done

Port mapping has not been done

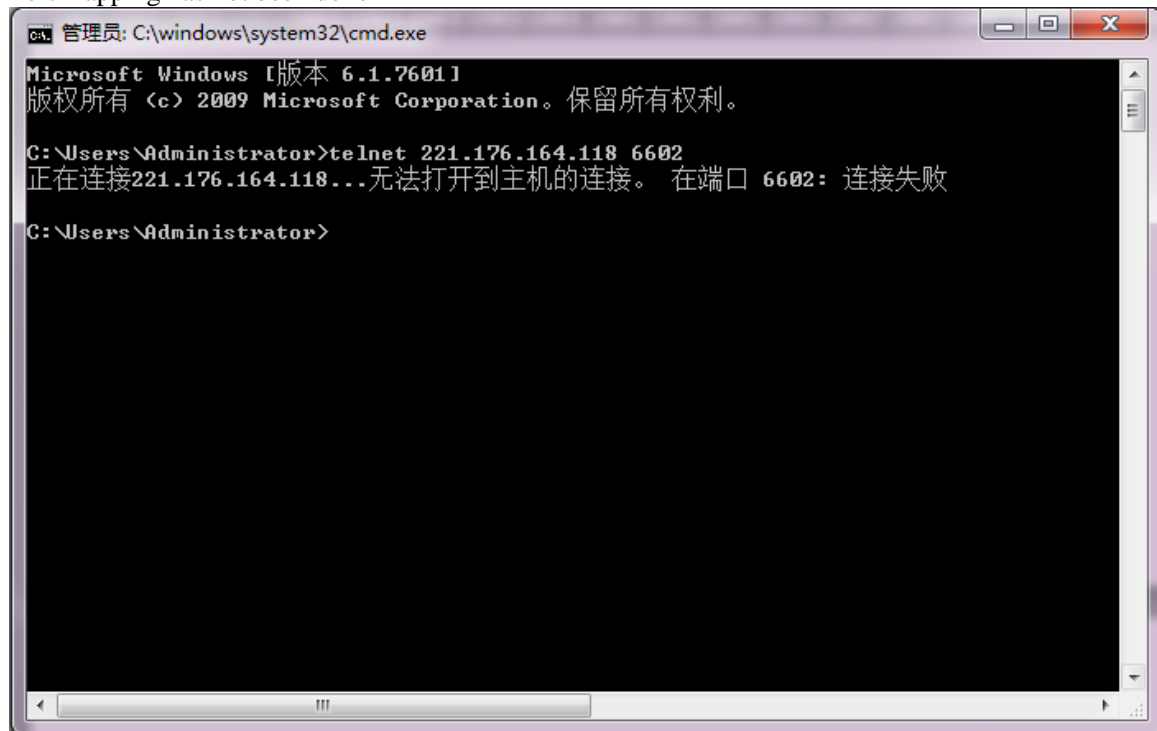


Figure 2 Port mapping has not been done

If there is no port mapping, enter the router and make TCP mapping on the port, then the client can see the video

**Problem 2:** Failed to obtain the equipment information and equipment parameter information

**Reason:**

Usually there are three reasons for failure in obtaining equipment information or equipment parameter information on the client:

1. The network connection between the equipment and the CMSV6 server suddenly broke down;
2. The net speed of the equipment is poor;

**Solution:**

1. Check the network connection status between the equipment and CMSV6 server. When the connection suddenly broke down, the equipment seen on the client is still in the online status, and it will take about 3 minutes before the client device goes offline;
2. Due to poor network speed, when you do not get information for a long time, there will be a hint of failure to get information. Close the window and try again;

**Problem 3:** Null cloud platform automatic cruise


**Reason:**

Null cloud platform automatic cruise usually relates to the equipment.

**Solution:**


1. The cloud platform does not support the automatic cruise function;
2. The equipment does not support the automatic cruise function of the cloud platform;
3. The automatic cruise function is not opened;

**Problem 4:** Both the snapshot and video plans have been configured, but the list of client search file is empty

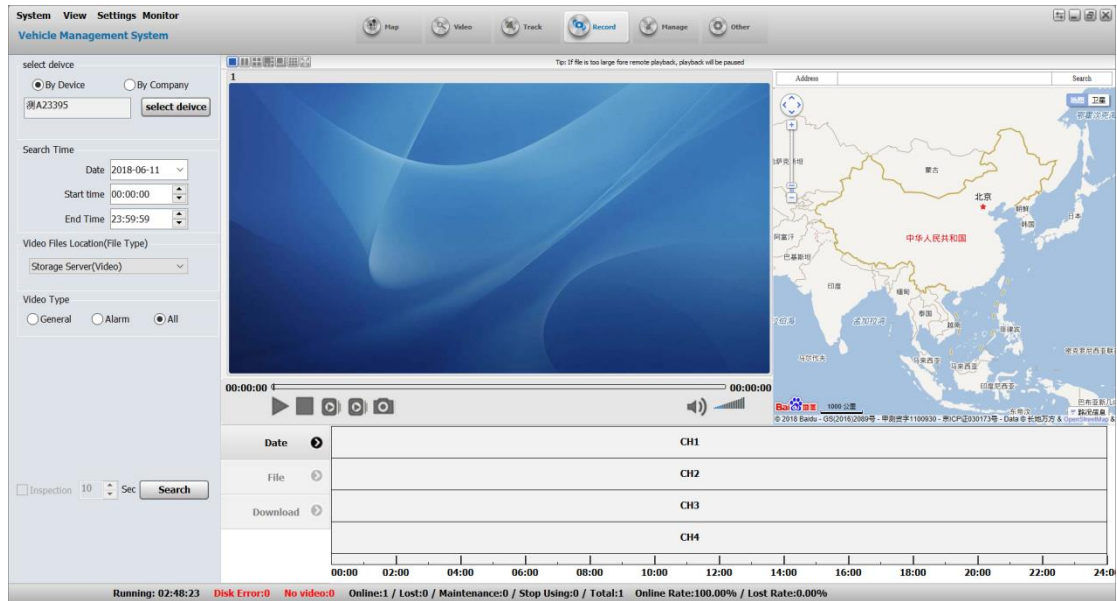

### Methods:

1. Test whether the port used by storage server (6611 6612) is open. If it is not open, you need to enter the router to open the two ports.
  - a. Start menu - enter cmd in operation, enter telnet 124.228.174.201 6612. In the following figure, the port is not open

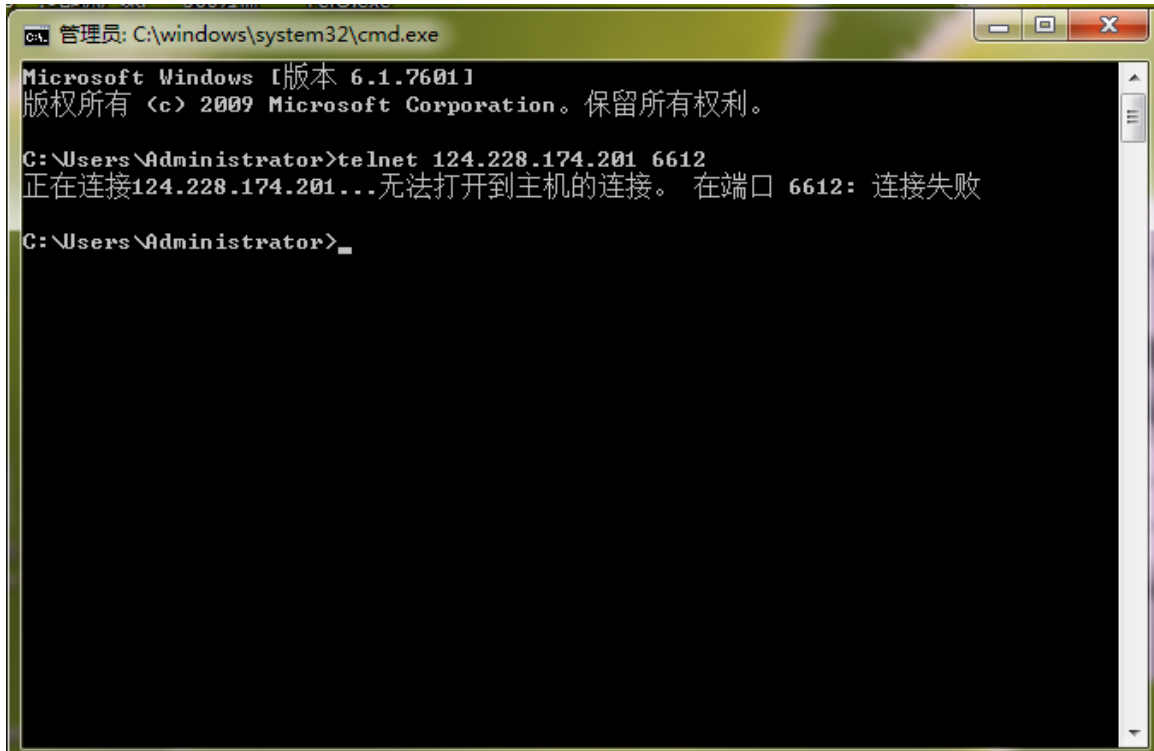


```
管理员: C:\windows\system32\cmd.exe
Microsoft Windows [版本 6.1.7601]
版权所有 (c) 2009 Microsoft Corporation。保留所有权利。

C:\Users\Administrator>telnet 124.228.174.201 6612
正在连接124.228.174.201...无法打开到主机的连接。 在端口 6612: 连接失败


C:\Users\Administrator>
```

b. Start menu - enter cmd in operation, enter telnet 121.197.0.50 6612. In the following figure, the port is open

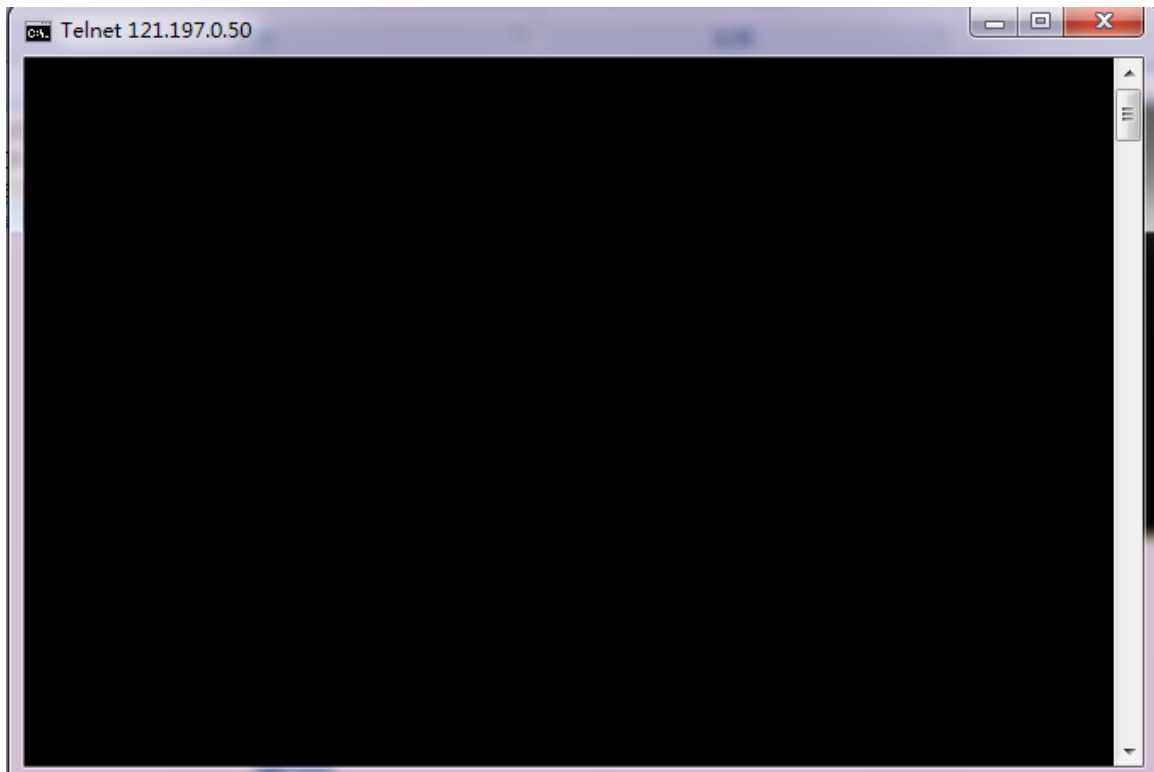

```
Telnet 121.197.0.50
```

2. If the port is open, you need to enter the web backstage to check whether the IP of the storage server and port configuration are correct

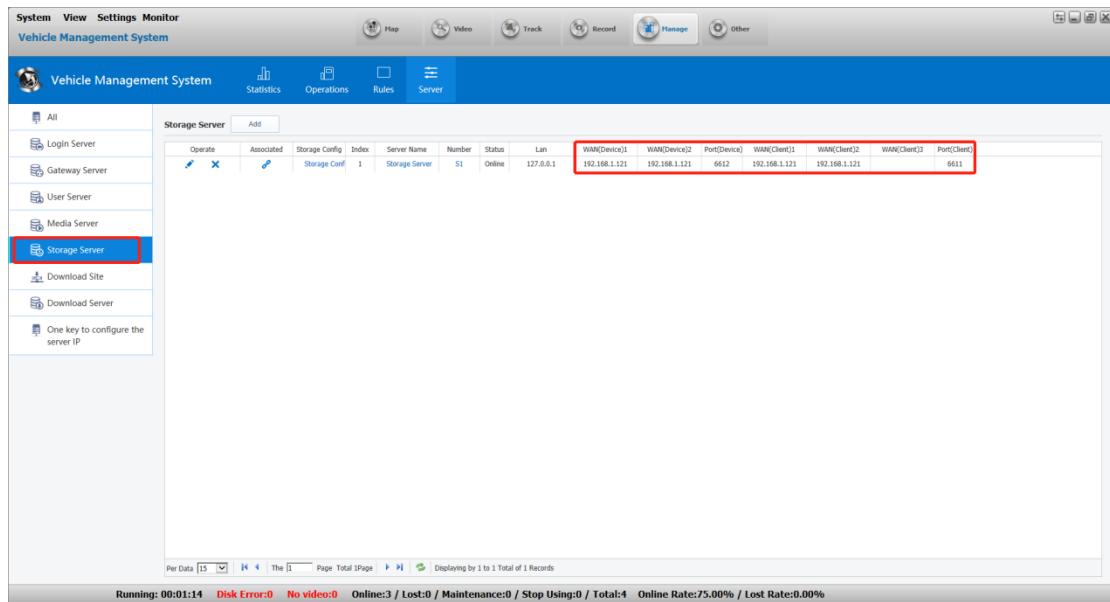

**Problem 5:** Failure to download video file from the storage server?

### Methods:

The first situation: The video files are packing

The first situation: The web backstage checks whether the IP of the storage server and port configuration are incorrect, then checks whether the port of the storage server can be connected (See specific operations in problem 4)

## VI. Direction for use of mobile phone client

### 6.1 Android Mobile client-side

#### 6.1.1 Login interface

Fill in the username and the password. The IP and web login IP are the same (For example: 192.168.1.106: 8080) (If the mobile client's version is before December 2015 and before the server version 7.6, the port shall be added. And vice versa, directly fill in the IP address)

Vehicle Management System

Home API English Sky Blue Download

### 3G/4G Real-time Video At Any Time To See

Support PC Computers, Mobile Terminals View

Welcome

Username

Please Enter Your Password

Code

Login

**Windows Version**

Version: 7.12.0.4  
Update: 20180530

Download

**iOS Version**

Version: 7.0.12  
Update: 20170418

Download

**Android Version**

Version: 7.0.0.19  
Update: 20180524

Download

**Playback**

Version: 7.12.0.4  
Update: 20180511

Download

**MapInfo Plug-in**

Version: 3.0  
Update: 20140815

Download

Copyright (C) 2015. All right reserved.

4:58 PM

IP

Login


Find

## 6.1.2 Map monitoring

Vehicle list, vehicle map monitoring real-time location, vehicle real-time status information, set GPS refresh time.



Select the vehicle to search in the vehicle list

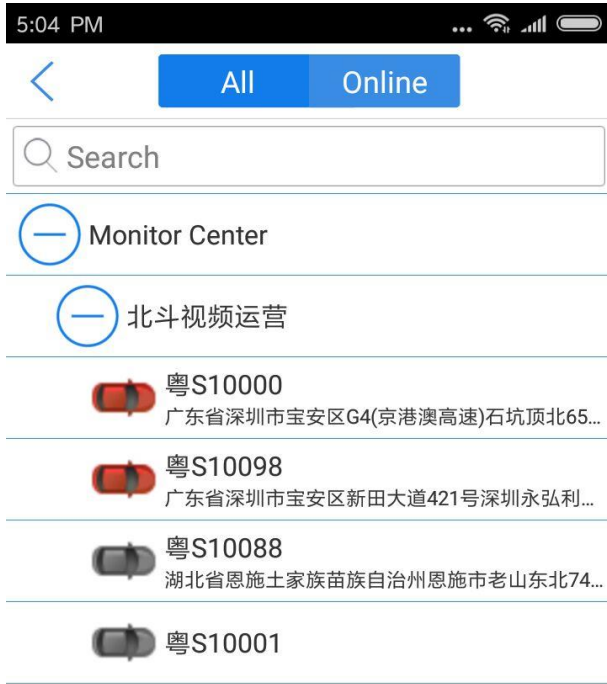

## Vehicle real-time status information

5:06 PM



粤S10000

**IDNO.:**10000

**Time:**2018-06-11 17:05:34

**Mileage:**10678.525KM/H

**Speed:**108.0 km/h (Southeast)


**Driver:**

**Alarm:**Overspeed

**Status:**ACC On,GPS Module Normal,Disk  
1Normal,Disk 2Normal,Net Signal  
Good,VidioLost,VidioShelter,No  
Load,Operation,Latitude And  
Longitude is Unencrypted,The oil line  
is normal,The circuit is normal,Door is  
Unlocked,GPS Position

**Address:**广东省深圳市宝安区G4(京港澳高速)  
崎龙学校西183米

Set GPS refresh time

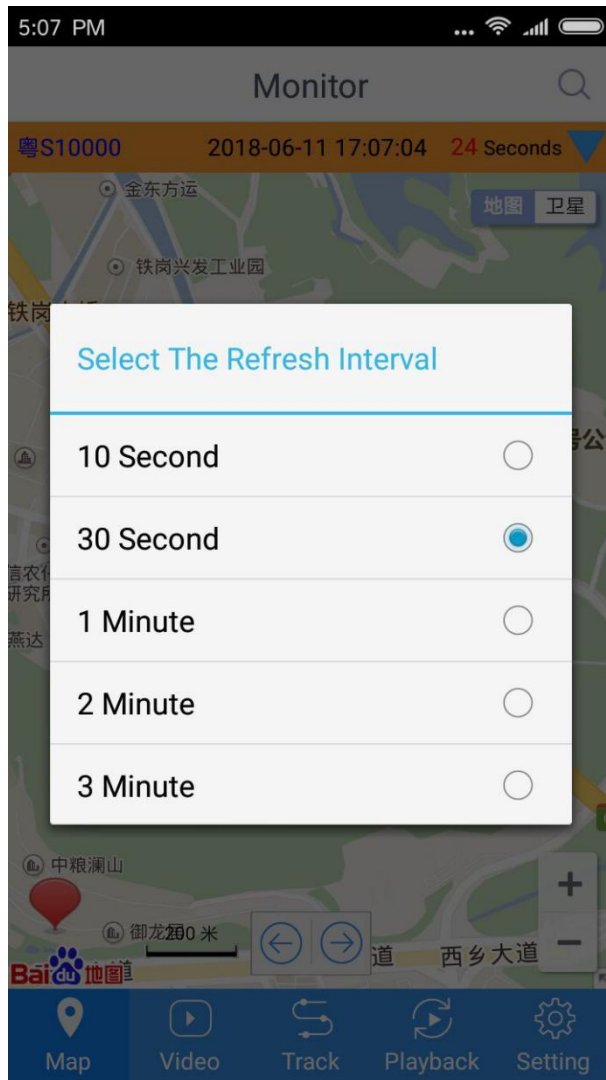

### 6.1.3 Video preview

Video preview also requires selection of vehicles in the vehicle list

5:08 PM



粤S10000



CH1 60KB/S	CH2 60KB/S
CH3 60KB/S	CH4 52KB/S

PTZ [Red Stop] [Square] [Camera] [Speaker] [Microphone] [Crop]

Map Video Track Playback Setting

### 6.1.4 Track playback





## Search Trajectory

Select 粵S10000 >


Select Date 2018-06-11

Start Time 13:09:17


End Time 17:09:17

Search

## 6.1.5 Video replay

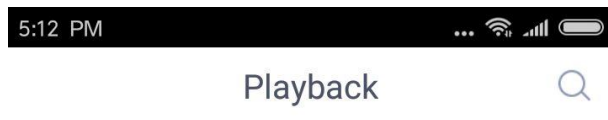

Please click on the search button

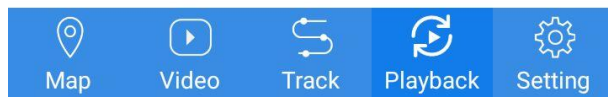 

< Search Record

Select 粵S10000 >

Location Terminal >

Channel All Channel >

Type All File >

 

Select Date 2018-06-11

Start Time 00:00:00

End Time 23:59:59

Search


Select the file that need to be playback to playback

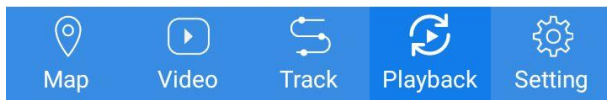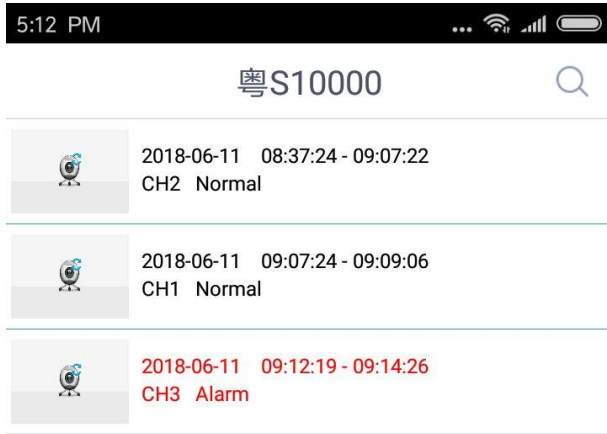

Video playback




## 6.1.6 System setting

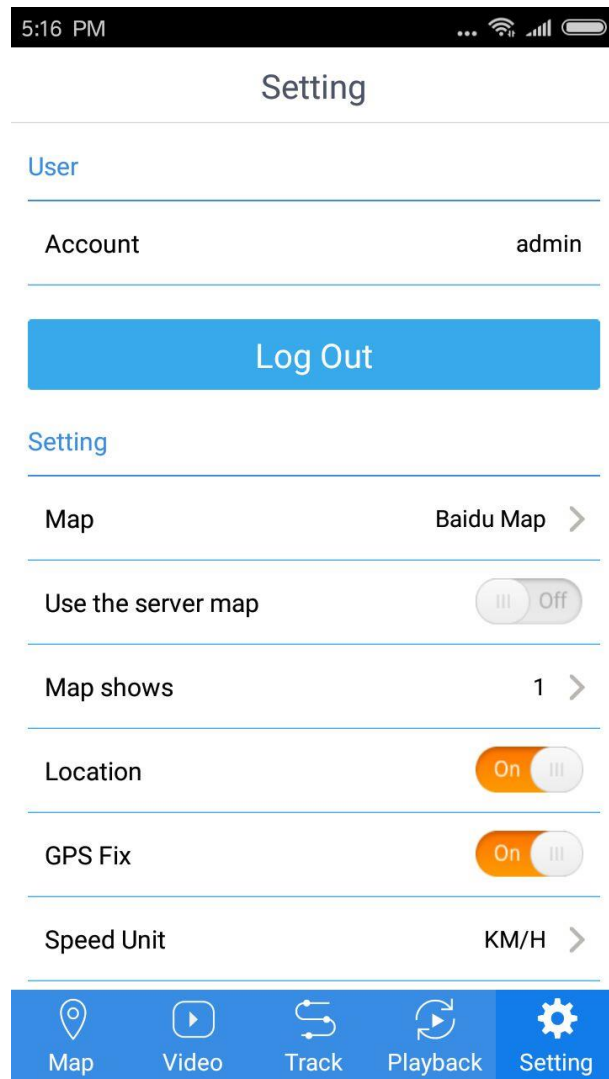


## 6.2 IOS Mobile client-side


### 6.2.1 Login interface

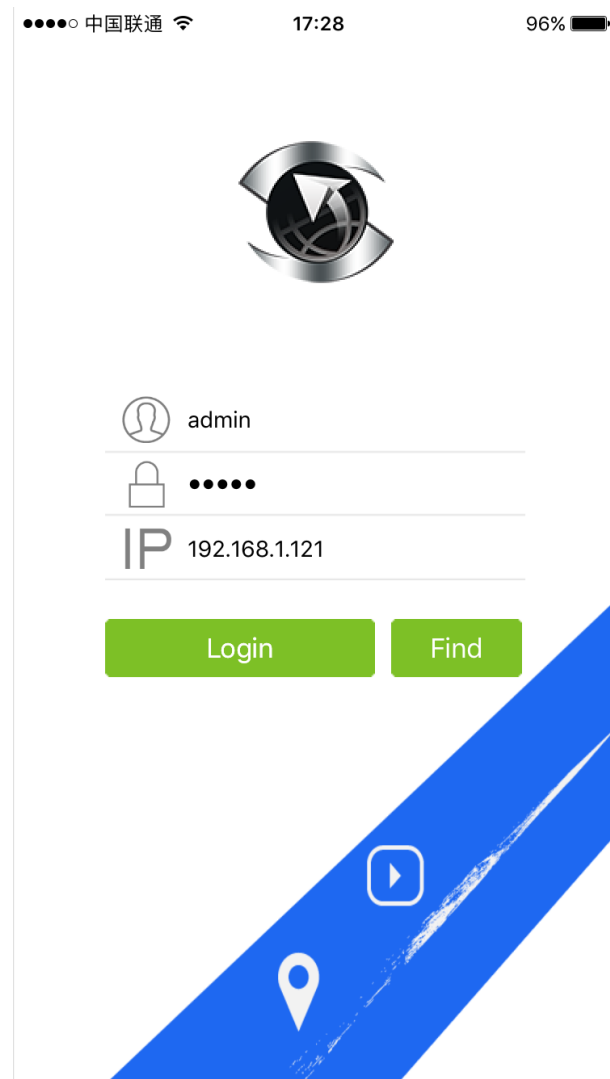


## 6.2.2 Vehicle terminal

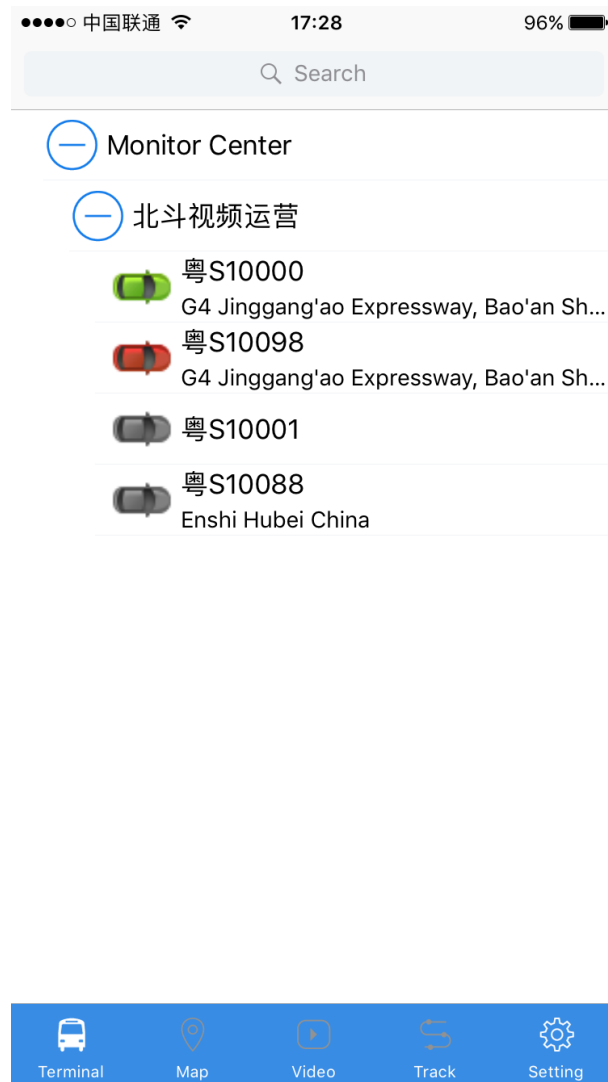


### 6.2.3 Selecting monitoring interface of vehicle skipping

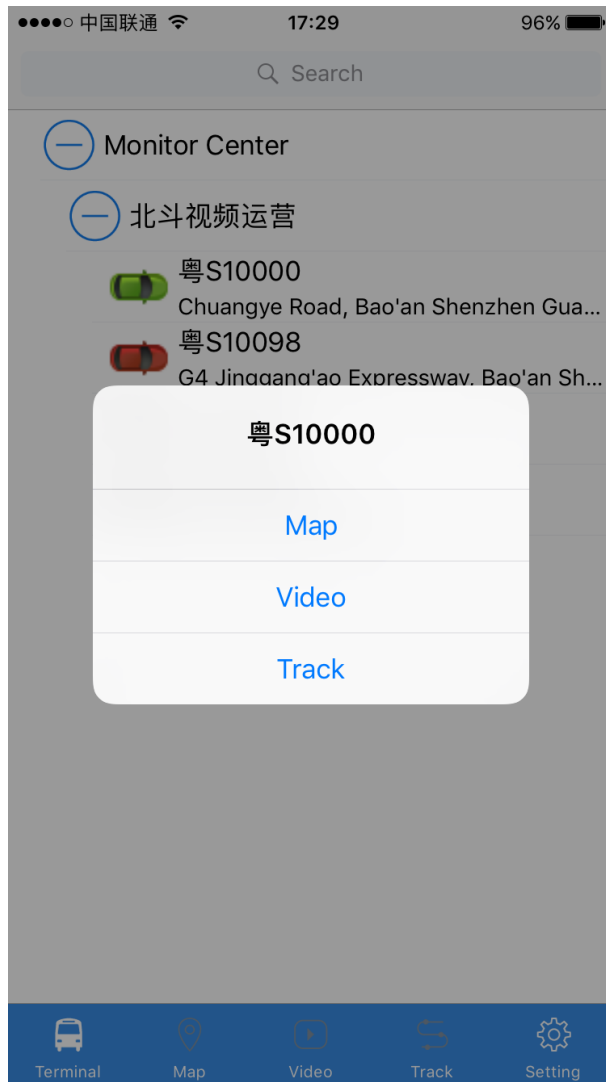


You can also search the vehicle for monitoring on the monitoring interface

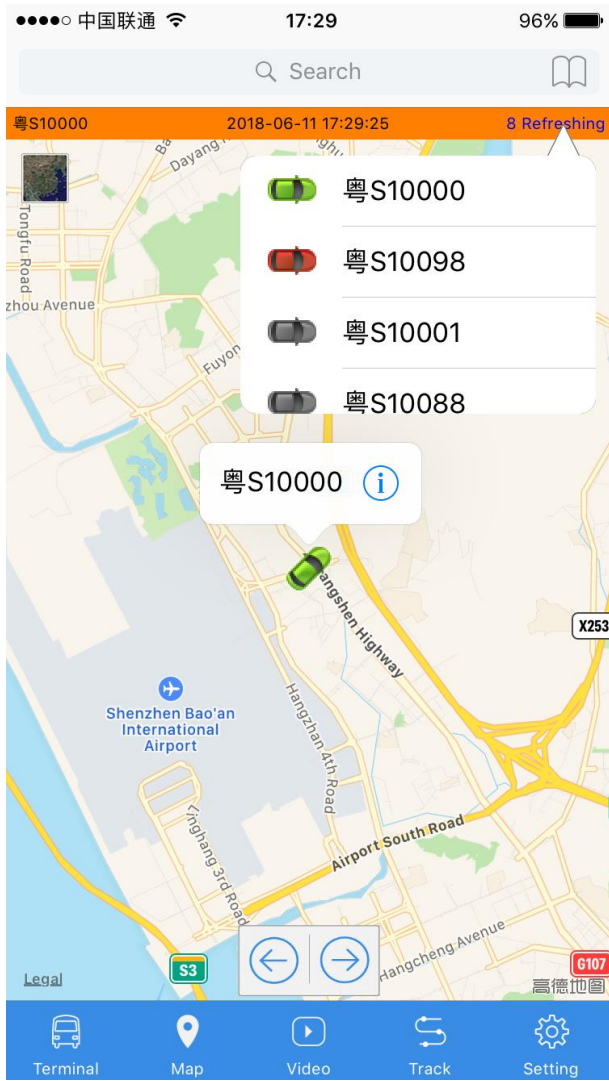


## 6.2.4 Map monitoring

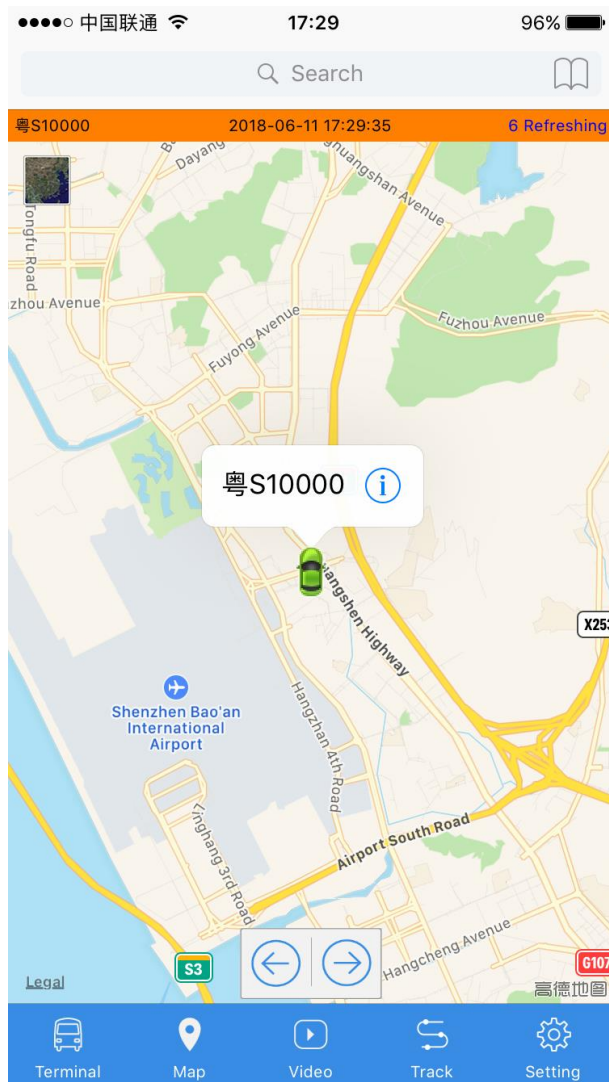

## 6.2.5 Video monitoring

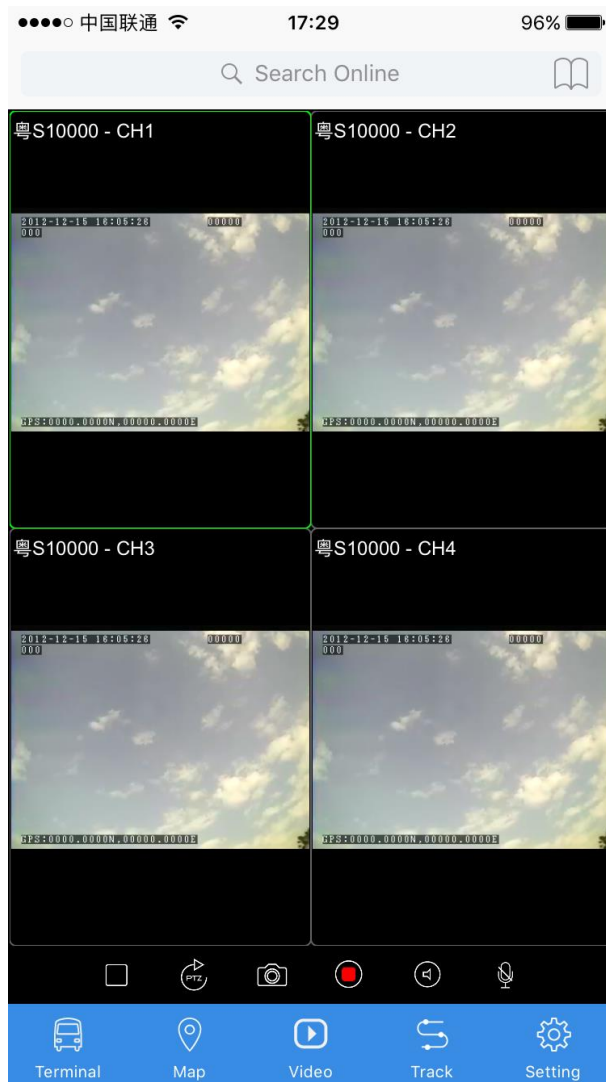

## 6.2.6 Trajectory monitoring

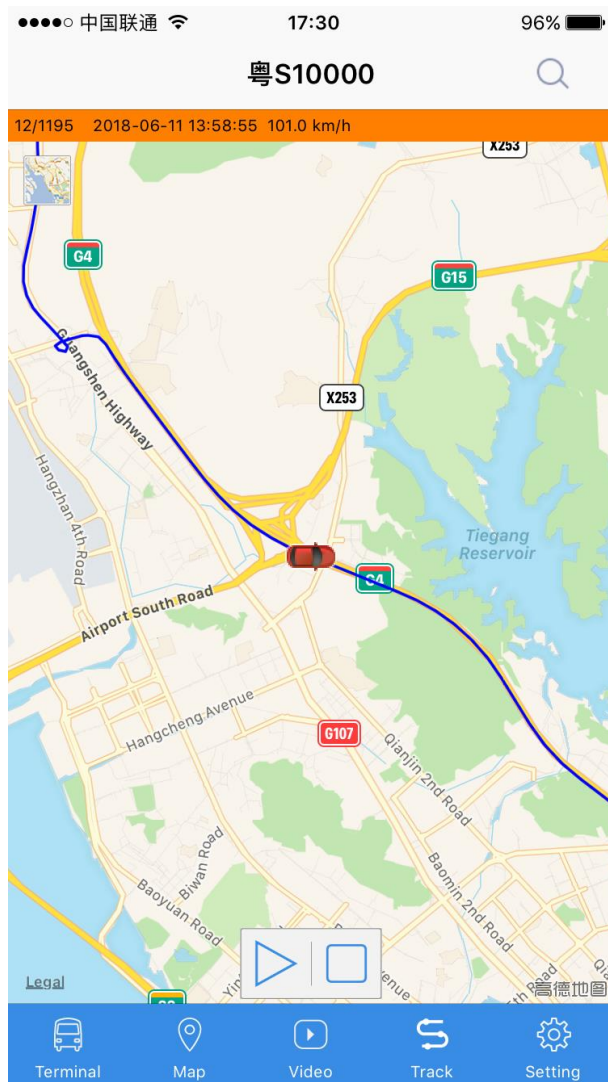

## 6.2.7 System setting

