HIKVISION

TURBO HD PIR Series Turret Camera with EXT Alarm out

User Manual

User Manual

Thank you for purchasing our product. If there are any questions, or requests, do not hesitate to contact the dealer.

This manual applies to the models below:

Туре	Model
	DS-2CE71D0T-PIRLO
	DS-2CE71D8T-PIRLO
Type I Camera	DS-2CE71H0T-PIRLO
	DS-2CE71D0T-PIRLPO
	DS-2CE71H0T-PIRLPO

This manual may contain technical incorrect places or printing errors, and the content is subject to change without notice. The updates will be added to the new version of this manual. We will readily improve or update the products or procedures described in the manual.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.
 This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European

standards listed under the Low Voltage Directive 2014/35/EU, the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new

equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info. 2006/66/EC (battery directive): This product contains



unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may

include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information, see: www.recyclethis.info.

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into "Warnings" and "Cautions".

Warnings: Serious injury or death may occur if any of the warnings are neglected.

Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

A	⚠
Warnings Follow	Cautions Follow these
these safeguards to	precautions to prevent
prevent serious injury	potential injury or
or death.	material damage.



Warnings

- In the use of the device, you must be in strict compliance with the electrical safety regulations of the nation and region.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 12 VDC according to the IEC60950-1 standard. Refer to technical credifications for detailed information.
- technical specifications for detailed information.
 Do not connect multiple devices to one power adapter to avoid over-heating or a fire hazard caused by overload.
- Make sure that the plug is firmly connected to the
- power socket.
 Make sure that the device is firmly fixed if wall mounting or ceiling mounting is adopted.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cord, and then contact the service center.
- Never attempt to disassemble the camera by unprofessional personal.



Cautions

- Do not drop the camera or subject it to physical shock.
- · Do not touch senor modules with fingers.
- Do not place the camera in extremely hot, cold (the operating temperature shall be -40°C to 60°C), dusty or damp locations, and do not expose it to high electromagnetic radiation.
- If cleaning is necessary, use clean cloth with a bit of ethanol and wipe it gently.
- Do not aim the camera at the sun or extra bright places.
- The sensor may be burned out by a laser beam, so when any laser equipment is in using, make sure that the surface of sensor will not be exposed to the laser beam.
- Do not expose the device to high electromagnetic radiation or extremely hot, cold, dusty or damp environment.
- To avoid heat accumulation, good ventilation is required for the operating environment.

- Keep the camera away from liquid while in use for non-water-proof device.
- While in delivery, the camera shall be packed in its original packing, or packing of the same texture.

Mark Description

Table 0-1 Mark Description

Mark	Description
===	DC Voltage

1 Introduction

1.1 Product Features

The main features are as follows:

- High performance CMOS sensor
- IR cut filter with auto switch
- OSD menu with configurable parameters
 Auto white balance
- SMART IR
- Strobe light alarm
- Alarm out
- PIR detection
- 3-axis adjustment

1.2 Overview

 


Figure 1-1 Overview of Type I Camera

2 Installation

Before you start:

- Make sure that the device in the package is in good condition and all the assembly parts are included.
- Make sure that all the related equipment is power-off during the installation.
- Check the specification of the products for the installation environment.
- Check whether the power supply is matched with your required output to avoid damage.
- Make sure the wall is strong enough to withstand three times the weight of the camera, and the mount.
- If the wall is cement, insert expansion screws before installing the camera. If the wall is wooden, use self-tapping screw to secure the camera.
- If the product does not function properly, contact your dealer or the nearest service center. Do NOT disassemble the camera for repair or maintenance by yourself.

2.1 Ceiling/Wall Mounting without Junction Box Steps:

- 1. Disassemble the camera.
- Rotate the camera to align the notch to one of the line showed on the camera.

Coin

Pry the mounting base by using tools, e.g. a coin.



Figure 2-1 Dissemble the Camera

- Paste the drill template (supplied) to the place where you want to install the camera.
- Drill the screw holes, and the cable hole (optional) in the ceiling/wall according to the drill template.



Figure 2-2 Drill Template

Note:

Drill the cable hole, when adopting the ceiling outlet to route the cable.

4. Attach the mounting base to the ceiling/wall, and secure them with supplied screws.

 


Figure 2-3 Attach the Mounting Base to the Ceiling **Note**:

- The supplied screw package contains self-tapping screws, and expansion bolts.
- For cement wall/ceiling, expansion bolts are required to fix the camera. For wooden wall/ceiling, self-tapping screws are required.
- Route the cables through the cable hole, or the side opening.
- Install the camera back to the mounting base, and tighten the screws to secure it on the mounting base.

 


Figure 2-4 Install the Camera back to the Mounting Base

- Connect the corresponding cables, such as power cord, and video cable.
- Power on the camera to check whether the image on the monitor is gotten from the optimum angle. If not, adjust the camera according to the figure below to get an optimum angle.

 


Figure 2-5 3-axis Adjustment

- 1). Adjust the pan position [0° to 360°].
- 2). Adjust the tilt position [0° to 75°].
- 3). Adjust the rotation position [0° to 360°].

2.2 Mounting with Inclined Ceiling Mount Before you start:

You need to purchase an inclined ceiling mount separately.

Steps:

- Paste the drill template (supplied) to the place where you want to install the camera.
- Drill screw holes, and the cable hole on the ceiling/wall according to the supplied drill template.

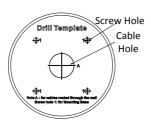


Figure 2-6 The Drill Template

- Disassemble the inclined ceiling mount by the screw driver.
- Install the turret camera's mounting base on the inclined ceiling mount's cover with three PM4 screws.



Figure 2-7 Install Turret Camera's Mounting Base 5. Install the inclined ceiling mount's body to the ceiling/wall with four PA4 × 25 screws.

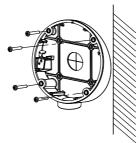


Figure 2-8 Install the Inclined Ceiling Mount's Body
6. Combine the inclined ceiling mount's cover with its body with supplied screws.

 Repeat steps 5 to 8 of the 2.1 Ceiling/Wall Mounting without Junction Box to complete the installation.

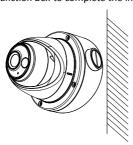


Figure 2-9 Install the Camera to the Inclined Ceiling Mount

2.3 Ceiling/Wall Mounting with Junction Box

Before you start:

You need to purchase a junction box separately. **Steps:**

- Paste the drill template on the ceiling/wall.
- Drill screw holes and the cable hole (optional) in the ceiling/wall according to the holes of the drill template.



Figure 2-10 Drill Template of the Junction Box Note:

brill the cable hole, when adopting the ceiling outlet to route the cable.

- Take apart the junction box, and align the screw holes of the turret camera's mounting base with those on junction box's cover.
- Install the mounting base on junction box's cover by supplied screws.

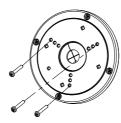


Figure 2-11 Install the Turret Camera's Mounting Base 5. Secure the junction box's body to the ceiling/wall with supplied screws.

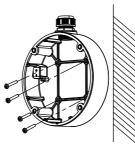


Figure 2-12 Secure the Junction Box' Camera Body to Ceiling/Wall

- Combine the junction box's cover with the its body.
- Repeat steps 5 to 8 of 2.1 Ceiling/Wall Mounting without Junction Box. to install the camera to the junction box.



Figure 2-13 Install the Camera to the Junction Box

2.4 Wall Mounting

Before you start:

You need to purchase a wall mount separately. **Steps:**

1. Drill four screw holes in the wall according to the

- holes of the mount.
 Install the mount to the wall by aligning the four screw holes of the bracket with expansion screws on the wall.
- Secure the mount with four hex nuts and washers.



Figure 2-14 Install the Bracket

 Install the mounting base of the turret camera to the wall mount, and secure them with supplied screws.

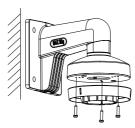


Figure 2-15 Install the Mounting Base to the Bracket

- 5. Route the cables through the mount.
- Repeat steps 6 to 8 of 2.1 Ceiling/Wall Mounting without Junction Box to complete the installation.

3 Menu Description

Please follow the steps below to call the menu.

NOTE:

Menu description part is only for your reference. It might have some differences due to the specific model that you have.

Steps:

 Connect the camera with the TVI DVR, and the monitor, shown as the figure 3-1.



Figure 3-1 Connection

- Power on the analog camera, TVI DVR, and the monitor to view the image on the monitor.
- 3. Click PTZ Control to enter the PTZ Control interface.
 - Call the camera menu by clicking button, or call the preset No. 95.

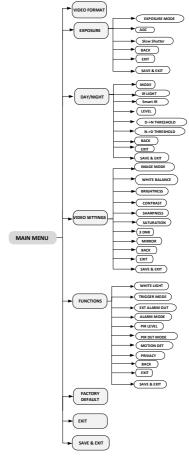


Figure 3-2 Main Menu Overview

Click the direction arrow to control the camera.

- Click up/down direction button to select the item.
- 2). Click Iris + to confirm the selection.
- Click left/right direction button to adjust the value of the selected item.

3.1 VIDEO FORMAT

You can select the video format as 2MP@25fps , or 2MP@30fps.

3.2 EXPOSURE

EXPOSURE MODE

You can set the **EXPOSURE MODE** as **GLOBAL**, **BLC**, **HLC**, or **WDR**.

GLOBAL

GLOBAL refers to the normal exposure mode which adjusts lighting distribution, variations, and non-standard processing.

BLC (Backlight Compensation)

BLC (Backlight Compensation) compensates light to the object in the front to make it clear, but this may cause the over-exposure of the background where the light is strong.

HLC (Highlight Compensation)

HLC stands for highlight compensation. The camera detects the strong spots (the over-exposure portion of image), then reduce the brightness of the strong spots to improve the overall images.

WDR (Wide Dynamic Range)

The wide dynamic range (WDR) function helps the camera provide clear images even under back light circumstances. When there are both very bright and very dark areas simultaneously in the field of view, WDR balances the brightness level of the whole image and provide clear images with details.

AGC (Auto Gain Control)

It optimizes the clarity of the image in poor light conditions. The **AGC** level can be set as **HIGH**, **MEDIUM**, or **LOW**.

Note:

The noise will be amplified when the AGC is on.

SLOW SHUTTER

SLOW SHUTTER increases the exposure time on a single frame, which makes a camera more sensitive to the light so it can produce images even in low lux conditions.

You can set the **SLOW SHUTTER** function as OFF, x2, x4, x6, x8, x10, x12, x14, or x16 according to the different light conditions.

3.3 DAY/NIGHT

COLOR, B&W (Black White), and **AUTO** are selectable for DAY and NIGHT switches.

Note:

Under the **LIGHTING** mode, the image is colored all the time, and there's no **DAY/NIGHT** settings in the menu.

COLOR

The image is colored in day mode all the time.

B/W

The image is black and white all the time, and it is better to turn the IR LIGHT on in poor light conditions.

IR LIGHT

You can turn on/off the IR LIGHT to meet the requirements of different circumstances.

SMART IR

The **Smart IR** function is used to adjust the light to its most suitable intensity, and prevent the image from over exposure. You can choose **MODE 1** or **MODE 2**. **MODE 1** could reach the most ideal effects of the low illumination, but it might cause a delay by contrast with the actual scenario. **MODE 2** represents the normal mode. The **SMART IR** value can be adjusted from 0 to 3. The greater the value is the more obvious effects are.

AUTO

You can turn on/off the IR LIGHT, and set the value of SMART IR in this menu.

DAYNIG	SHT
MODE IR LIGHT SMART IR LEVEL D-N THRESHOLD N-D THRESHOLD BACK EXIT SAVE&EXIT	AUTO > 4 ON > 4 MODE 2 > 4 2 > 4 2 > 4 7 > 4 H

Figure 3-3 DAY NIGHT

IR LIGHT

You can turn on/off the infrared to meet the requirements of different circumstances.

SMART IR

The **Smart IR** function is used to adjust the light to its most suitable intensity, and prevent the image from over exposure. You can choose **MODE 1** or **MODE 2**. **MODE 1** could reach the most ideal effects of the low illumination, but it might cause a delay by contrast with the actual scenario. **MODE 2** represents the normal mode. The **SMART IR** value can be adjusted from 0 to 3. The greater the value is the more obvious effects are.

D-N THRESHOLD (Day to Night Threshold)

Day to Night Threshold is used to control the sensitivity of switching the day mode to the night mode. You can set the value from 1 to 9. The larger the value is, the more sensitive the camera is.

N-D THRESHOLD (Night to Day Threshold)

Night to Day Threshold is used to control the sensitivity of switching the night mode to the day mode. You can set the value from 1 to 9. The larger the value is, the more sensitive the camera is.

3.4 VIDEO SETTINGS

Move the cursor to **VIDEO SETTINGS** and click Iris+ to enter the submenu. **WHITE BALANCE**, **BRIGHTNESS**, **CONTRAST**, **SHARPNESS**, **SATURATION**, **3 DNR**, and **MIRROR** are adjustable.

VIDEO SE	TTINGS
IMAGE MODE WHITE BALANCE BRIGHTNESS CONTRAST SHARPNESS SATURATION 3DNR MIRROR BACK EXIT SAVE & EXIT	(SID) (5) (5) (5) (5) (5) (0) (0) (0)

Figure 3-4 VIDEO SETTING

IMAGE MODE

IMAGE MODE is used to adjust the image saturation, and you can set it as STD (Standard), or HIGH-SAT (High Saturation).

WHITE BALANCE

White balance, the white rendition function of the camera, is to adjust the color temperature according to the environment. It can remove unrealistic color casts in the image. You can set WHITE BALANCE mode as AUTO, or MANUAL.

AUTO

Under **AUTO** mode, white balance is being adjusted automatically according to the color temperature of the scene illumination.

MANUAL

You can set the **R-GAIN/B-GAIN** value to adjust the shades of red/blue color of the image.

 


Figure 3-5 MWB MODE

BRIGHTNESS

Brightness refers to the brightness of the image. You can set the brightness value from 1 to 9 to darken or brighten the image. The greater the value is, the brighter the image is.

CONTRAST

This feature enhances the difference in color and light between parts of an image. You can set the **CONTRAST** value from 1 to 9.

SHARPNESS

Sharpness determines the amount of detail an imaging system can reproduce. You can set the **SHARPNESS** value from 1 to 9.

SATURATION

Adjust this feature to change the saturation of the color. The value ranges from 1 to 9.

3 DNR (3D DNR)

3 DNR refers to 3D digital noise reduction. Comparing with the general 2D digital noise reduction, the 3D

digital noise reduction function processes the noise between two frames besides processing the noise in one frame. The noise will be much less and the video will be clearer.

MIRROR

OFF, H, V, and HV are selectable for mirror.

OFF: The mirror function is disabled.

H: The image flips 180° horizontally. V: The image flips 180° vertically.

HV: The image flips 180° both horizontally and vertically.

3.5 FUNCTIONS

3.5.1 WHITE LIGHT

The embedded white light source can be worked as the visible alarm, or the lighting.

In the WHITE LIGHT mode, you can set the mode as ALARM, LIGHTING, or OFF.

Note:

The LIGHTING option might depend on the specific model that you have.

When you select the WHITE LIGHT as ALARM, you can set the parameters in the TRIGGER MODE, the EXT ALARM OUT, and the ALARM MODE to meet your needs.

TRIGGER MODE

DVR

Select the TRIGGER MODE as DVR. In this way, the alarm signal is sent from the DVR, and the camera works as the alarm detector in the process. Follow the steps below to achieve the visual and audible alarm:

You need to purchase and connect a bell in advance.

- Select the ALARM MODE as DVR.
- 2). Select the EXT ALARM OUT as ON.
- Save and exit.

1010110	NS
WHITE LIGHT TRIGGER MODE EXT ALARM OUT ALARM MODE TIME SETTINGS PIR LEVEL PIR DET MODE MOTION DET PRIVACY BACK EXIT	ALARM DVR OFF SOLID 1SS INDOOR

Figure 3-6 TRIGGER MODE

CAMERA

Select the TRIGGER MODE as CAMERA, the embedded PIR module sends the alarm signal to trigger visual alarm, when PIR module detects the alarm source.

ALARM MODE

In the ALARM mode, you can select the ALARM MODE as **SOLID**, or **FLASHING**.

FUNC	TIONS	
WHITE LIGHT	◆ ALARM	٠
TRIGGER MODE	◆ CAMERA	٠
ALARM MODE	◆ SOLID	٠
TIME SETTING	4 15 S	٠
PIR LEVEL	4 3	•
PIR DET MODE	◆ INDOOR	٠
MOTION DET	1 4	٠
PRIVACY	4	•
BACK	4	
FXIT	15	
SAVE & EXIT	15	ï

Figure 3-7 ALARM MODE

SOLID

Select the ALARM MODE as SOLID. In this way, the white light source turns on, when the PIR module receives the alarm signal.

TIME SETTING means you can set the duration of the light that keeps solid when the camera receives one alarm signal.

Note:

The solid mode will be stayed for another set time when second alarm signal is received, and the rest can be done in the same way.

FLASHING

Select the ALARM MODE as FLASHING. In this way, the white light source flashes when the PIR module received the alarm signal.

LIGHTING

Select the LIGHTING mode, the embedded white light source turns on in poor light conditions automatically. You can set the LIGHTING MODE as SOLID or

FLASHING. SOLID

The white light source turns on in the poor light conditions.

 


Figure 3-8 SOLID

FLASHING

When you select the LIGHTING MODE as FLASHING, you can set the TRIGGER MODE as CAMERA, or DVR. The white light source flashes in the poor light

FUNCTIONS

conditions when receiving the alarm signal.

WHITE LIGHT LIGHTING MODE TRIGGER MODE PIR LEVEL PIR DET MODE MOTION DET LIGHTING
FLASHING
CAMERA
3 INDOOR PRIVACY BACK EXIT SAVE & EXIT

Figure 3-9 FLASHING

OFF

Select **OFF** to give up this function.

3.5.2 PIR LEVEL

Adjust the sensitivity of the PIR module, and the higher the value is, the more sensitive the PIR module is.

3.5.3 PIR DET MODE

OUTDOOR and INDOOR are selectable for PIR DET MODE switch.

3.5.4 MOTION DET

You can turn on/off the MOTION DET to meet different circumstances.

3.5.5 PRIVACY

You can turn on/off the **PRIVACY** to meet different circumstances.

3.6 FACTORY DEFAULT

Reset all the settings to the factory default.

3.7 EXIT

Move the cursor to EXIT and click Iris+ to exit the menu.

3.8 SAVE & EXIT

Move the cursor to SAVE & EXIT and click Iris+ to save the settings, and exit the menu.