

Main Menu

>Format	PAL↵
Video Mode	1080P@25↵ CVI
Backlight Mode	Off
Image Adjust	↵
Exposure	↵
White Balance	Auto
Day/Night	Color
Language	English
Advanced	↵
Default	
Exit	

Backlight Mode

>BLC

On

Return

Backlight Mode

>WDR

3

Return

Backlight Mode

>HLC 3

Return

Image Adjust

>Image Mode	Standard
Sharpness	7
Brightness	7
Contrast	7
Saturation	7
Chroma	7
Sharp Suppress	7
Chroma Suppress	7
Gamma	7
2DNR	7
3DNR	7
Return	

Exposure

>Exposure Mode	Auto
Exposure Level	7
Anti-flicker	Outdoor
Return	

Auto Exposure

>Gain Max Limit 12

Gain Min Limit 0

Return

Low Noise

>Gain Max Limit 12

Return

Anti-smear

>Shutter Max

40ms

Return

Manual Exposure

>Shutter	1/25
Gain Max Limit	12
Gain Min Limit	0
Return	

WB Manual

>Blue Gain	50
Red Gain	50
Return	

Advanced

>Camera Name	Off
Mirror	↵
Audio Mode	Built-in Audio↵
Voltage Prompt	On↵
Privacy Mask	Off
D-Zoom	1
Defog	Off
Next Page	↵
Return	

Camera Name

>Name ↵
Location ↵
Return

Camera Name

00000000

—

↑
← OK →
↓

Mirror

>H-Mirror	Off
V-Mirror	Off
Return	

Audio Mode

>Volume

Medium

Return

Voltage Prompt

>Alarm Upload On

Return

Privacy Mask

>Area Select 0
 Display On
 Area Setting Location↓
 Default
 Return

Defog

>Mode

Auto

Level

Medium

Return

Advanced

>System Info ↵
 OSD Auto Save & Exit On
 Page Up ↵
 Return

System Info

Version No.

V1.000.0000001.0.R

>Return

Save

>Yes No Cancel